

5. MAIN Electrical Parts List

Parts Code	Design LOC	Description
3712-001749	ANT1000	CONNECTOR-TERMINAL
3712-001749	ANT1001	CONNECTOR-TERMINAL
3712-001749	ANT1002	CONNECTOR-TERMINAL
3712-001749	ANT1003	CONNECTOR-TERMINAL
GH62-00030A	ANT1004	CONNECTOR-TERMINAL
GH62-00030A	ANT1005	CONNECTOR-TERMINAL
GH62-00030A	ANT1006	CONNECTOR-TERMINAL
3712-001749	ANT1007	CONNECTOR-TERMINAL
3712-001749	ANT1009	CONNECTOR-TERMINAL
3712-001749	ANT1010	CONNECTOR-TERMINAL
3712-001749	ANT1011	CONNECTOR-TERMINAL
3712-001749	ANT1012	CONNECTOR-TERMINAL
3712-001749	ANT1013	CONNECTOR-TERMINAL
3712-001749	ANT1014	CONNECTOR-TERMINAL
3712-001749	ANT1015	CONNECTOR-TERMINAL
GH62-00030A	ANT1017	CONNECTOR-TERMINAL
3712-001694	ANT1018	CONNECTOR-TERMINAL
3712-001749	ANT1019	CONNECTOR-TERMINAL
3712-001749	ANT1020	CONNECTOR-TERMINAL
3712-001749	ANT1021	CONNECTOR-TERMINAL
3712-001749	ANT1022	CONNECTOR-TERMINAL
3712-001749	ANT1023	CONNECTOR-TERMINAL
3712-001749	ANT2000	CONNECTOR-TERMINAL
3712-001749	ANT2001	CONNECTOR-TERMINAL
3712-001749	ANT3000	CONNECTOR-TERMINAL
3712-001694	ANT3001	CONNECTOR-TERMINAL
3712-001694	ANT3002	CONNECTOR-TERMINAL
3712-001694	ANT3003	CONNECTOR-TERMINAL
3712-001694	ANT3004	CONNECTOR-TERMINAL
3712-001694	ANT5000	CONNECTOR-TERMINAL
3712-001634	ANT5001	CONNECTOR-TERMINAL
3712-001694	ANT5002	CONNECTOR-TERMINAL
3712-001634	ANT5003	CONNECTOR-TERMINAL
3712-001621	ANT5004	CONNECTOR-TERMINAL
3712-001621	ANT5005	CONNECTOR-TERMINAL
3712-001621	ANT5006	CONNECTOR-TERMINAL
3712-001694	ANT6000	CONNECTOR-TERMINAL
3712-001666	ANT6001	CONNECTOR-TERMINAL

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001694	ANT6002	CONNECTOR-TERMINAL
3712-001666	ANT6003	CONNECTOR-TERMINAL
3712-001750	ANT6004	CONNECTOR-TERMINAL
3712-001750	ANT6005	CONNECTOR-TERMINAL
2203-005806	C021	C-CER CHIP
2203-005736	C1000	C-CER CHIP
2203-006400	C1001	C-CER CHIP
2203-005736	C1003	C-CER CHIP
2203-005777	C1004	C-CER CHIP
2203-006123	C1006	C-CER CHIP
2203-005736	C1009	C-CER CHIP
2203-005736	C1010	C-CER CHIP
2203-005736	C1021	C-CER CHIP
2203-005736	C1022	C-CER CHIP
2203-005736	C1025	C-CER CHIP
2203-005736	C1034	C-CER CHIP
2203-005736	C1044	C-CER CHIP
2203-005736	C1045	C-CER CHIP
2203-005736	C1046	C-CER CHIP
2203-005736	C1049	C-CER CHIP
2203-005736	C1050	C-CER CHIP
2203-005736	C1051	C-CER CHIP
2203-005789	C1054	C-CER CHIP
2203-009733	C1067	C-CER CHIP
2203-007796	C1071	C-CER CHIP
2203-007393	C1072	C-CER CHIP
2203-005777	C1076	C-CER CHIP
2203-005736	C1077	C-CER CHIP
2203-005789	C1078	C-CER CHIP
2203-005736	C1079	C-CER CHIP
2203-005736	C1080	C-CER CHIP
2203-005736	C1081	C-CER CHIP
2203-005736	C1082	C-CER CHIP
2203-005736	C2000	C-CER CHIP
2203-005777	C2001	C-CER CHIP
2203-005789	C2002	C-CER CHIP
2203-005806	C2003	C-CER CHIP
2203-006562	C2004	C-CER CHIP
2203-007271	C2006	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005806	C2007	C-CER CHIP
2203-005792	C2009	C-CER CHIP
2203-006556	C2010	C-CER CHIP
2203-006423	C2011	C-CER CHIP
2203-007271	C2012	C-CER CHIP
2203-009134	C2013	C-CER CHIP
2203-006556	C2015	C-CER CHIP
2203-006423	C2016	C-CER CHIP
2203-008097	C2017	C-CER CHIP
2203-006556	C2018	C-CER CHIP
2203-008097	C2019	C-CER CHIP
2203-007279	C2020	C-CER CHIP
2203-005789	C2022	C-CER CHIP
2203-005792	C2026	C-CER CHIP
2203-006556	C2028	C-CER CHIP
2703-004763	C2030	Inductor
2203-005792	C2031	C-CER CHIP
2203-005789	C2033	C-CER CHIP
2203-005789	C2034	C-CER CHIP
2203-006318	C2036	C-CER CHIP
2203-005789	C2037	C-CER CHIP
2203-006556	C2038	C-CER CHIP
2203-006556	C2039	C-CER CHIP
2203-005682	C2040	C-CER CHIP
2203-006318	C2043	C-CER CHIP
2203-005792	C2044	C-CER CHIP
2203-005736	C2050	C-CER CHIP
2203-005789	C2051	C-CER CHIP
2203-006410	C2055	C-CER CHIP
2203-005789	C2057	C-CER CHIP
2203-005736	C2067	C-CER CHIP
2203-005789	C2070	C-CER CHIP
2203-005736	C2071	C-CER CHIP
2203-007449	C2075	C-CER CHIP
2203-006979	C2076	C-CER CHIP
2203-009733	C2077	C-CER CHIP
2203-006318	C2078	C-CER CHIP
2203-006979	C2078	C-CER CHIP
2203-005792	C2081	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007391	C2082	C-CER CHIP
2203-006423	C2083	C-CER CHIP
2203-007449	C2084	C-CER CHIP
2203-006979	C2085	C-CER CHIP
2203-006979	C2086	C-CER CHIP
2203-007474	C2087	C-CER CHIP
2203-006979	C2088	C-CER CHIP
2203-007796	C2089	C-CER CHIP
2203-006979	C2090	C-CER CHIP
2203-007474	C2091	C-CER CHIP
2203-006979	C2092	C-CER CHIP
2203-007796	C2093	C-CER CHIP
2203-007474	C2094	C-CER CHIP
2203-006979	C2095	C-CER CHIP
2203-005736	C2097	C-CER CHIP
2203-005777	C2099	C-CER CHIP
2203-005806	C2103	C-CER CHIP
2203-005736	C2105	C-CER CHIP
2203-005736	C2106	C-CER CHIP
2203-005727	C2107	C-CER CHIP
2203-005736	C2108	C-CER CHIP
2203-005777	C2111	C-CER CHIP
2203-005736	C2113	C-CER CHIP
2203-005736	C2114	C-CER CHIP
2203-006400	C2115	C-CER CHIP
2203-005736	C2121	C-CER CHIP
2203-006400	C2122	C-CER CHIP
2203-006668	C2123	C-CER CHIP
2203-005736	C2127	C-CER CHIP
2203-006642	C2128	C-CER CHIP
2203-005736	C2129	C-CER CHIP
2203-006668	C2131	C-CER CHIP
2203-006194	C2132	C-CER CHIP
2203-005792	C2140	C-CER CHIP
2203-005736	C2141	C-CER CHIP
2203-008394	C2142	C-CER CHIP
2203-005789	C2145	C-CER CHIP
2203-005777	C2147	C-CER CHIP
2203-005789	C2148	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005789	C2150	C-CER CHIP
2203-005777	C2151	C-CER CHIP
2203-005736	C2153	C-CER CHIP
2203-005777	C2156	C-CER CHIP
2203-005731	C3000	C-CER CHIP
2203-005789	C3003	C-CER CHIP
2203-006423	C3004	C-CER CHIP
2203-007449	C3005	C-CER CHIP
2203-006562	C3006	C-CER CHIP
2203-006400	C3007	C-CER CHIP
2203-008876	C3008	C-CER CHIP
2203-007317	C3009	C-CER CHIP
2203-006562	C3010	C-CER CHIP
2203-007796	C3011	C-CER CHIP
2203-006305	C3012	C-CER CHIP
2203-006423	C3013	C-CER CHIP
2203-005736	C3014	C-CER CHIP
2203-006423	C3015	C-CER CHIP
2203-006423	C3018	C-CER CHIP
2203-007210	C3019	C-CER CHIP
2203-007391	C3020	C-CER CHIP
2203-007796	C3022	C-CER CHIP
2203-006423	C3024	C-CER CHIP
2203-007210	C3025	C-CER CHIP
2203-007210	C3026	C-CER CHIP
2203-007796	C3027	C-CER CHIP
2203-007317	C3028	C-CER CHIP
2203-009049	C3029	C-CER CHIP
2203-007393	C3030	C-CER CHIP
2203-008242	C3031	C-CER CHIP
2203-007317	C3032	C-CER CHIP
2203-006423	C3033	C-CER CHIP
2203-008386	C3035	C-CER CHIP
2203-006305	C3037	C-CER CHIP
2203-005729	C3038	C-CER CHIP
2203-005727	C3039	C-CER CHIP
2203-006562	C3041	C-CER CHIP
2203-007796	C3042	C-CER CHIP
2203-009733	C3044	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007317	C3045	C-CER CHIP
2203-006707	C3047	C-CER CHIP
2203-005736	C3048	C-CER CHIP
2203-006707	C3049	C-CER CHIP
2203-005789	C3050	C-CER CHIP
2203-006707	C3051	C-CER CHIP
2203-006707	C3052	C-CER CHIP
2203-005682	C3055	C-CER CHIP
2203-006048	C3056	C-CER CHIP
2203-006400	C3057	C-CER CHIP
2203-006423	C3058	C-CER CHIP
2203-006423	C3059	C-CER CHIP
2203-005725	C3060	C-CER CHIP
2203-006872	C3061	C-CER CHIP
2203-006665	C3066	C-CER CHIP
2203-007796	C3067	C-CER CHIP
2203-007796	C3068	C-CER CHIP
2203-007796	C3069	C-CER CHIP
2203-009733	C3070	C-CER CHIP
2203-008860	C3072	C-CER CHIP
2203-007796	C3073	C-CER CHIP
2203-007796	C3075	C-CER CHIP
2203-009049	C3076	C-CER CHIP
2203-009733	C3077	C-CER CHIP
2203-009733	C3078	C-CER CHIP
2203-006562	C3079	C-CER CHIP
2203-007796	C3080	C-CER CHIP
2203-007796	C3083	C-CER CHIP
2203-007796	C3084	C-CER CHIP
2203-006642	C3085	C-CER CHIP
2203-001153	C3086	C-CER CHIP
2203-001239	C3087	C-CER CHIP
2203-009167	C3088	C-CER CHIP
2203-005729	C3089	C-CER CHIP
2203-009210	C3091	C-CER CHIP
2203-005736	C3092	C-CER CHIP
2203-005719	C3093	C-CER CHIP
2203-007796	C3095	C-CER CHIP
2203-007796	C3096	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C3097	C-CER CHIP
2203-006562	C3098	C-CER CHIP
2203-009210	C3099	C-CER CHIP
2203-009167	C3100	C-CER CHIP
2203-007796	C3102	C-CER CHIP
2203-007796	C3103	C-CER CHIP
2203-001239	C3104	C-CER CHIP
2203-001153	C3105	C-CER CHIP
2203-006305	C3106	C-CER CHIP
2203-006305	C3108	C-CER CHIP
2203-005736	C3109	C-CER CHIP
2203-000995	C3112	C-CER CHIP
2203-000995	C3113	C-CER CHIP
2203-005736	C3114	C-CER CHIP
2203-009733	C3118	C-CER CHIP
2203-005736	C3119	C-CER CHIP
2203-005725	C3120	C-CER CHIP
2203-006707	C3123	C-CER CHIP
2203-007449	C4000	C-CER CHIP
2203-007449	C4003	C-CER CHIP
2203-007449	C4004	C-CER CHIP
2203-007796	C4005	C-CER CHIP
2203-007796	C4006	C-CER CHIP
2203-007796	C4007	C-CER CHIP
2203-007796	C4008	C-CER CHIP
2203-007796	C4009	C-CER CHIP
2203-007796	C4010	C-CER CHIP
2203-007796	C4011	C-CER CHIP
2203-006399	C4012	C-CER CHIP
2203-007449	C4013	C-CER CHIP
2203-007449	C4015	C-CER CHIP
2203-007449	C4017	C-CER CHIP
2203-007449	C4019	C-CER CHIP
2203-007317	C4020	C-CER CHIP
2203-006399	C4021	C-CER CHIP
2203-006399	C4022	C-CER CHIP
2203-007449	C4023	C-CER CHIP
2203-007449	C4024	C-CER CHIP
2203-007449	C4026	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007449	C4028	C-CER CHIP
2203-007449	C4029	C-CER CHIP
2203-007317	C4030	C-CER CHIP
2203-007449	C4031	C-CER CHIP
2203-006668	C4032	C-CER CHIP
2203-007449	C4034	C-CER CHIP
2203-007449	C4035	C-CER CHIP
2203-007474	C4036	C-CER CHIP
2203-007449	C4037	C-CER CHIP
2203-007449	C4038	C-CER CHIP
2203-007449	C4039	C-CER CHIP
2203-007449	C4040	C-CER CHIP
2203-007449	C4041	C-CER CHIP
2203-007385	C4042	C-CER CHIP
2203-007449	C4043	C-CER CHIP
2203-007449	C4044	C-CER CHIP
2203-007449	C4045	C-CER CHIP
2203-007449	C4046	C-CER CHIP
2203-007796	C4047	C-CER CHIP
2203-007796	C4048	C-CER CHIP
2203-007796	C4049	C-CER CHIP
2203-007796	C4050	C-CER CHIP
2203-007796	C4051	C-CER CHIP
2203-007449	C4052	C-CER CHIP
2203-007449	C4053	C-CER CHIP
2203-007449	C4054	C-CER CHIP
2203-007474	C4055	C-CER CHIP
2203-007449	C4056	C-CER CHIP
2203-007449	C4057	C-CER CHIP
2203-007449	C4058	C-CER CHIP
2203-007449	C4059	C-CER CHIP
2203-007796	C4060	C-CER CHIP
2203-007796	C4061	C-CER CHIP
2203-006399	C4062	C-CER CHIP
2203-007449	C4063	C-CER CHIP
2203-007796	C4064	C-CER CHIP
2203-006399	C4065	C-CER CHIP
2203-006423	C4068	C-CER CHIP
2203-006423	C4069	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006400	C4070	C-CER CHIP
2203-006399	C4071	C-CER CHIP
2203-007317	C4072	C-CER CHIP
2203-006399	C4073	C-CER CHIP
2203-007317	C4074	C-CER CHIP
2203-006399	C4075	C-CER CHIP
2203-007449	C4076	C-CER CHIP
2203-006399	C4077	C-CER CHIP
2203-006400	C4078	C-CER CHIP
2203-007796	C5000	C-CER CHIP
2203-007449	C5001	C-CER CHIP
2203-007449	C5002	C-CER CHIP
2203-007796	C5003	C-CER CHIP
2203-007796	C5004	C-CER CHIP
2203-007317	C5005	C-CER CHIP
2203-008876	C5006	C-CER CHIP
2203-006872	C5007	C-CER CHIP
2203-007796	C5008	C-CER CHIP
2203-007796	C5009	C-CER CHIP
2203-007796	C5010	C-CER CHIP
2203-007796	C5011	C-CER CHIP
2203-007796	C5012	C-CER CHIP
2203-007796	C5013	C-CER CHIP
2203-007796	C5014	C-CER CHIP
2203-007449	C5015	C-CER CHIP
2203-007796	C5016	C-CER CHIP
2203-007317	C5017	C-CER CHIP
2203-007317	C5018	C-CER CHIP
2203-007317	C5019	C-CER CHIP
2203-007449	C5020	C-CER CHIP
2203-007796	C5021	C-CER CHIP
2203-007796	C5022	C-CER CHIP
2203-007449	C5023	C-CER CHIP
2203-007449	C5024	C-CER CHIP
2203-007449	C5025	C-CER CHIP
2203-007796	C5026	C-CER CHIP
2203-007449	C5027	C-CER CHIP
2203-007796	C5028	C-CER CHIP
2203-007796	C5029	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C5030	C-CER CHIP
2203-007449	C5031	C-CER CHIP
2203-007449	C5032	C-CER CHIP
2203-008876	C5033	C-CER CHIP
2203-007796	C5034	C-CER CHIP
2203-009732	C5035	C-CER CHIP
2203-007317	C5036	C-CER CHIP
2203-006824	C5039	C-CER CHIP
2203-008572	C5040	C-CER CHIP
2203-008654	C5041	C-CER CHIP
2203-008572	C5042	C-CER CHIP
2203-007317	C5043	C-CER CHIP
2203-007210	C5044	C-CER CHIP
2203-006824	C5045	C-CER CHIP
2203-006824	C5046	C-CER CHIP
2203-006824	C5047	C-CER CHIP
2203-006824	C5048	C-CER CHIP
2203-006824	C5049	C-CER CHIP
2203-006423	C5050	C-CER CHIP
2203-007210	C5051	C-CER CHIP
2203-007317	C5052	C-CER CHIP
2203-006839	C5055	C-CER CHIP
2203-007393	C5056	C-CER CHIP
2203-006839	C5057	C-CER CHIP
2203-007796	C5059	C-CER CHIP
2203-009049	C5060	C-CER CHIP
2203-007393	C5061	C-CER CHIP
2203-007796	C5062	C-CER CHIP
2203-009733	C5063	C-CER CHIP
2203-007240	C5064	C-CER CHIP
2203-007240	C5065	C-CER CHIP
2203-007796	C5066	C-CER CHIP
2203-007393	C5067	C-CER CHIP
2203-006562	C5068	C-CER CHIP
2203-007393	C5069	C-CER CHIP
2203-007393	C5070	C-CER CHIP
2203-007240	C5071	C-CER CHIP
2203-007240	C5072	C-CER CHIP
2203-007240	C5073	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006423	C5074	C-CER CHIP
2203-009733	C5075	C-CER CHIP
2203-007271	C5076	C-CER CHIP
2203-007796	C5078	C-CER CHIP
2203-007796	C5079	C-CER CHIP
2203-007796	C5080	C-CER CHIP
2203-007796	C5084	C-CER CHIP
2203-007796	C5085	C-CER CHIP
2203-007271	C5086	C-CER CHIP
2203-005682	C5087	C-CER CHIP
2203-005682	C5088	C-CER CHIP
2203-006562	C5089	C-CER CHIP
2203-006562	C5090	C-CER CHIP
2203-006668	C5091	C-CER CHIP
2203-006668	C5092	C-CER CHIP
2203-007271	C5093	C-CER CHIP
2203-006423	C5094	C-CER CHIP
2203-006423	C5097	C-CER CHIP
2203-006194	C5098	C-CER CHIP
2203-005682	C5099	C-CER CHIP
2203-006423	C5100	C-CER CHIP
2203-000995	C5101	C-CER CHIP
2203-005732	C5102	C-CER CHIP
2203-007271	C5104	C-CER CHIP
2203-007271	C5105	C-CER CHIP
2203-008654	C5106	C-CER CHIP
2203-001153	C5107	C-CER CHIP
2203-006562	C5108	C-CER CHIP
2203-008860	C5109	C-CER CHIP
2203-008860	C5110	C-CER CHIP
2203-006562	C5111	C-CER CHIP
2203-007317	C5112	C-CER CHIP
2203-006423	C5113	C-CER CHIP
2203-005792	C5114	C-CER CHIP
2203-006318	C5115	C-CER CHIP
2203-007271	C5116	C-CER CHIP
2203-005682	C5117	C-CER CHIP
2203-005727	C5118	C-CER CHIP
2203-008876	C5119	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005682	C5120	C-CER CHIP
2203-006562	C5121	C-CER CHIP
2203-006194	C5123	C-CER CHIP
2203-005682	C5124	C-CER CHIP
2203-006423	C5125	C-CER CHIP
2203-005682	C5126	C-CER CHIP
2203-005682	C5127	C-CER CHIP
2203-006423	C5128	C-CER CHIP
2203-009859	C5129	C-CER CHIP
2203-005682	C5131	C-CER CHIP
2203-006611	C5132	C-CER CHIP
2203-005732	C5133	C-CER CHIP
2203-000386	C6000	C-CER CHIP
2203-008097	C6001	C-CER CHIP
2203-000386	C6002	C-CER CHIP
2203-008097	C6003	C-CER CHIP
2203-009618	C6004	C-CER CHIP
2203-005729	C6005	C-CER CHIP
2203-006194	C6006	C-CER CHIP
2203-006556	C6007	C-CER CHIP
2203-005732	C6008	C-CER CHIP
2203-006194	C6009	C-CER CHIP
2203-006979	C6010	C-CER CHIP
2203-006556	C6011	C-CER CHIP
2203-007796	C6013	C-CER CHIP
2203-009049	C6014	C-CER CHIP
2203-007796	C6017	C-CER CHIP
2203-007796	C6018	C-CER CHIP
2203-006979	C6019	C-CER CHIP
2203-005734	C6020	C-CER CHIP
2203-005734	C6021	C-CER CHIP
2203-005731	C6022	C-CER CHIP
2203-005731	C6023	C-CER CHIP
2203-006121	C6024	C-CER CHIP
2203-006668	C6025	C-CER CHIP
2203-009618	C6035	C-CER CHIP
2203-006423	C6075	C-CER CHIP
2203-006423	C6077	C-CER CHIP
2203-006400	C6078	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005729	C6079	C-CER CHIP
2203-005732	C6080	C-CER CHIP
2203-008097	C6081	C-CER CHIP
2203-005732	C6082	C-CER CHIP
2203-006562	C7000	C-CER CHIP
2203-007796	C7001	C-CER CHIP
2203-007796	C7002	C-CER CHIP
2203-009733	C7004	C-CER CHIP
2203-005729	C7005	C-CER CHIP
2203-007796	C7006	C-CER CHIP
2203-005725	C7007	C-CER CHIP
2203-009733	C7008	C-CER CHIP
2203-007317	C7009	C-CER CHIP
2203-007317	C7010	C-CER CHIP
2203-005682	C7011	C-CER CHIP
2203-007796	C7013	C-CER CHIP
2203-007317	C7014	C-CER CHIP
2203-005682	C7015	C-CER CHIP
2203-007796	C7016	C-CER CHIP
2203-007796	C7017	C-CER CHIP
2203-007449	C7018	C-CER CHIP
2203-007796	C7019	C-CER CHIP
2203-006562	C7020	C-CER CHIP
2203-006562	C7021	C-CER CHIP
2203-006400	C7023	C-CER CHIP
2203-005736	C7024	C-CER CHIP
2203-005736	C7026	C-CER CHIP
2203-007269	C7027	C-CER CHIP
2203-009049	C7028	C-CER CHIP
2203-009859	C7030	C-CER CHIP
2203-009859	C7031	C-CER CHIP
2203-005736	C7034	C-CER CHIP
2203-007269	C7035	C-CER CHIP
2203-007269	C7036	C-CER CHIP
2203-005736	C7037	C-CER CHIP
2203-007393	C7038	C-CER CHIP
2203-007796	C7039	C-CER CHIP
2203-007796	C7040	C-CER CHIP
2203-007796	C7041	C-CER CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006562	C7042	C-CER CHIP
2203-006562	C7043	C-CER CHIP
2203-005729	C7050	C-CER CHIP
2203-005729	C7051	C-CER CHIP
2203-005729	C7052	C-CER CHIP
2203-005729	C7053	C-CER CHIP
2203-006400	C7056	C-CER CHIP
2203-005682	C7057	C-CER CHIP
3709-001880	CN5000	CONNECTOR-CARD EDGE
3709-001891	CN5001	CONNECTOR-CARD EDGE
3722-004081	CN6000	JACK-EAR PHONE
0404-001972	D5000	DIODE-SCHOTTKY
0404-001972	D5001	DIODE-SCHOTTKY
4709-002187	F1000	COUPLER-DIRECTION
4709-002464	F1001	FREQ-DISTRIBUTER
4709-002193	F1002	COUPLER-DIRECTION
2910-000390	F2001	DUPLEXER-SAW
2904-002143	F2002	FILTER-SAW
2904-002367	F2003	FILTER-SAW
4709-002484	F2004	FREQ-DISTRIBUTER
4709-002416	F2005	FREQ-DISTRIBUTER
2904-002339	F2006	FILTER-SAW
2904-002257	F2008	FILTER-SAW
4709-002351	F3001	FREQ-DISTRIBUTER
2904-002314	F3002	DUPLEXER-SAW
2904-002356	F3003	FILTER SAW GPS
2904-002356	F3004	FILTER SAW GPS
2901-001674	F7009	FILTER-EMI/ESD
2901-001673	F7010	FILTER-EMI/ESD
2901-001674	F7011	FILTER-EMI/ESD
3711-009058	HDC3000	HEADER-BOARD TO BOARD
3711-008847	HDC5000	HEADER-BOARD TO BOARD
3711-007295	HDC7000	HEADER-BOARD TO BOARD
3711-007107	HDC7001	HEADER-BOARD TO BOARD
3711-008182	HDC7002	HEADER-BOARD TO BOARD
3722-003954	IFC5000	JACK-MICRO USB
3301-002237	L1000	BEADS
2703-004763	L1001	Inductor
2703-004763	L1002	Inductor

5. MAIN Electrical Parts List

2703-002958	L1005	INDUCTOR
2703-002960	L1007	INDUCTOR
2703-002858	L1008	INDUCTOR
2703-004032	L1011	INDUCTOR
2703-004018	L1012	INDUCTOR
2703-004013	L1013	INDUCTOR
2703-004363	L1018	INDUCTOR
2703-004366	L1019	INDUCTOR
2703-004286	L1020	INDUCTOR
2703-004367	L1024	INDUCTOR
2703-004012	L1026	INDUCTOR
2703-002901	L1027	INDUCTOR
2203-005736	L1028	C-CER CHIP
2703-004034	L1029	INDUCTOR
2703-004032	L1030	INDUCTOR
2703-002960	L1032	INDUCTOR
2703-002953	L1035	INDUCTOR
2703-004032	L1036	INDUCTOR
2703-004018	L1037	INDUCTOR
2703-002858	L1039	INDUCTOR
2703-002960	L1040	INDUCTOR
2703-004037	L1043	INDUCTOR
2703-003293	L1046	INDUCTOR
3301-002122	L1048	BEADS
3301-002122	L1049	BEADS
2703-005066	L1051	INDUCTOR
2703-005366	L1054	INDUCTOR
2703-003293	L1055	INDUCTOR
2703-004853	L1056	INDUCTOR
2703-002960	L1057	INDUCTOR
2703-004032	L1058	INDUCTOR
2703-004013	L1059	INDUCTOR
2703-004032	L1060	INDUCTOR
2703-004037	L1064	INDUCTOR
2703-002858	L1065	INDUCTOR
2703-004034	L1068	INDUCTOR
2703-004038	L1069	INDUCTOR
2703-004764	L1070	INDUCTOR
2703-002858	L1071	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004037	L2000	INDUCTOR
2703-004037	L2001	INDUCTOR
2703-002858	L2002	INDUCTOR
2703-004328	L2006	INDUCTOR
2703-004366	L2007	INDUCTOR
2703-004012	L2009	INDUCTOR
2703-004033	L2012	INDUCTOR
2703-002858	L2016	INDUCTOR
2703-004035	L2017	INDUCTOR
2703-005058	L2020	INDUCTOR
2703-004763	L2021	INDUCTOR
2703-005366	L2022	INDUCTOR
2703-004286	L2023	INDUCTOR
2703-004035	L2024	INDUCTOR
2703-002903	L2026	INDUCTOR
2703-004013	L2029	INDUCTOR
2703-004035	L2031	INDUCTOR
2703-004366	L2034	INDUCTOR
2703-004035	L2036	INDUCTOR
3301-002312	L2037	BEADS
3301-002238	L2039	BEADS
3301-002312	L2040	BEADS
3301-002238	L2042	BEADS
2703-002858	L2044	INDUCTOR
2703-004018	L2045	INDUCTOR
2703-005085	L2047	INDUCTOR
2703-005085	L2048	INDUCTOR
2703-004018	L2049	INDUCTOR
2703-004328	L2050	INDUCTOR
2703-004000	L2051	INDUCTOR
2703-004328	L2054	INDUCTOR
2703-004038	L2055	INDUCTOR
2703-004037	L2056	INDUCTOR
2703-004012	L2057	INDUCTOR
2703-004036	L2058	INDUCTOR
3301-002240	L2059	BEADS
3301-002312	L2060	BEADS
3301-002240	L2061	BEADS
3301-002312	L2062	BEADS

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004763	L2067	INDUCTOR
2703-002951	L2068	INDUCTOR
2703-004012	L2069	INDUCTOR
2703-004032	L2071	INDUCTOR
2703-004287	L2072	INDUCTOR
2703-004286	L2073	INDUCTOR
2703-004038	L2074	INDUCTOR
2703-004037	L2077	INDUCTOR
2703-004032	L2078	INDUCTOR
2703-004012	L2079	INDUCTOR
2703-004976	L2080	INDUCTOR
2703-004037	L2082	INDUCTOR
3301-002237	L3000	BEADS
2703-004034	L3002	INDUCTOR
3301-002244	L3003	BEADS
2703-005200	L3006	INDUCTOR
2703-004037	L3007	INDUCTOR
3301-002078	L3008	BEADS
2703-004032	L3009	INDUCTOR
3301-002078	L3010	BEADS
2703-004369	L3013	INDUCTOR
2703-004034	L3015	INDUCTOR
2703-004287	L3016	INDUCTOR
3301-002237	L3017	BEADS
2703-002907	L3020	INDUCTOR
2703-005505	L3021	INDUCTOR
2703-002959	L3022	INDUCTOR
2703-005555	L3023	INDUCTOR
2703-005555	L3025	INDUCTOR
3301-001438	L3027	INDUCTOR
2703-002907	L3029	INDUCTOR
2703-004289	L3030	INDUCTOR
2703-002960	L3032	INDUCTOR
2703-002649	L3033	INDUCTOR
2703-004013	L3034	INDUCTOR
2703-002959	L3035	INDUCTOR
2703-004012	L3036	INDUCTOR
2703-004030	L3038	INDUCTOR
3301-002254	L5000	BEADS

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-005109	L5002	INDUCTOR
2703-004901	L5003	INDUCTOR
2703-004901	L5004	INDUCTOR
2703-004901	L5005	INDUCTOR
2703-004901	L5006	INDUCTOR
2703-004901	L5007	INDUCTOR
2703-002900	L5008	INDUCTOR
2703-002953	L5009	INDUCTOR
2703-002309	L5023	INDUCTOR
2703-003479	L6000	INDUCTOR
3301-002122	L6001	BEADS
3301-002122	L6002	BEADS
2703-003479	L6003	INDUCTOR
3301-002335	L6004	BEADS
3301-001885	L6006	BEADS
3301-002078	L6008	BEADS
3301-002078	L6009	BEADS
3301-002078	L6010	BEADS
3301-002078	L6011	BEADS
2703-005233	L6012	INDUCTOR
2703-002309	L6013	INDUCTOR
2703-005233	L6014	INDUCTOR
2703-003878	L6015	INDUCTOR
3301-001885	L6016	BEADS
2703-005505	L6019	INDUCTOR
3301-002078	L6020	BEADS
3301-002078	L6021	BEADS
3301-001729	L6022	BEADS
3301-001885	L6023	BEADS
3301-002223	L7000	BEADS
3301-002223	L7001	BEADS
3301-002312	L7003	BEADS
2703-005118	L7005	INDUCTOR
2703-005117	L7006	INDUCTOR
3301-002312	L7007	BEADS
3301-002312	L7008	BEADS
2703-005117	L7009	INDUCTOR
3301-002223	L7015	BEADS
0601-003611	LED5000	LED

5. MAIN Electrical Parts List

0601-003547	LED5001	LED
3003-001233	MIC6000	MIC MEMS
2801-005487	OSC3000	CRYSTAL
2805-001117	OSC3001	OSCILLATOR-TCXO
2801-005264	OSC5000	CRYSTAL
1201-004100	PAM2000	IC-POWER AMP
0505-002088	Q5001	FET-SILICON
0505-002341	Q5002	FET-SILICON
2007-008785	R1000	RESISTOR
2007-008056	R1001	RESISTOR
2007-008056	R1002	RESISTOR
2007-009805	R1004	RESISTOR
2007-007100	R1005	RESISTOR
2007-007405	R1006	RESISTOR
2007-009805	R2000	RESISTOR
2007-008043	R2008	RESISTOR
2007-009157	R2009	RESISTOR
2007-009352	R3000	RESISTOR
2007-009111	R3008	RESISTOR
2007-007741	R3009	RESISTOR
2007-010202	R3012	RESISTOR
2007-007741	R3014	RESISTOR
2007-009158	R3016	RESISTOR
2007-007316	R3017	RESISTOR
2007-007741	R4000	RESISTOR
2007-009157	R4001	RESISTOR
2007-007741	R4002	RESISTOR
2007-007741	R4003	RESISTOR
2007-009920	R4008	RESISTOR
2007-009920	R4009	RESISTOR
2007-008800	R4010	RESISTOR
2007-008800	R4011	RESISTOR
2007-009920	R4012	RESISTOR
2007-011043	R4013	RESISTOR
2007-009408	R4014	RESISTOR
2007-009408	R4015	RESISTOR
2007-009408	R4016	RESISTOR
2007-009408	R4017	RESISTOR
2007-009408	R4018	RESISTOR

5. MAIN Electrical Parts List

2007-009408	R4019	RESISTOR
2007-009408	R4020	RESISTOR
2007-009408	R4021	RESISTOR
2007-009408	R4022	RESISTOR
2007-009408	R4023	RESISTOR
2007-009171	R4024	RESISTOR
2007-009157	R4027	RESISTOR
2007-009408	R4028	RESISTOR
2007-009408	R4029	RESISTOR
2007-009408	R4030	RESISTOR
2007-009408	R4031	RESISTOR
2007-009408	R4032	RESISTOR
2007-009157	R4033	RESISTOR
2007-009157	R4034	RESISTOR
2007-009408	R4035	RESISTOR
2007-007741	R4038	RESISTOR
2007-008800	R4039	RESISTOR
2007-008800	R4040	RESISTOR
2007-009408	R4041	RESISTOR
2007-009408	R4042	RESISTOR
2007-009157	R4044	RESISTOR
2007-009157	R4046	RESISTOR
2007-007741	R4048	RESISTOR
2007-009408	R4049	RESISTOR
2007-009408	R4050	RESISTOR
2007-007741	R5000	RESISTOR
2007-009171	R5001	RESISTOR
2007-009111	R5002	RESISTOR
2007-009157	R5003	RESISTOR
2007-009158	R5004	RESISTOR
2007-012038	R5005	RESISTOR
2007-009212	R5006	RESISTOR
2007-009212	R5008	RESISTOR
2007-010685	R5014	RESISTOR
2007-012068	R5015	RESISTOR
2007-009315	R5016	RESISTOR
2007-009315	R5017	RESISTOR
2007-003015	R5018	RESISTOR
2007-003015	R5019	RESISTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-009315	R5020	RESISTOR
2007-007798	R5021	RESISTOR
2007-009315	R5022	RESISTOR
2007-007942	R5023	RESISTOR
2007-007946	R5024	RESISTOR
2007-009801	R5025	RESISTOR
2007-009157	R5026	RESISTOR
2007-009157	R5027	RESISTOR
2007-009171	R5029	RESISTOR
2007-009157	R5030	RESISTOR
2007-008210	R5031	RESISTOR
2007-011648	R5032	RESISTOR
2007-010202	R5033	RESISTOR
2007-010202	R5034	RESISTOR
2007-007741	R5035	RESISTOR
2007-007741	R5036	RESISTOR
2007-010685	R5037	RESISTOR
2007-010685	R5038	RESISTOR
2007-009315	R5040	RESISTOR
2007-009315	R5041	RESISTOR
2007-007741	R5042	RESISTOR
2007-009315	R5043	RESISTOR
2007-009315	R5044	RESISTOR
2007-009315	R5045	RESISTOR
2007-009212	R5046	RESISTOR
2007-010029	R5076	RESISTOR
2007-007798	R5078	RESISTOR
2007-009201	R6004	RESISTOR
2007-009201	R6006	RESISTOR
2007-009212	R6007	RESISTOR
2007-009408	R6008	RESISTOR
2007-009969	R6010	RESISTOR
2007-007405	R6011	RESISTOR
2007-011377	R6015	RESISTOR
2007-009954	R6017	RESISTOR
2007-008816	R6018	RESISTOR
2007-010685	R6020	RESISTOR
2007-010031	R6021	RESISTOR
2007-007741	R6022	RESISTOR

5. MAIN Electrical Parts List

2007-008587	R6023	RESISTOR
2007-008587	R6024	RESISTOR
2007-007190	R6025	RESISTOR
2007-007190	R6026	RESISTOR
2007-009408	R6027	RESISTOR
2007-009157	R6028	RESISTOR
2007-009157	R6029	RESISTOR
2007-002796	R6034	RESISTOR
2007-002796	R6035	RESISTOR
2007-008294	R6036	RESISTOR
2007-008531	R7000	RESISTOR
2007-008531	R7001	RESISTOR
2007-009352	R7004	RESISTOR
3705-001708	RFS1000	CONNECTOR-COAXIAL
3705-001708	RFS1001	CONNECTOR-COAXIAL
GH63-13706A	SC3000	SHIELD CAN
GH63-12874A	SC6000	SHIELD CAN
GH63-12874A	SC6001	SHIELD CAN
GH63-14483A	SC6002	SHIELD CAN
GH63-14086A	SC6003	SHIELD CAN
GH63-14084A	SC6004	SHIELD CAN
GH02-14867A	SC6004SP	SHIELD CAN
GH63-14087A	SC6005	SHIELD CAN
GH63-14085A	SC6006	SHIELD CAN
GH62-00030A	SMR1000	SOCKET-PCB GASKET
GH62-00030A	SMR1001	SOCKET-PCB GASKET
GH61-08266A	SUS6000	SHIELD-STS PAD
GH61-08266A	SUS6001	SHIELD-STS PAD
GH61-12649A	SUS6002	SHIELD-STS PAD
2409-001399	TA3000	C-POLYMER ,CHIP
2809-001411	TCX2000	OSCILLATOR-VCTCXO
1404-001724	TH2000	THERMISTOR-NTC
1404-001651	TH4000	THERMISTOR-NTC
1404-001651	TH4001	THERMISTOR-NTC
1201-003974	U1000	IC-IF/RF AMP
2911-000447	U1001	DUPLEXER-FEM
1001-002022	U1003	IC-RF SWITCH
1001-002030	U1005	IC-RF SWITCH
1203-008693	U1007	IC-DC/DC CONVERTER

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1201-004129	U2001	IC-POWER AMP
1201-003717	U2002	IC-IF/RF AMP
1001-002022	U2004	IC-RF SWITCH
2911-000435	U2005	DUPLEXER-ASM
1205-005639	U2006	IC-TRANSCEIVER
1203-008872	U3000	IC-POSI.FIXED REG.
1009-001066	U3001	IC-HALL EFFECT S/W
1003-002805	U3003	IC-MOTOR DRIVER
1203-008867	U3005	IC-POSI.FIXED REG.
1209-002490	U3006	IC-OPTICS SENSOR
1205-005372	U3007	IC-WIFI
1001-001835	U3008	IC-RF SWITCH
1209-002330	U3009	IC-MAGNETIC SENSOR
1209-002344	U3011	IC-ACCEL./GYRO SENSOR
1201-003786	U3012	IC-GPS AMP
1203-008867	U3013	IC-POSI.FIXED REG.
1203-008867	U3014	IC-POSI.FIXED REG.
1203-007365	U3015	IC-DC/DC CONVERTER
1203-008603	U3016	IC-MULTI REG.
1205-005680	U3021	IC-NFC/RFID
1203-008995	U5000	IC-POWER SUPERVISOR
1203-008767	U5002	IC-POWER SUPERVISOR
1203-008741	U5006	IC-VOL DETECTOR
1203-008951	U5009	IC-POSI.FIXED REG.
1205-005685	U6001	IC-TOUCH
1203-008865	U7000	IC-POSI.FIXED REG.
1203-008859	U7001	IC-POSI.FIXED REG.
1203-008870	U7003	IC-POSI.FIXED REG.
1203-008864	U7004	IC-POSI.FIXED REG.
1201-004036	U7005	IC-IF/RF AMP
1203-008295	U7007	IC-DC/DC CONVERTER
1201-004136	U7016	IC-AUDIO AMP
3301-002312	U7018	BEADS
1203-008955	U7019	IC-POSI.FIXED REG.
1205-005565	UCP400	IC-MODEM
1105-002745	UCP400UP	IC-DDR3 SDRAM
1107-002548	UME5000	IC-EMMC
1405-001425	VR1002	VARISTOR
1405-001404	VR1003	VARISTOR

5. MAIN Electrical Parts List

1405-001404	VR1004	VARISTOR
1405-001403	VR1005	VARISTOR
1405-001409	VR1006	VARISTOR
1405-001409	VR1007	VARISTOR
1405-001409	VR1008	VARISTOR
1405-001409	VR1009	VARISTOR
1405-001409	VR1010	VARISTOR
1405-001403	VR1011	VARISTOR
1405-001421	VR1012	VARISTOR
1405-001403	VR1013	VARISTOR
1405-001403	VR1014	VARISTOR
1405-001409	VR1015	VARISTOR
1405-001409	VR1025	VARISTOR
1405-001409	VR1026	VARISTOR
1405-001409	VR1028	VARISTOR
1405-001411	VR1030	VARISTOR
1405-001410	VR1032	VARISTOR
1405-001404	VR1033	VARISTOR
1405-001409	VR1034	VARISTOR
1405-001416	VR1035	VARISTOR
1405-001409	VR2000	VARISTOR
1405-001409	VR2001	VARISTOR
1405-001416	VR3001	VARISTOR
0406-001728	ZD2000	DIODE-TVS
0406-001542	ZD3000	DIODE-TVS
0406-001459	ZD3002	DIODE-TVS
0406-001553	ZD3003	DIODE-TVS
0406-001553	ZD3004	DIODE-TVS
0406-001459	ZD3005	DIODE-TVS
0406-001728	ZD3006	DIODE-TVS
0406-001728	ZD5000	DIODE-TVS
0406-001640	ZD5001	DIODE-TVS
0406-001640	ZD5002	DIODE-TVS
0406-001592	ZD5003	DIODE-TVS
0406-001542	ZD5004	DIODE-TVS
0406-001690	ZD5005	DIODE-TVS
0406-001743	ZD5006	DIODE-TVS
0406-001743	ZD5007	DIODE-TVS
0406-001743	ZD5008	DIODE-TVS

5. MAIN Electrical Parts List

0406-001743	ZD5009	DIODE-TVS
0406-001743	ZD5010	DIODE-TVS
0406-001542	ZD5012	DIODE-TVS
0406-001709	ZD5013	DIODE-TVS
0406-001787	ZD6000	DIODE-TVS
0406-001787	ZD6001	DIODE-TVS
0406-001709	ZD6003	DIODE-TVS
0406-001709	ZD6004	DIODE-TVS
0406-001682	ZD6005	DIODE-TVS
0406-001781	ZD6009	DIODE-TVS
0406-001781	ZD6012	DIODE-TVS
0406-001709	ZD6014	DIODE-TVS
0406-001459	ZD6017	DIODE-TVS
0406-001459	ZD6018	DIODE-TVS
0406-001781	ZD6019	DIODE-TVS

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.