


8. Level 3 Repair

8-1. Components Layout

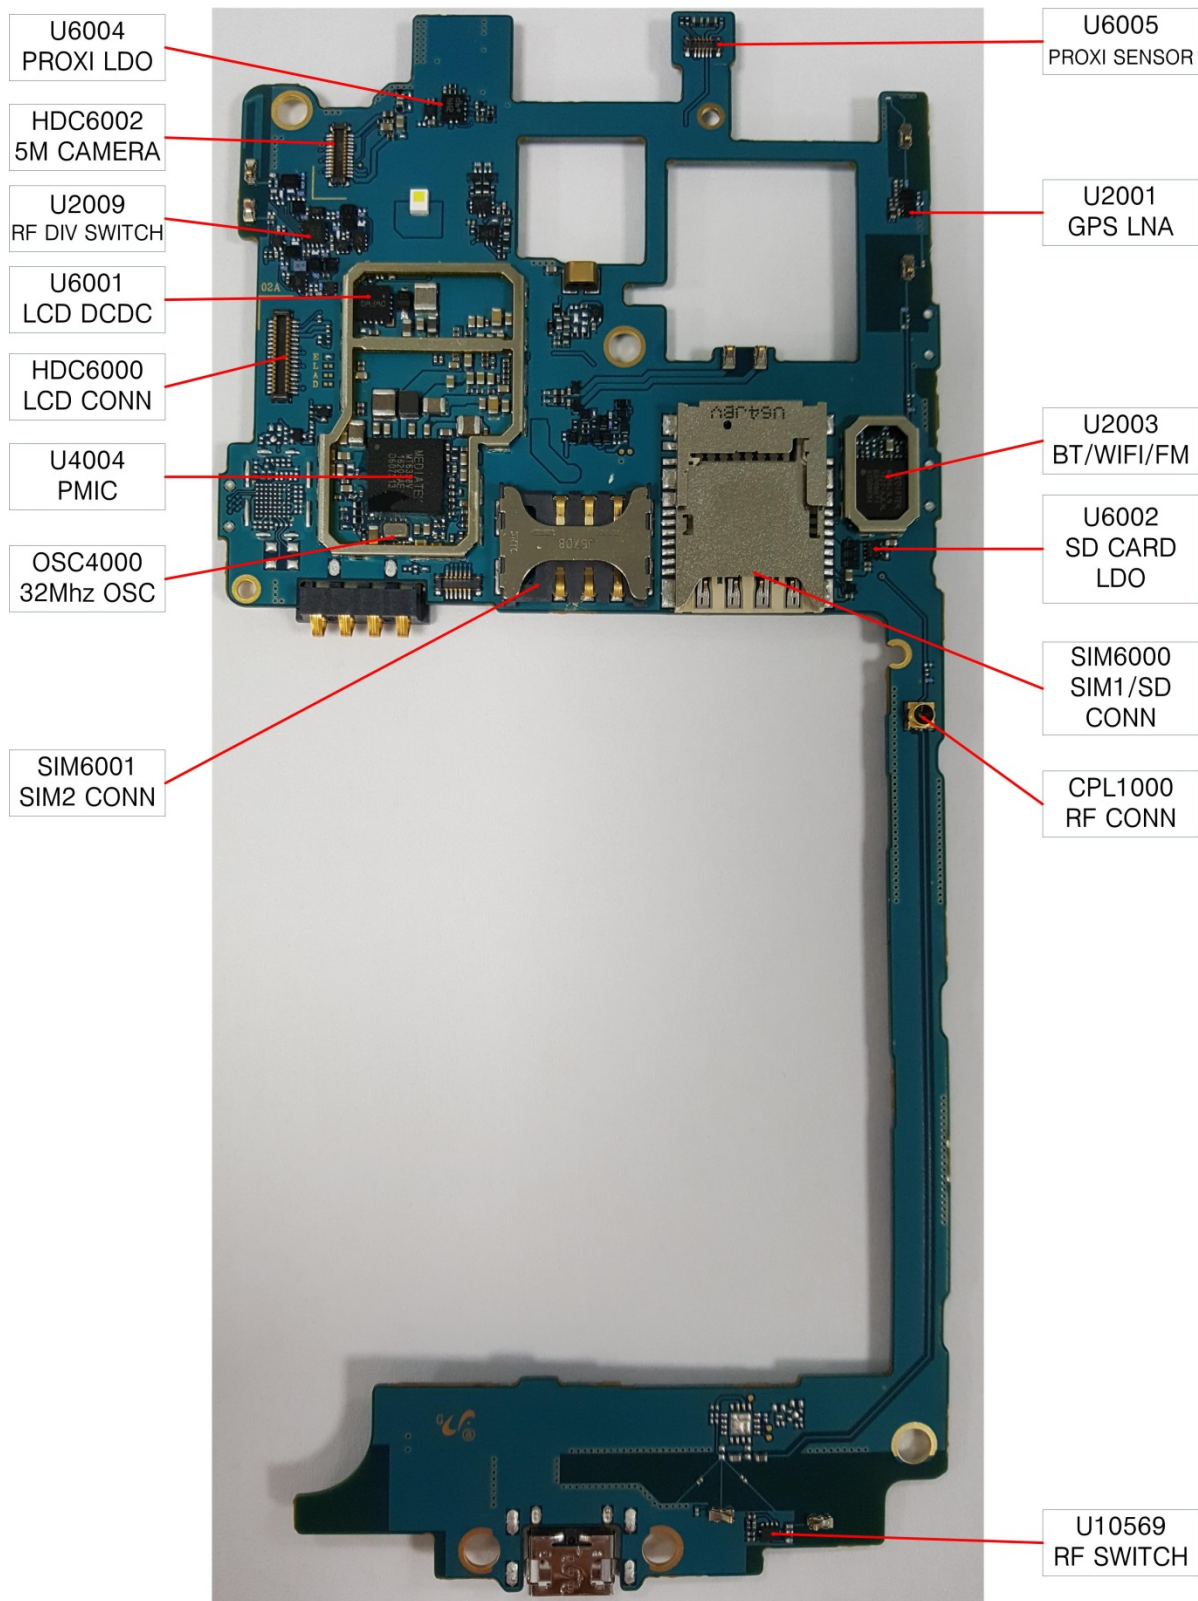

8. Level 3 Repair

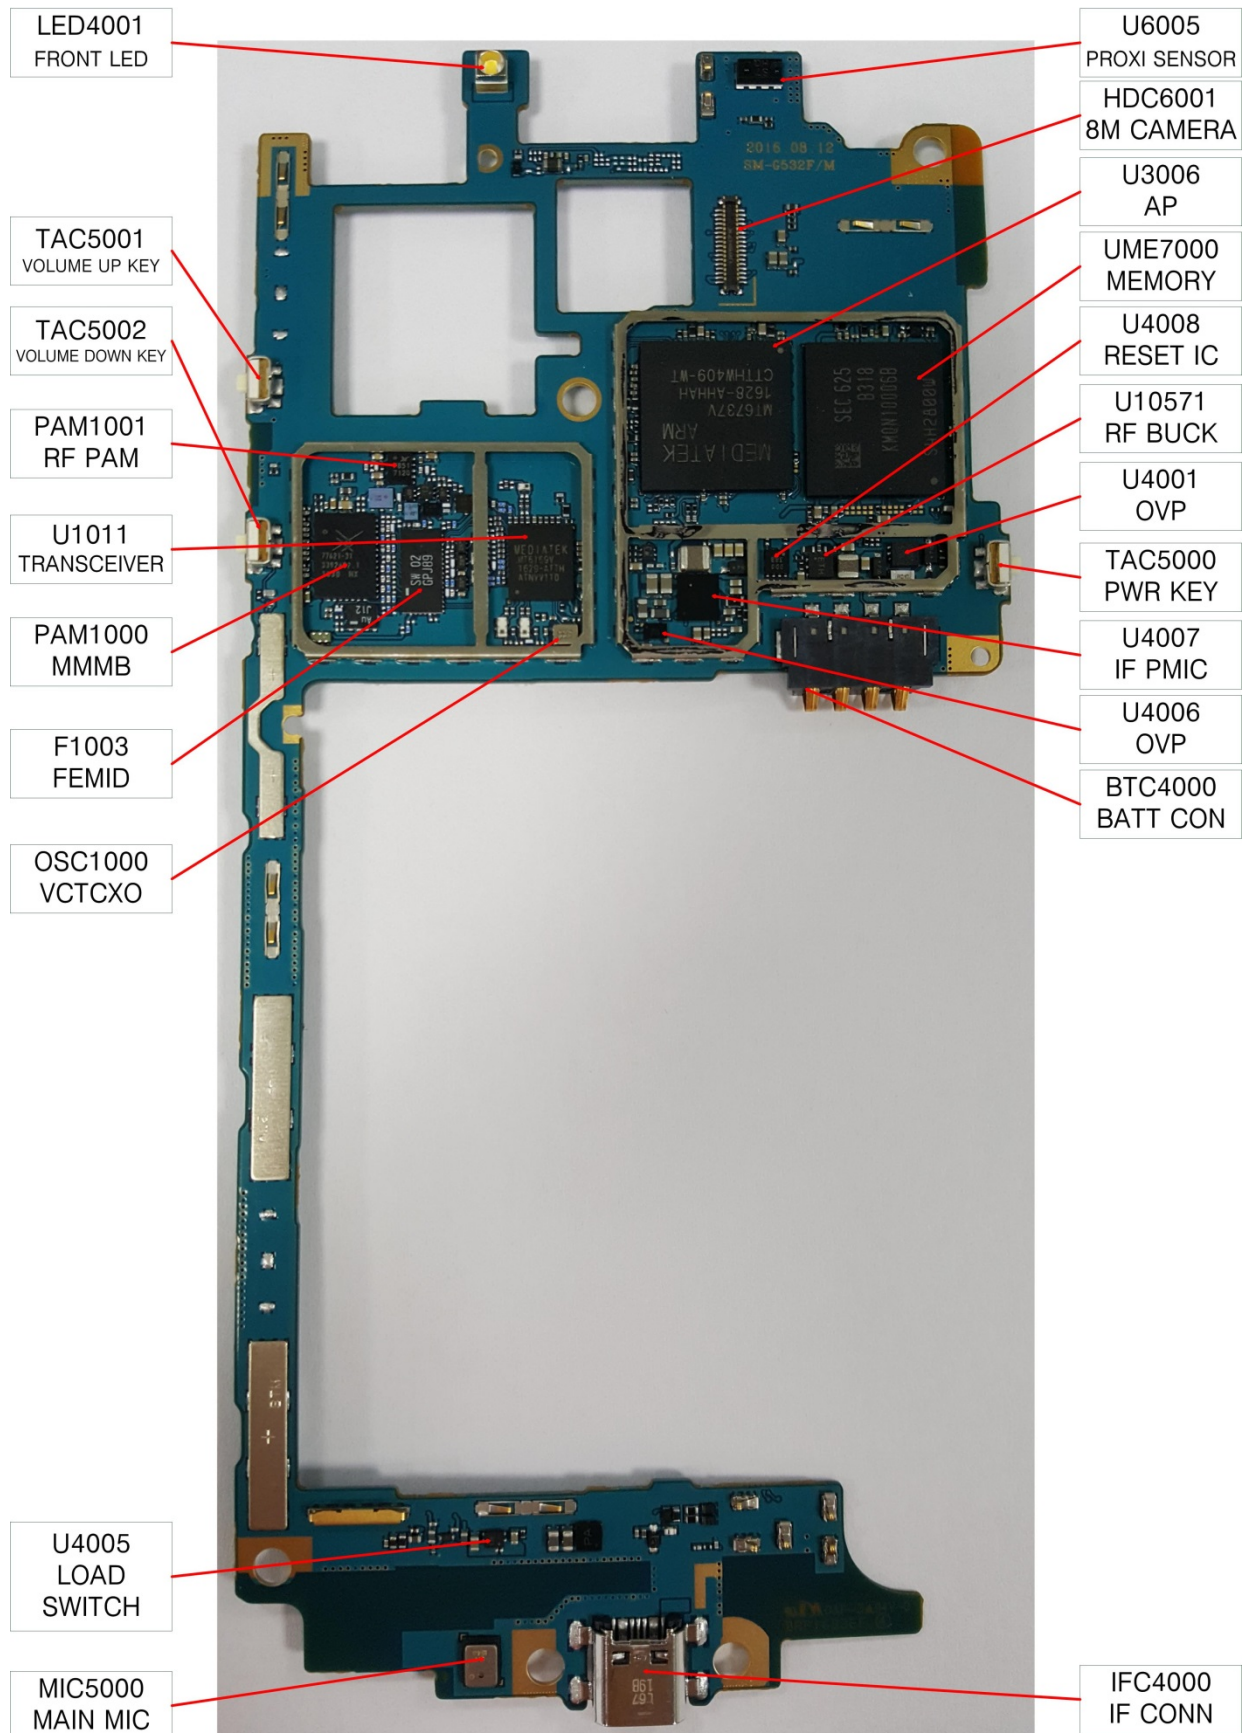



Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

SM-G532 Block Diagram




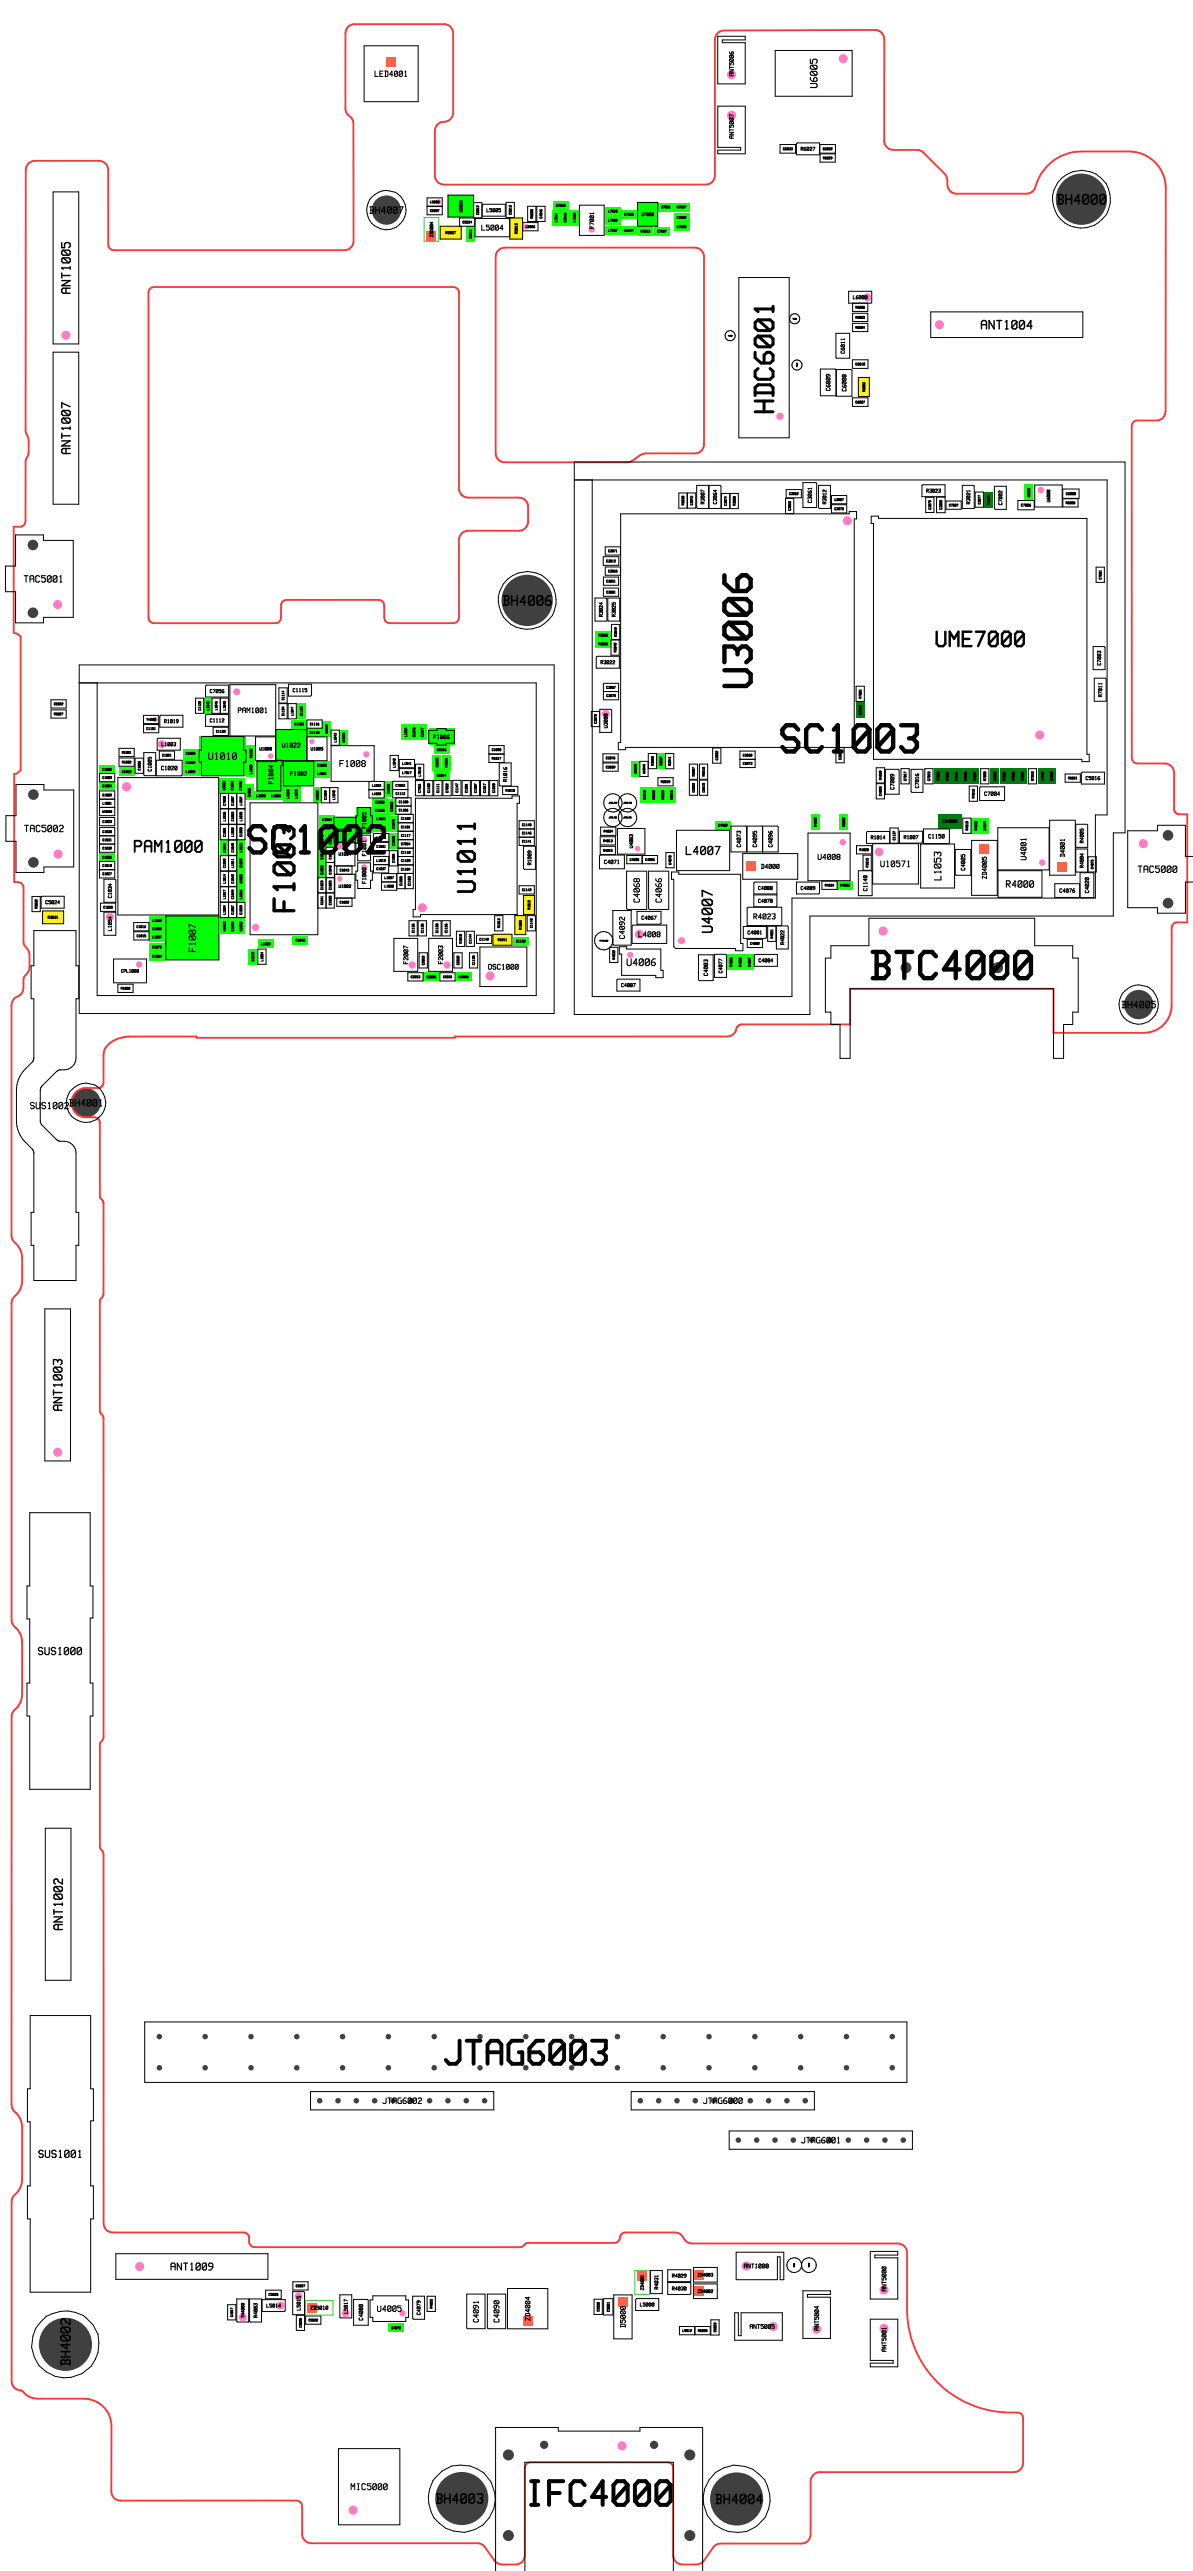

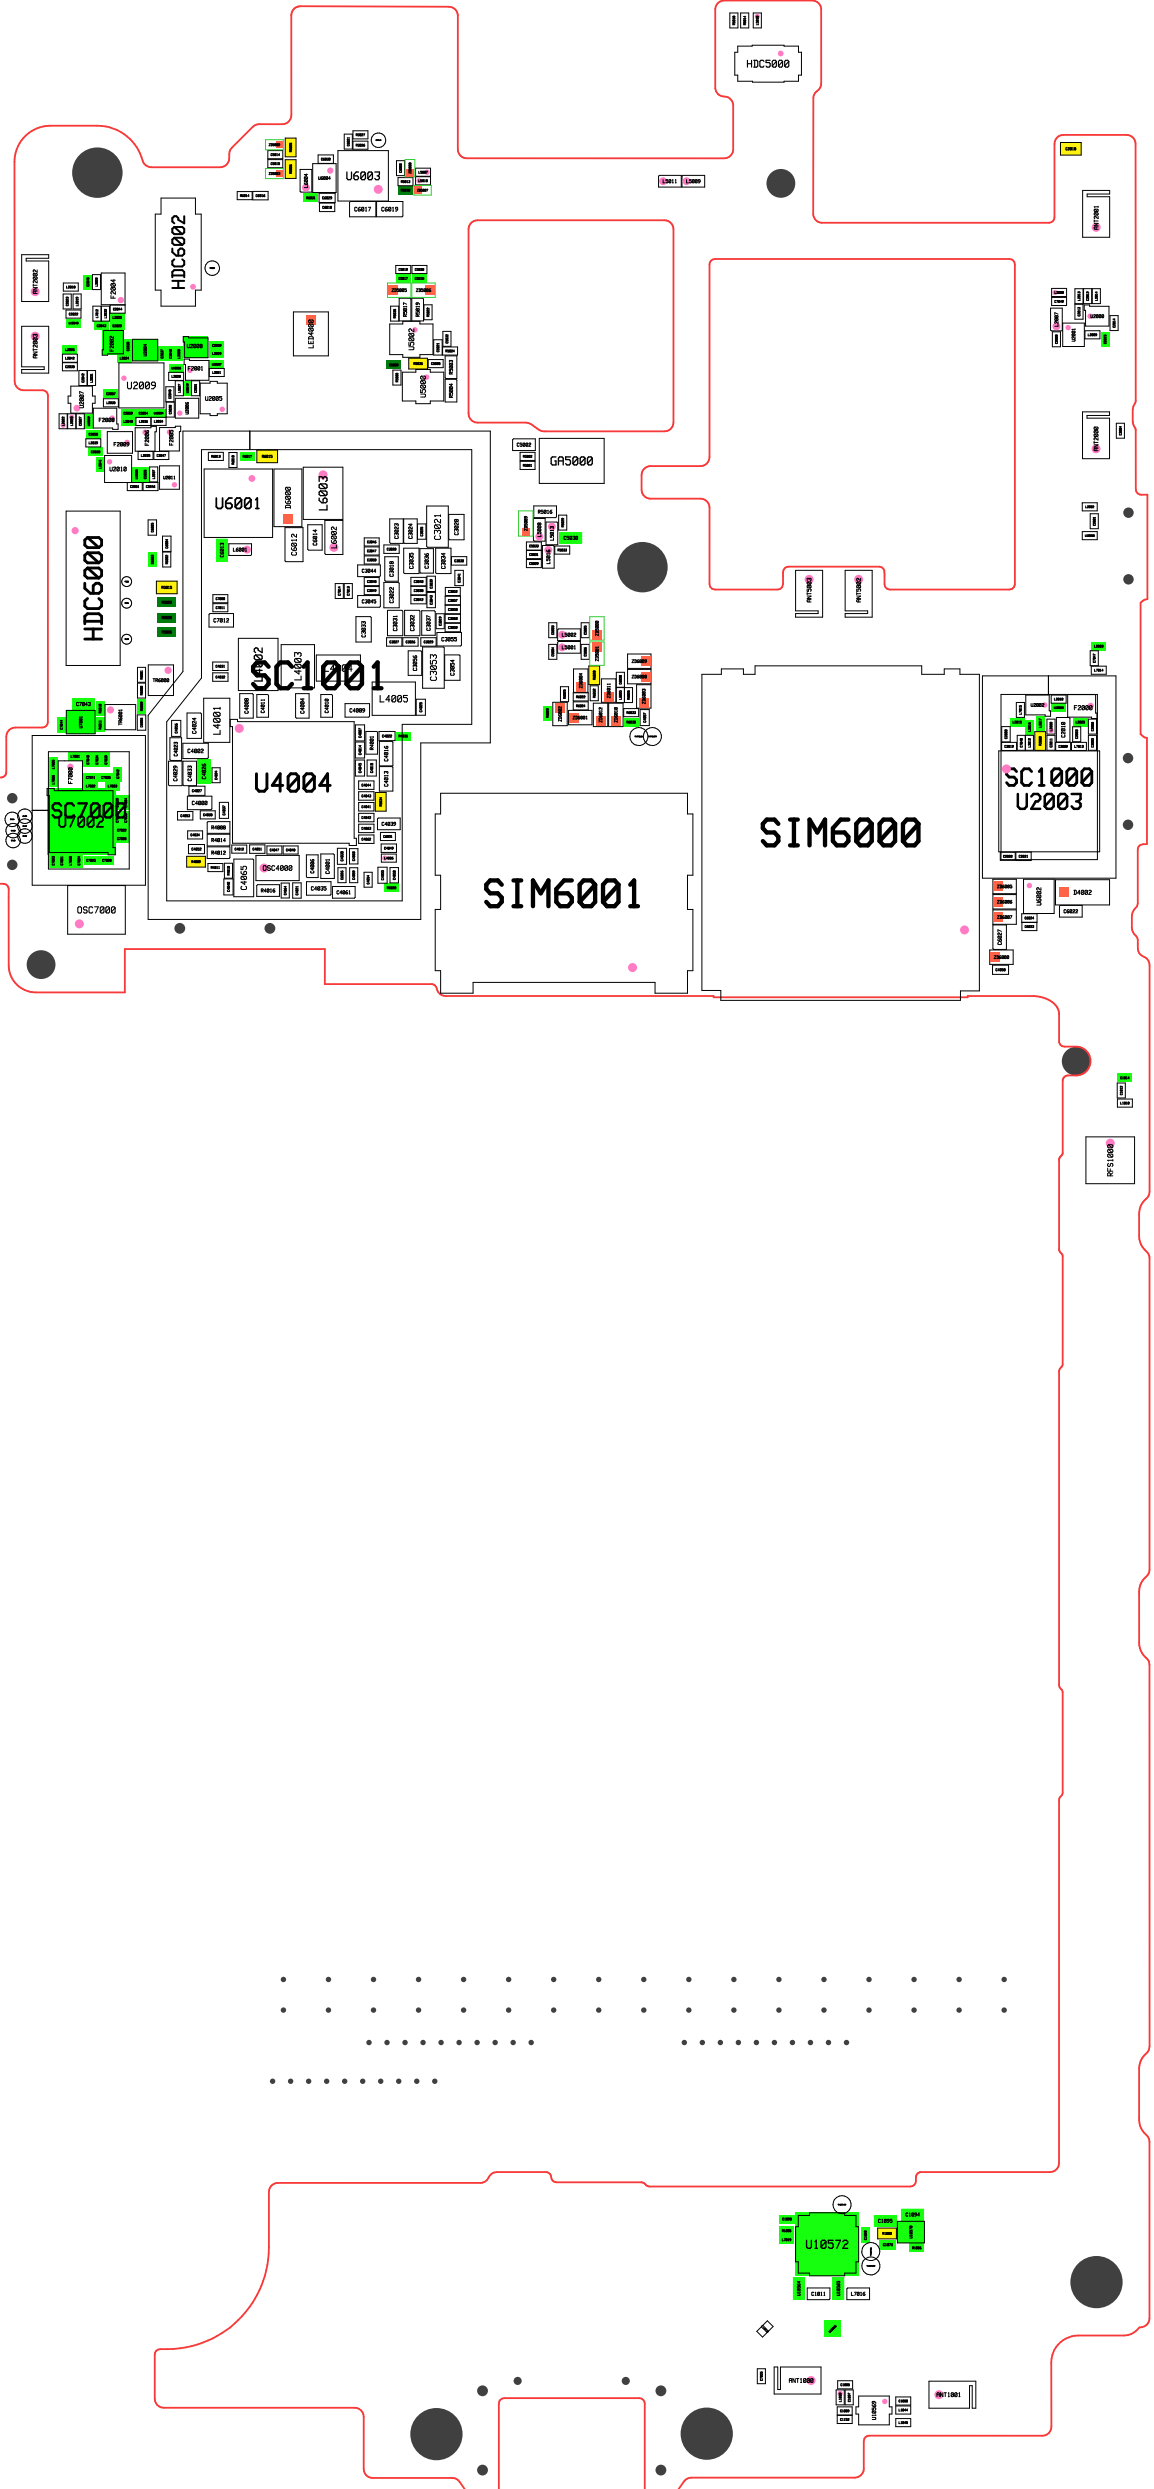

8. Level 3 Repair

8-3. Flow Chart of Troubleshooting

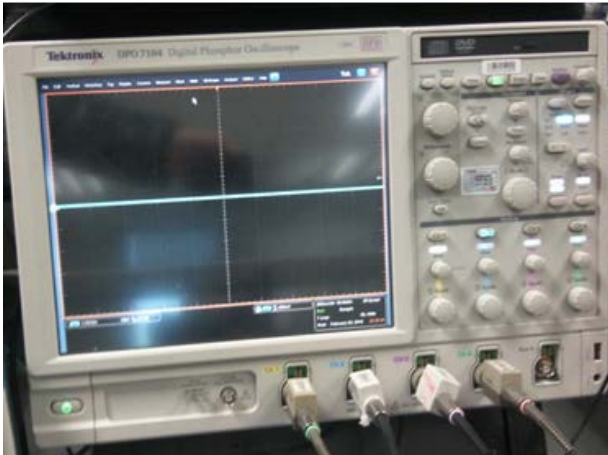


Oscilloscope




Digital Multimeter



Power Supply

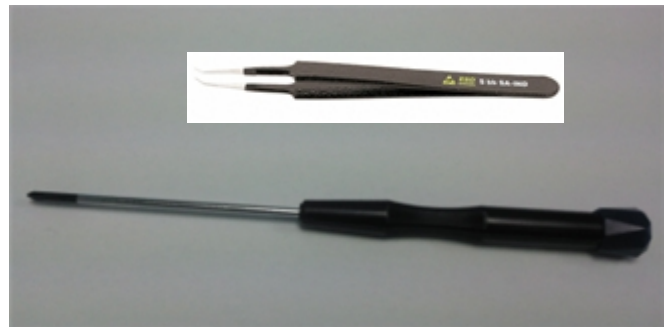

+ driver, ESD Safe Tweezer

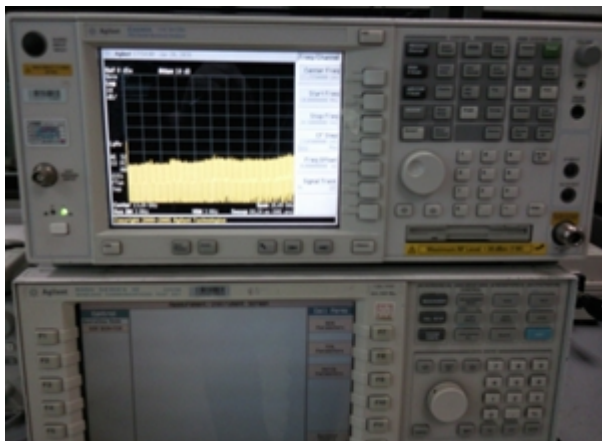


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

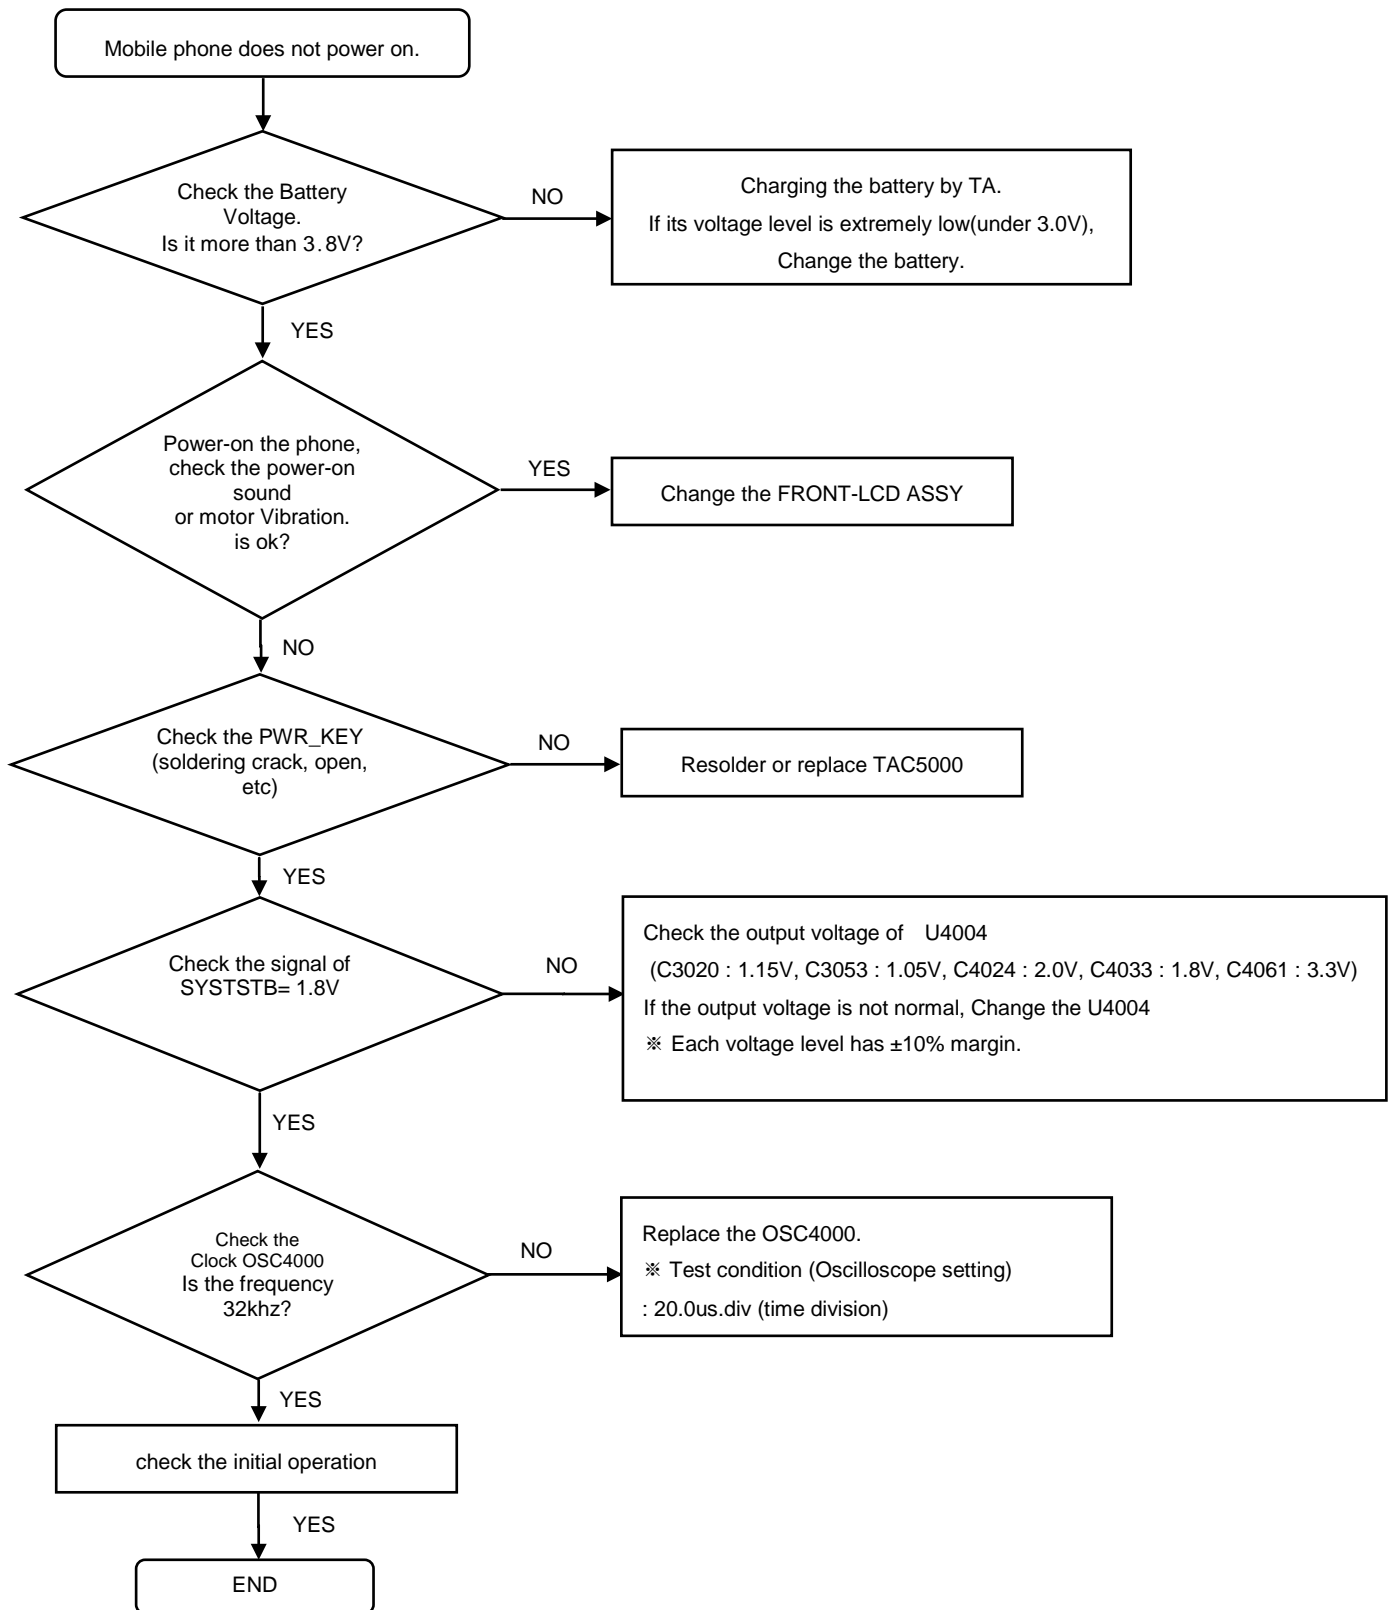


8. Level 3 Repair

8-4-2. Initial

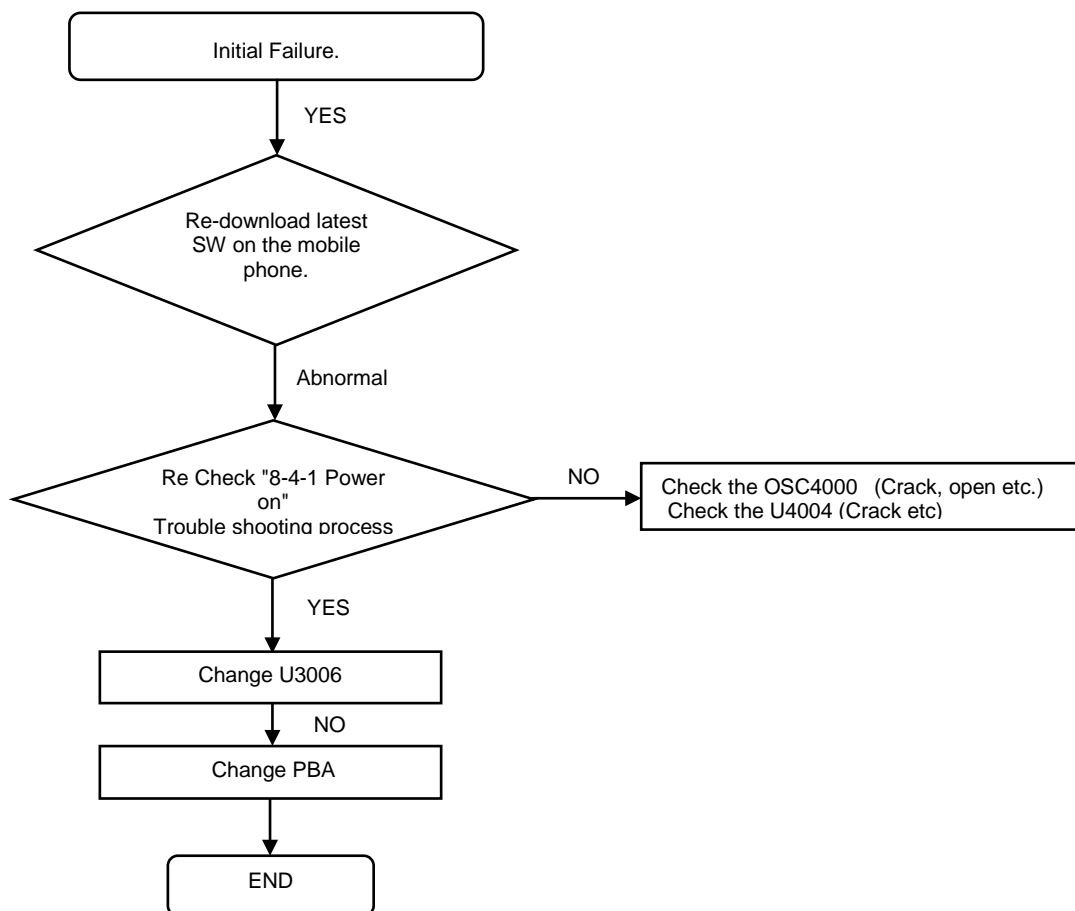


8. Level 3 Repair

8-4-3. No Service

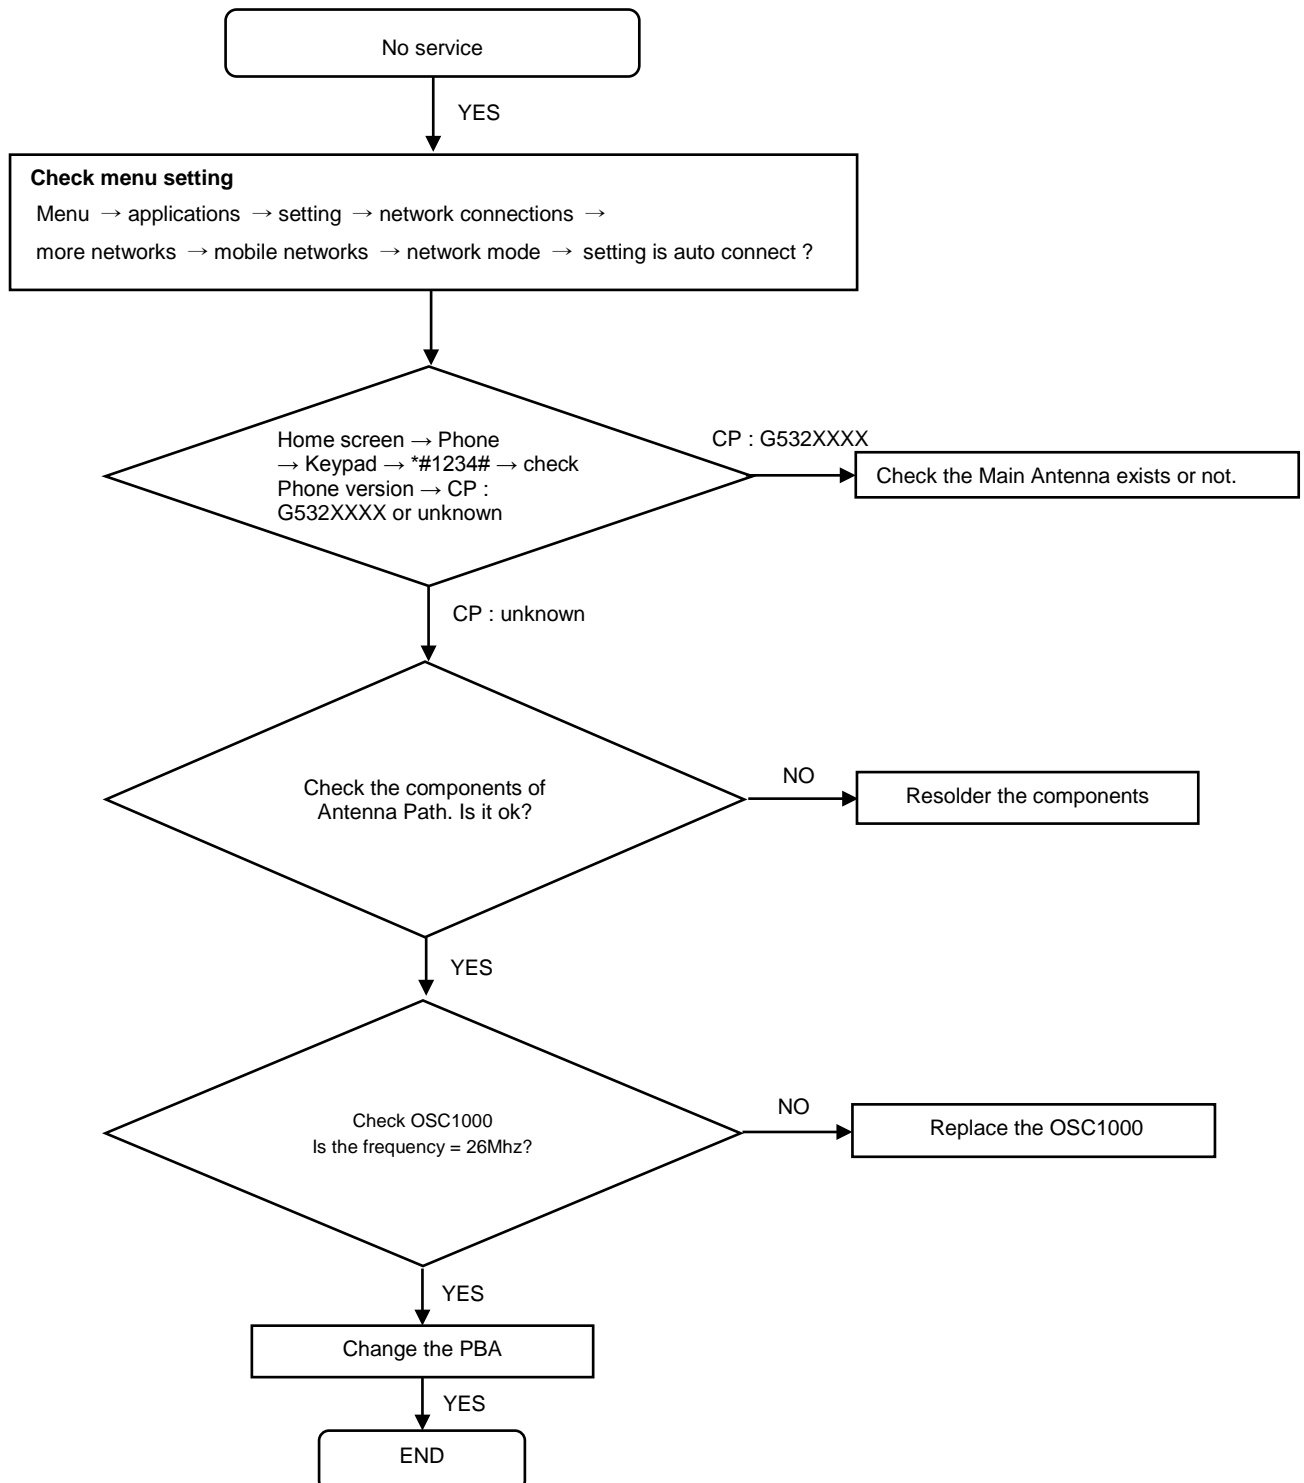

8. Level 3 Repair


8-4-4. Sim Part

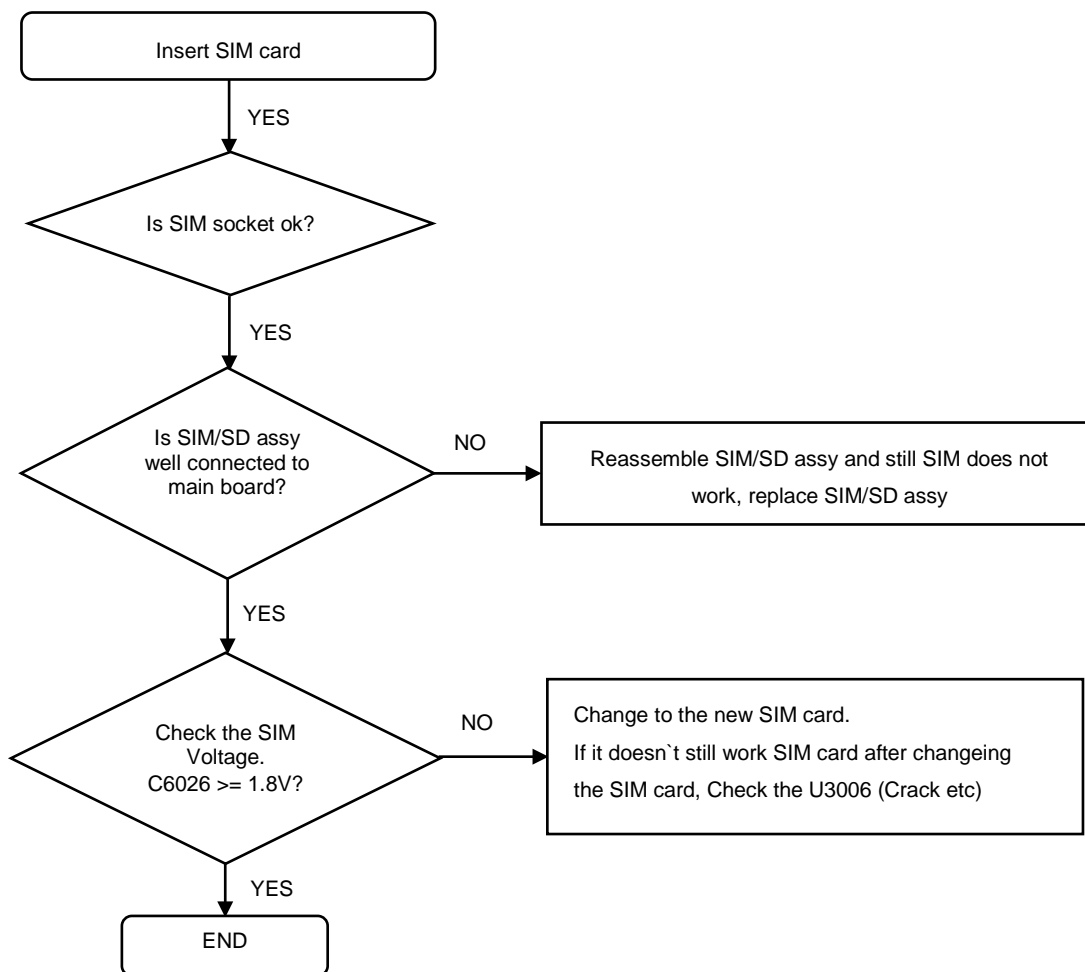

8. Level 3 Repair


8-4-5. Charging Part

- First of all, Please check the battery status.

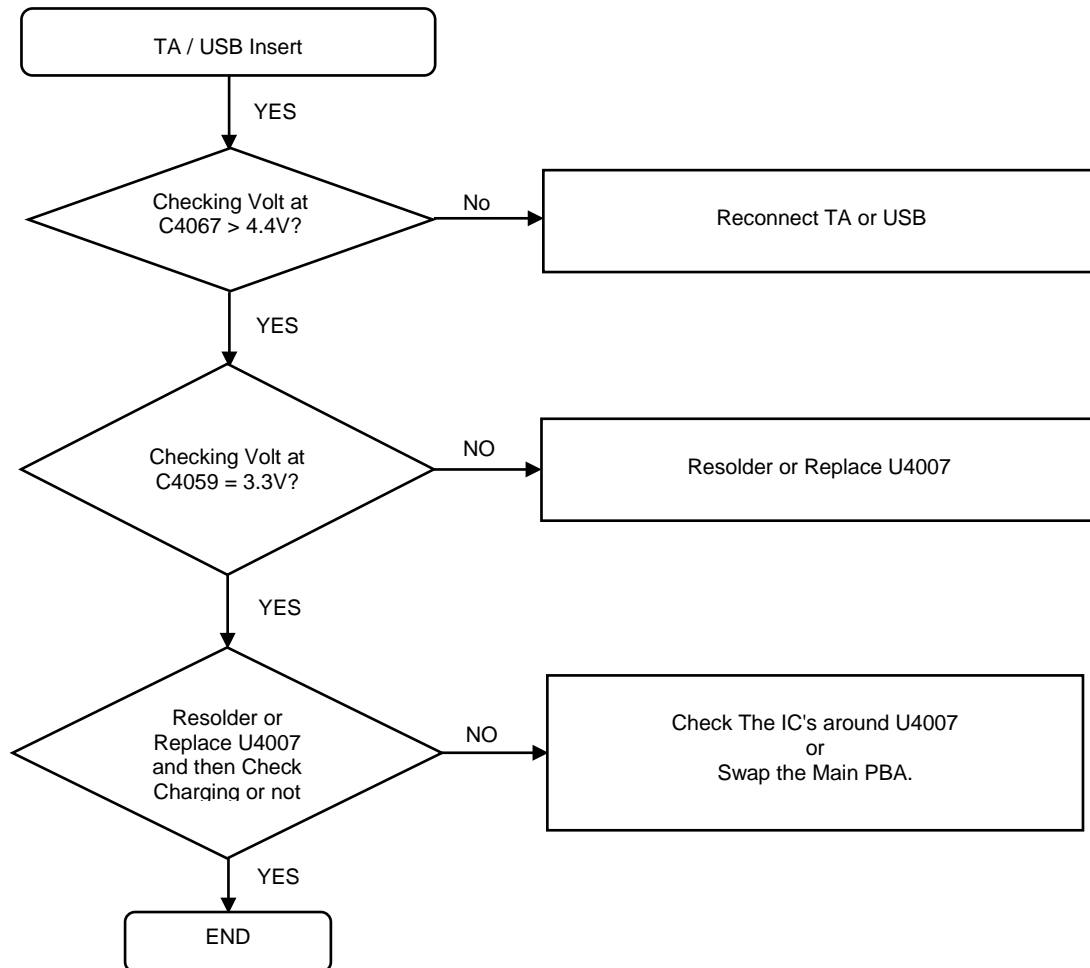


8. Level 3 Repair

8-4-6. Microphone Part

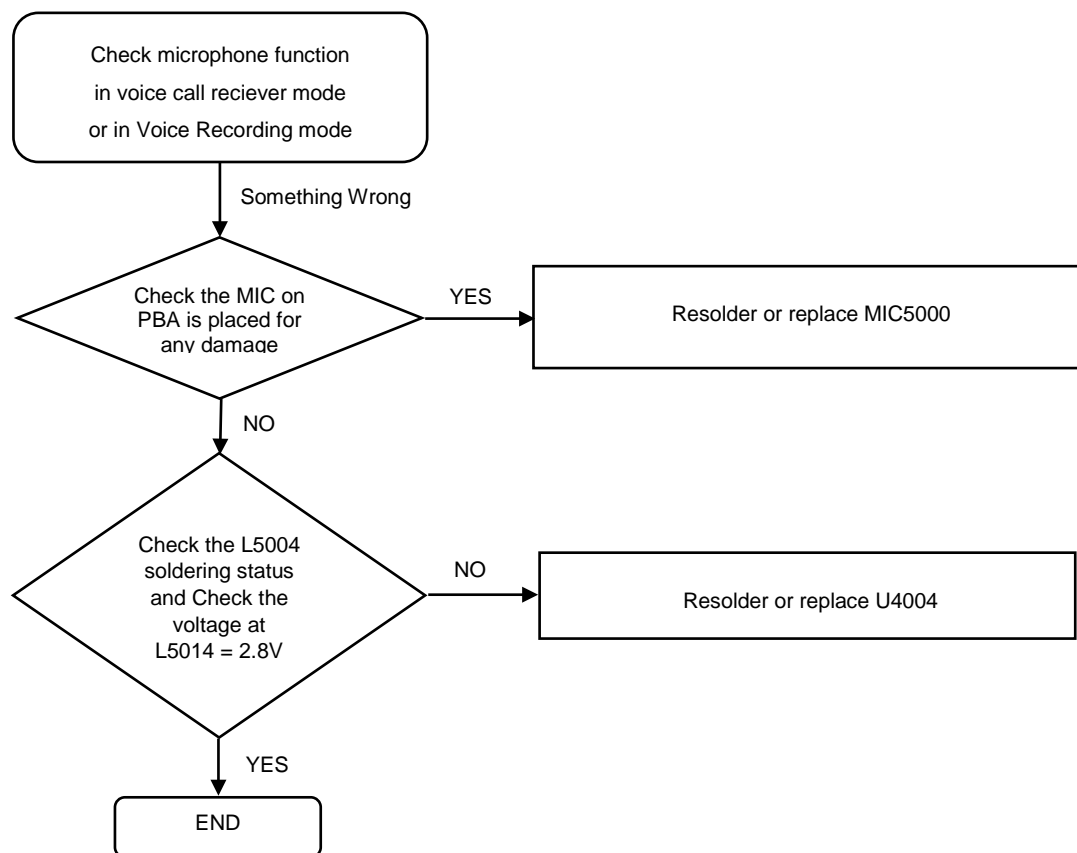


8. Level 3 Repair

8-4-7. Speaker Part

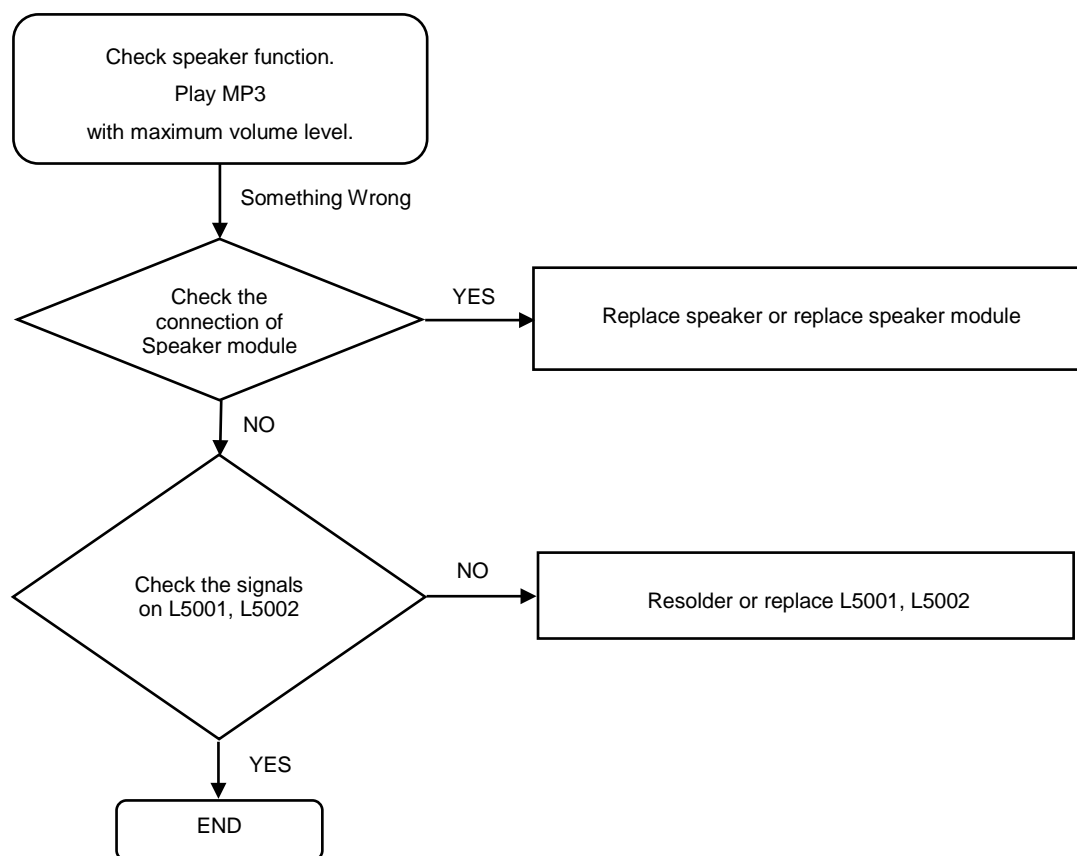


8. Level 3 Repair

8-4-8. Receiver Part

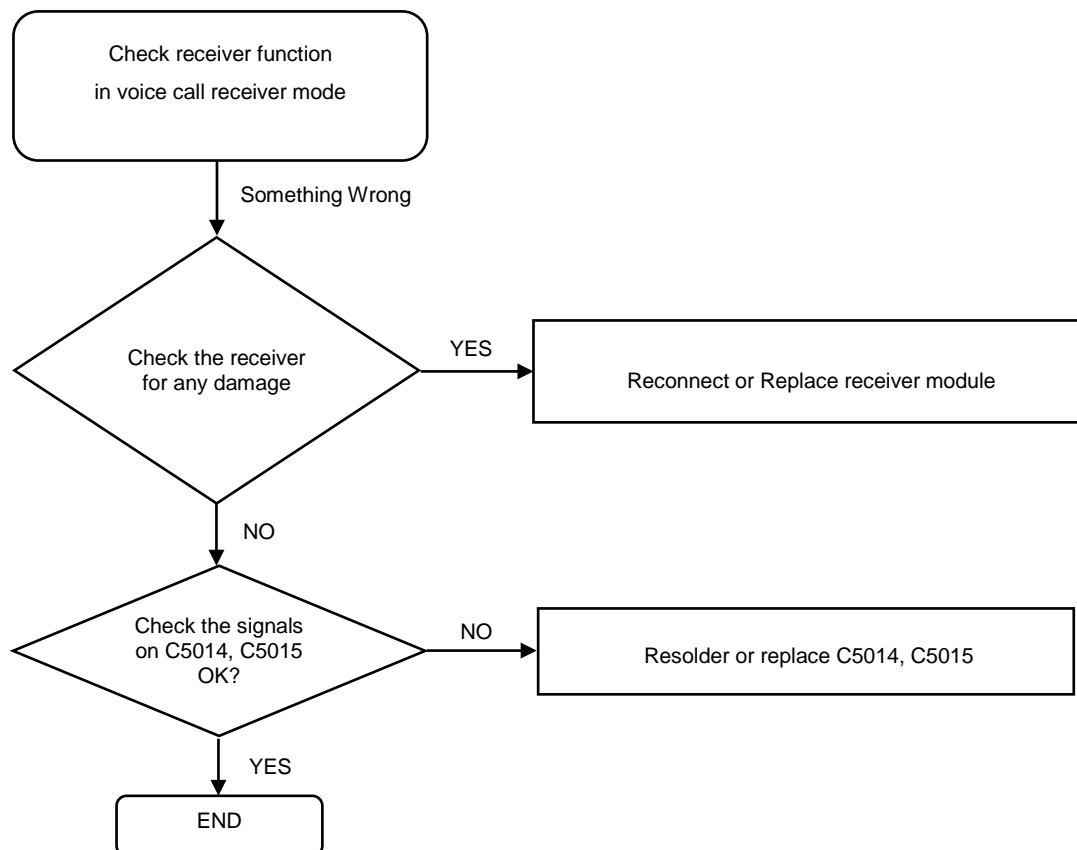


8. Level 3 Repair

8-4-9.Earphone Part

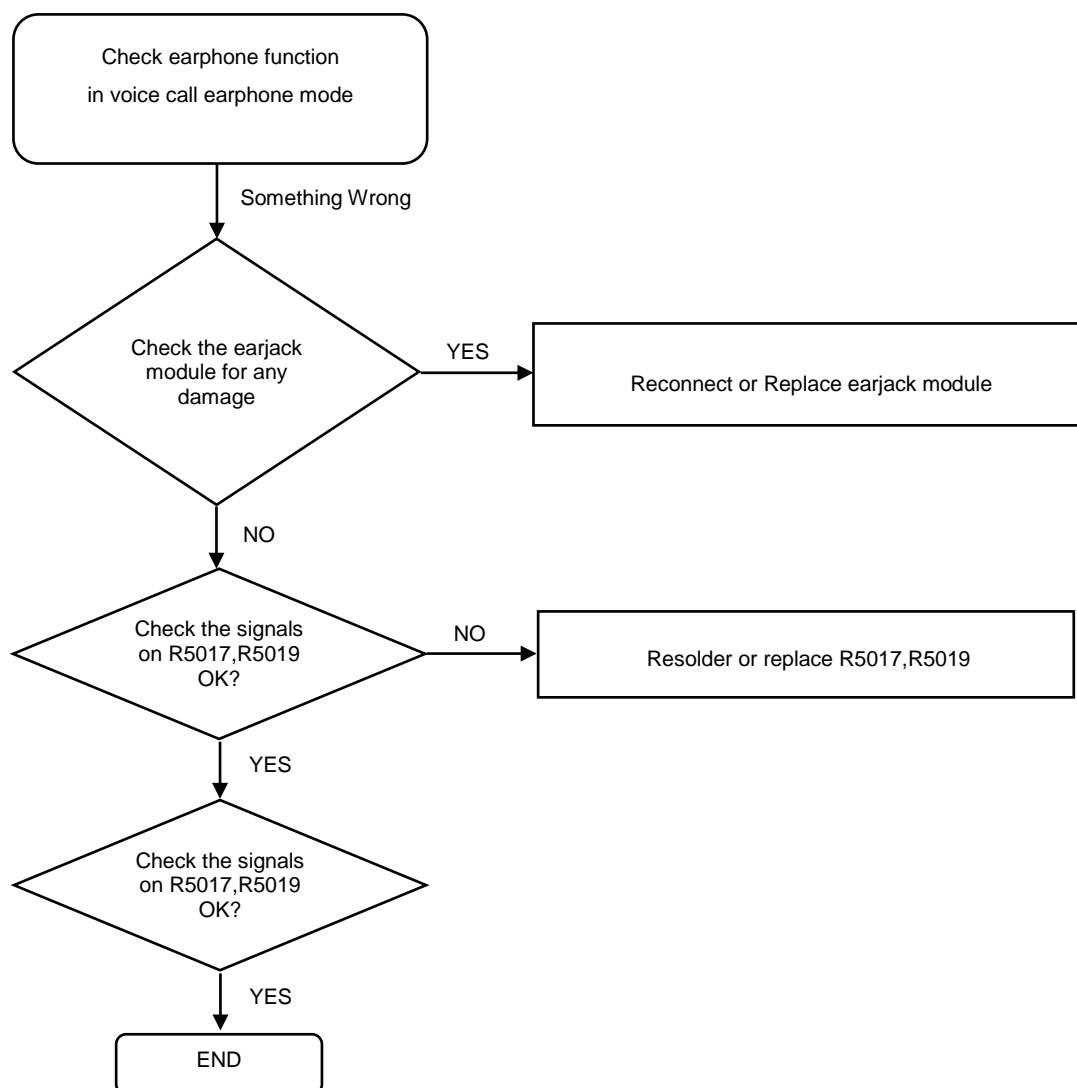


8. Level 3 Repair

8-4-10. ACCEL SENSOR Part

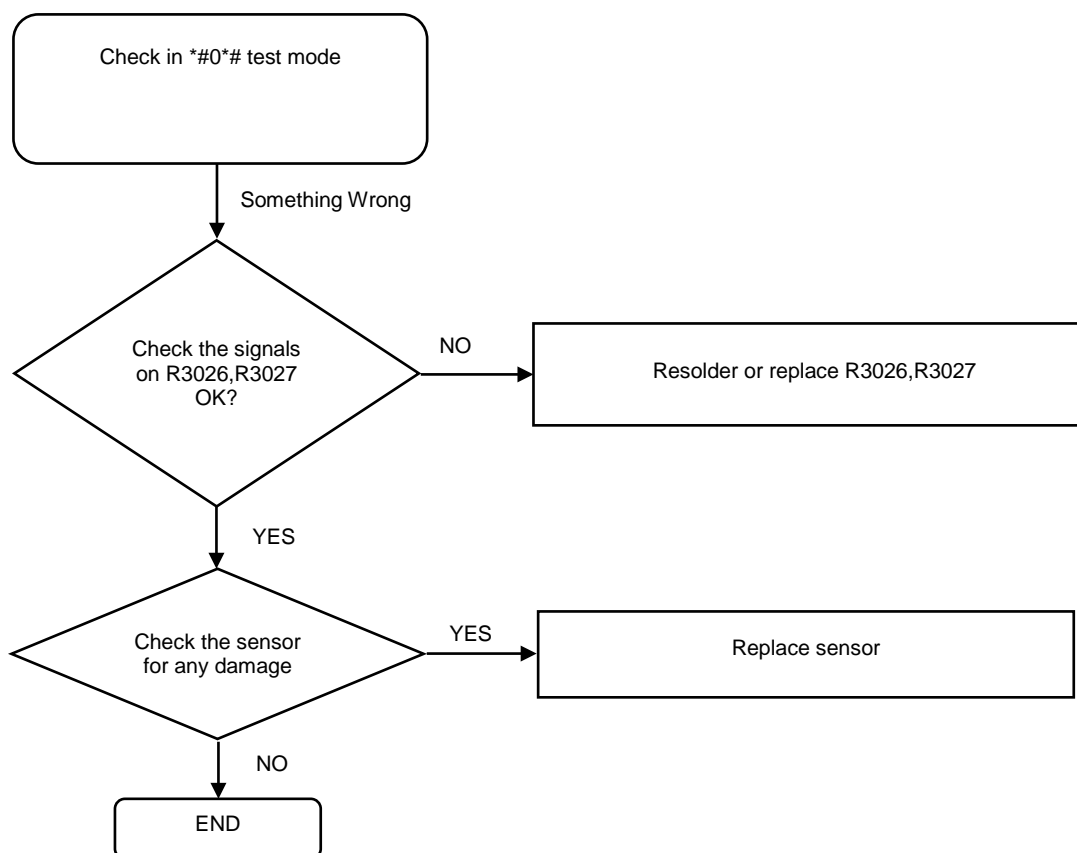


8. Level 3 Repair

8-4-11. Proxi Sensor Part

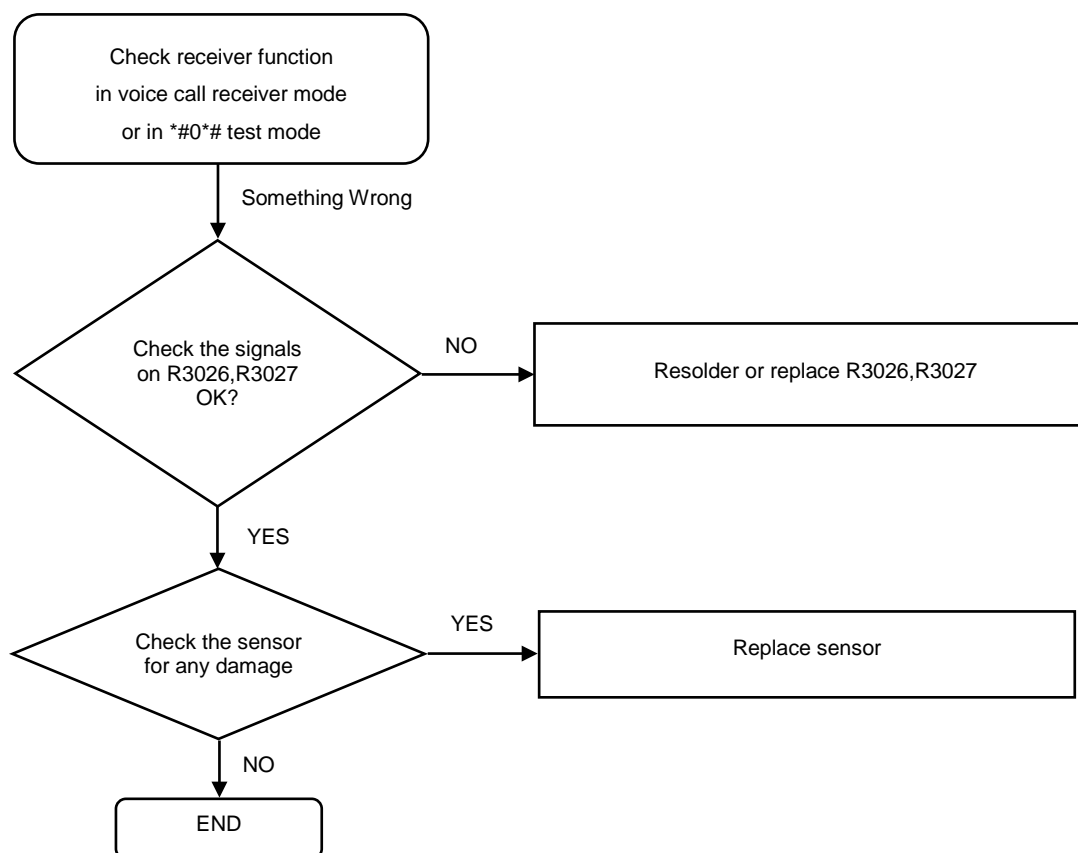


8. Level 3 Repair

8-4-12. LCD

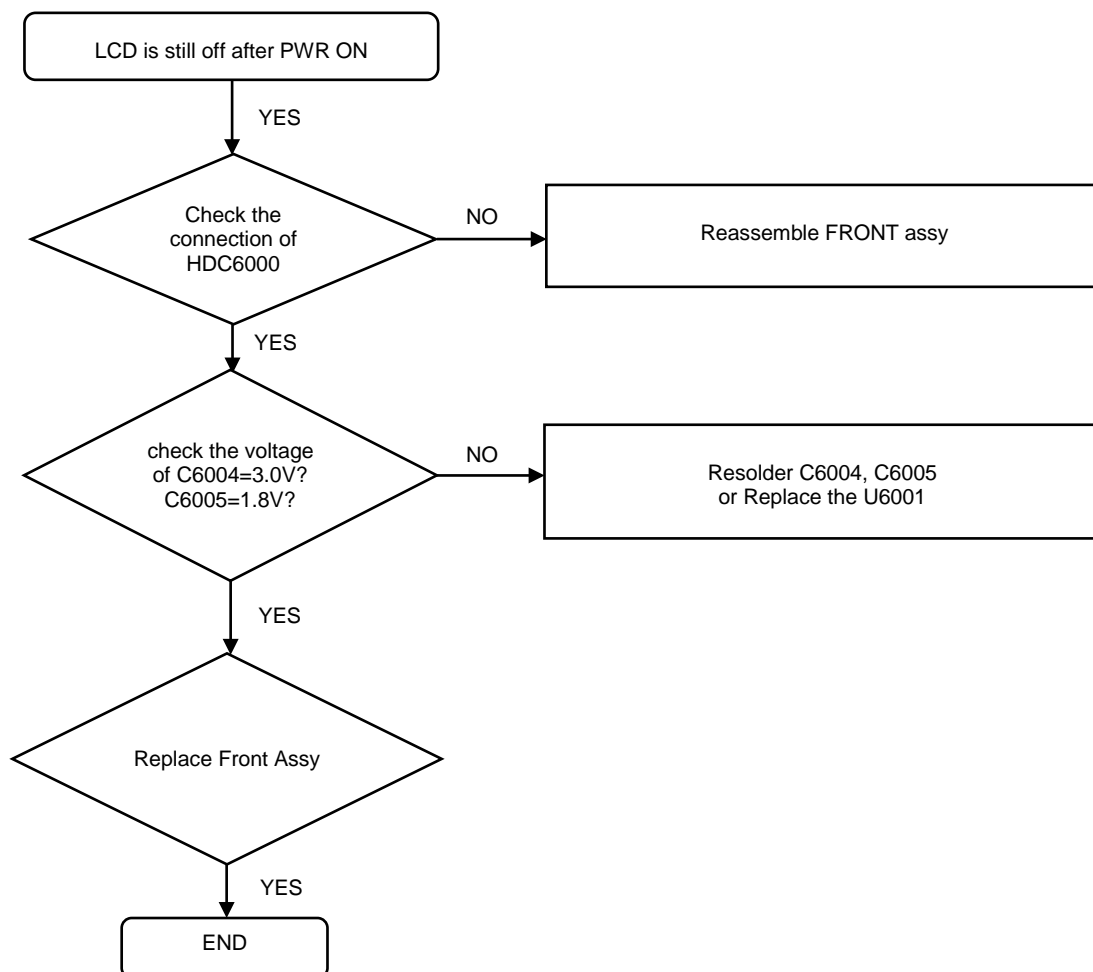


8. Level 3 Repair

8-4-13. TSP

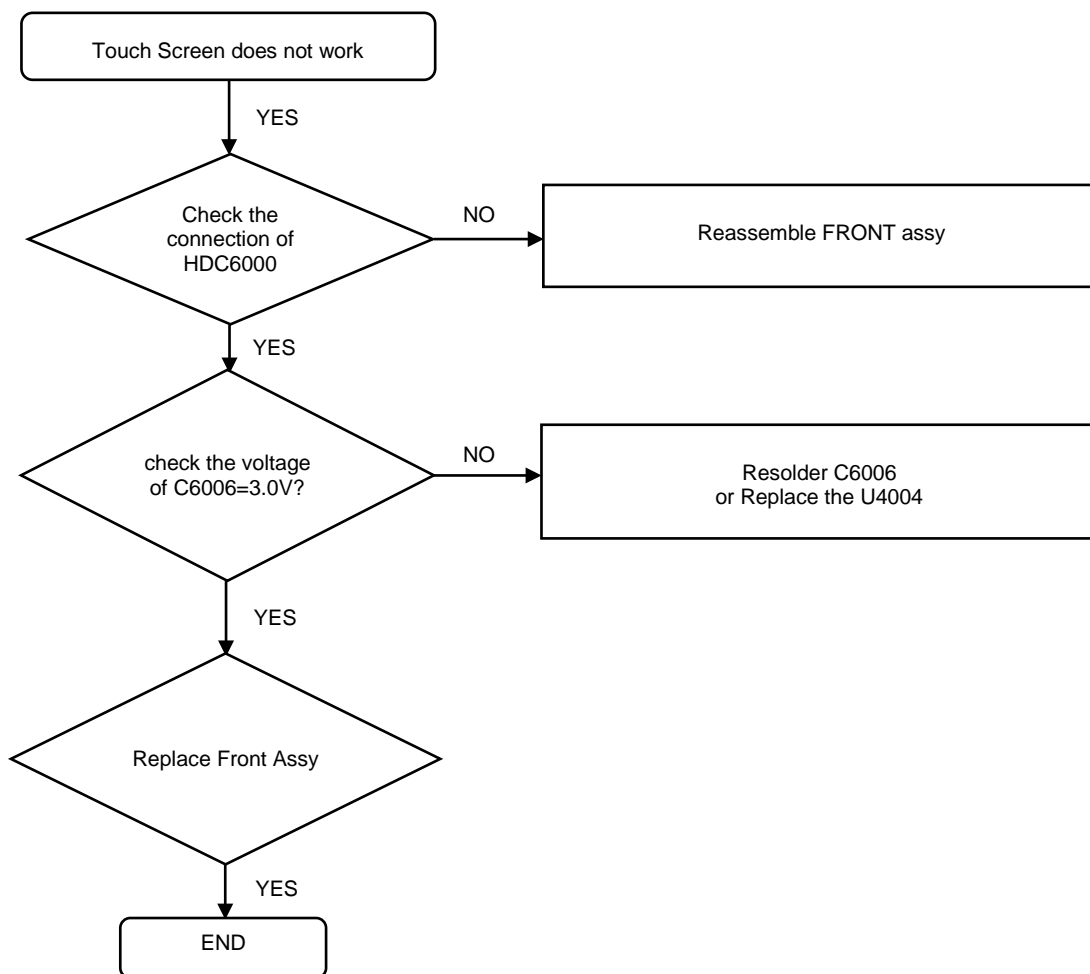


8. Level 3 Repair

8-4-14. 8M CAMERA

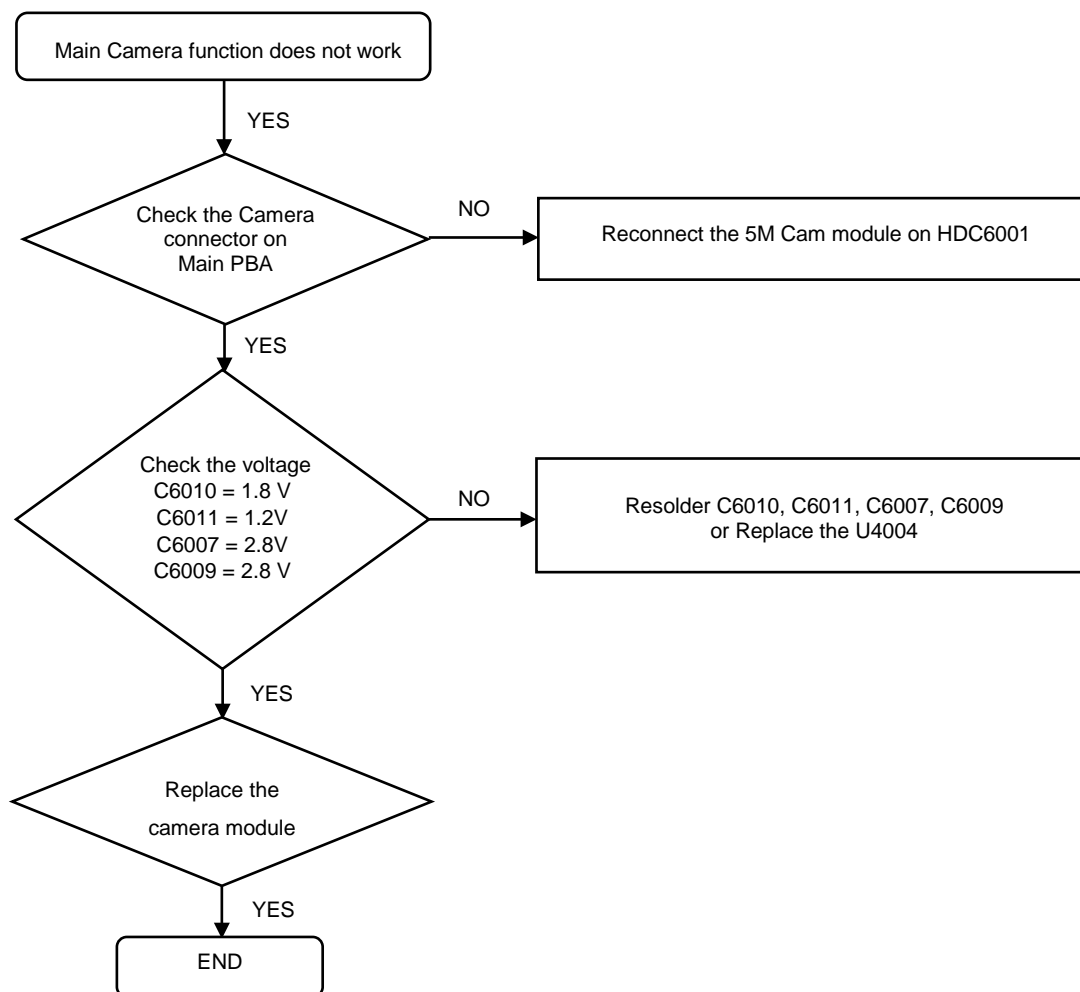


8. Level 3 Repair

8-4-15. 5M CAMERA

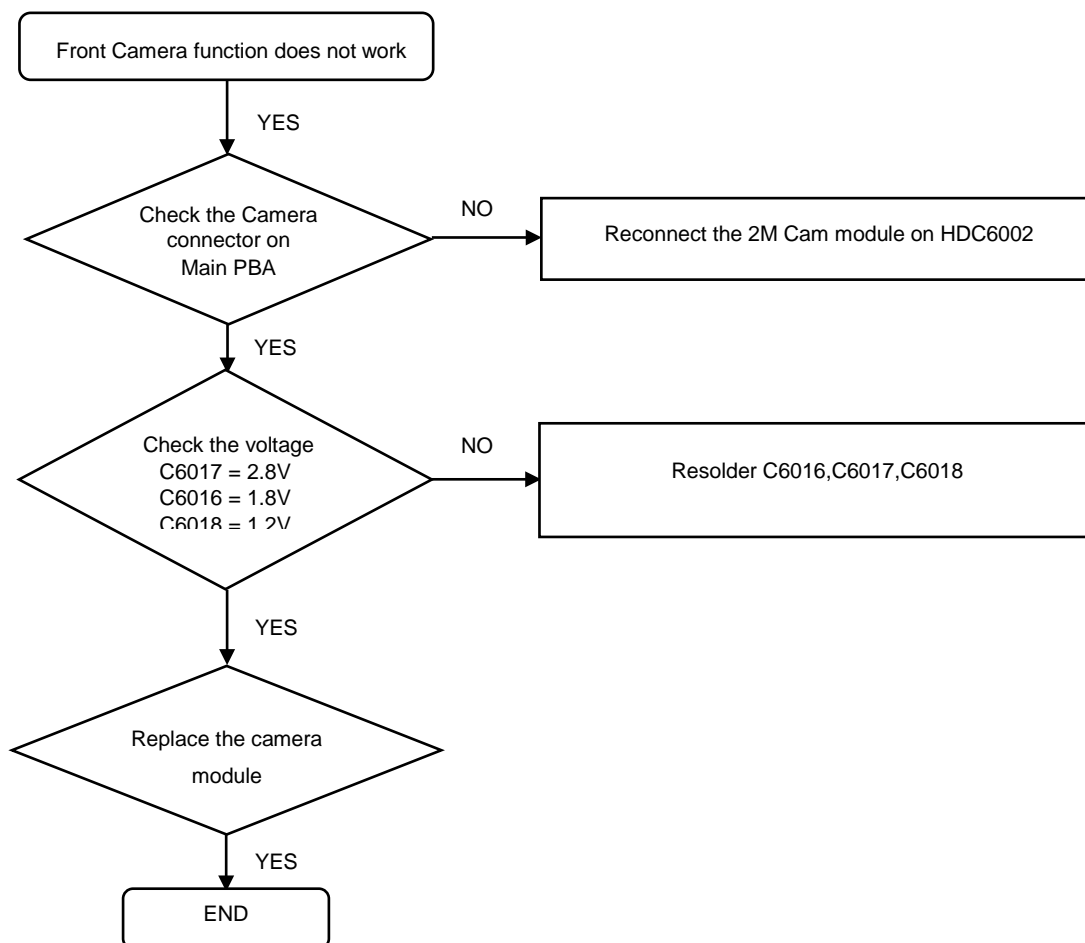


8. Level 3 Repair

8-4-16. GSM 850,900 / WCDMA 850,900 / LTE B5,8 RX

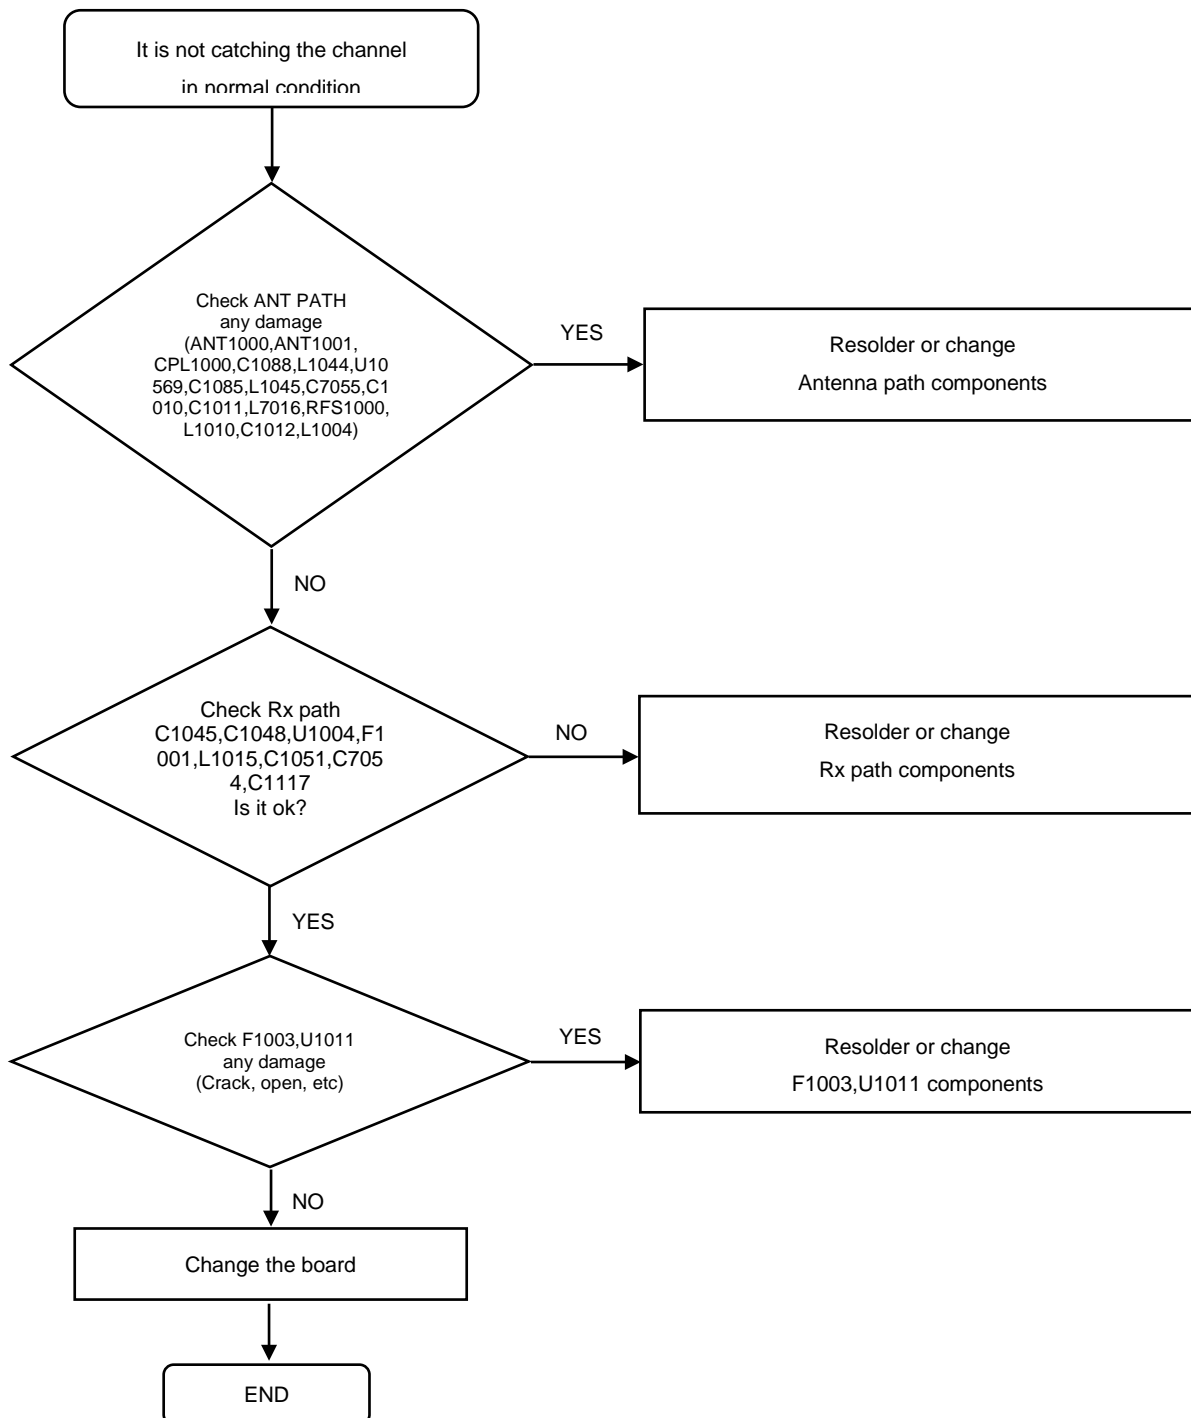


8. Level 3 Repair

8-4-17. GSM 1800, 1900 / WCDMA 1900 / LTE B3 RX

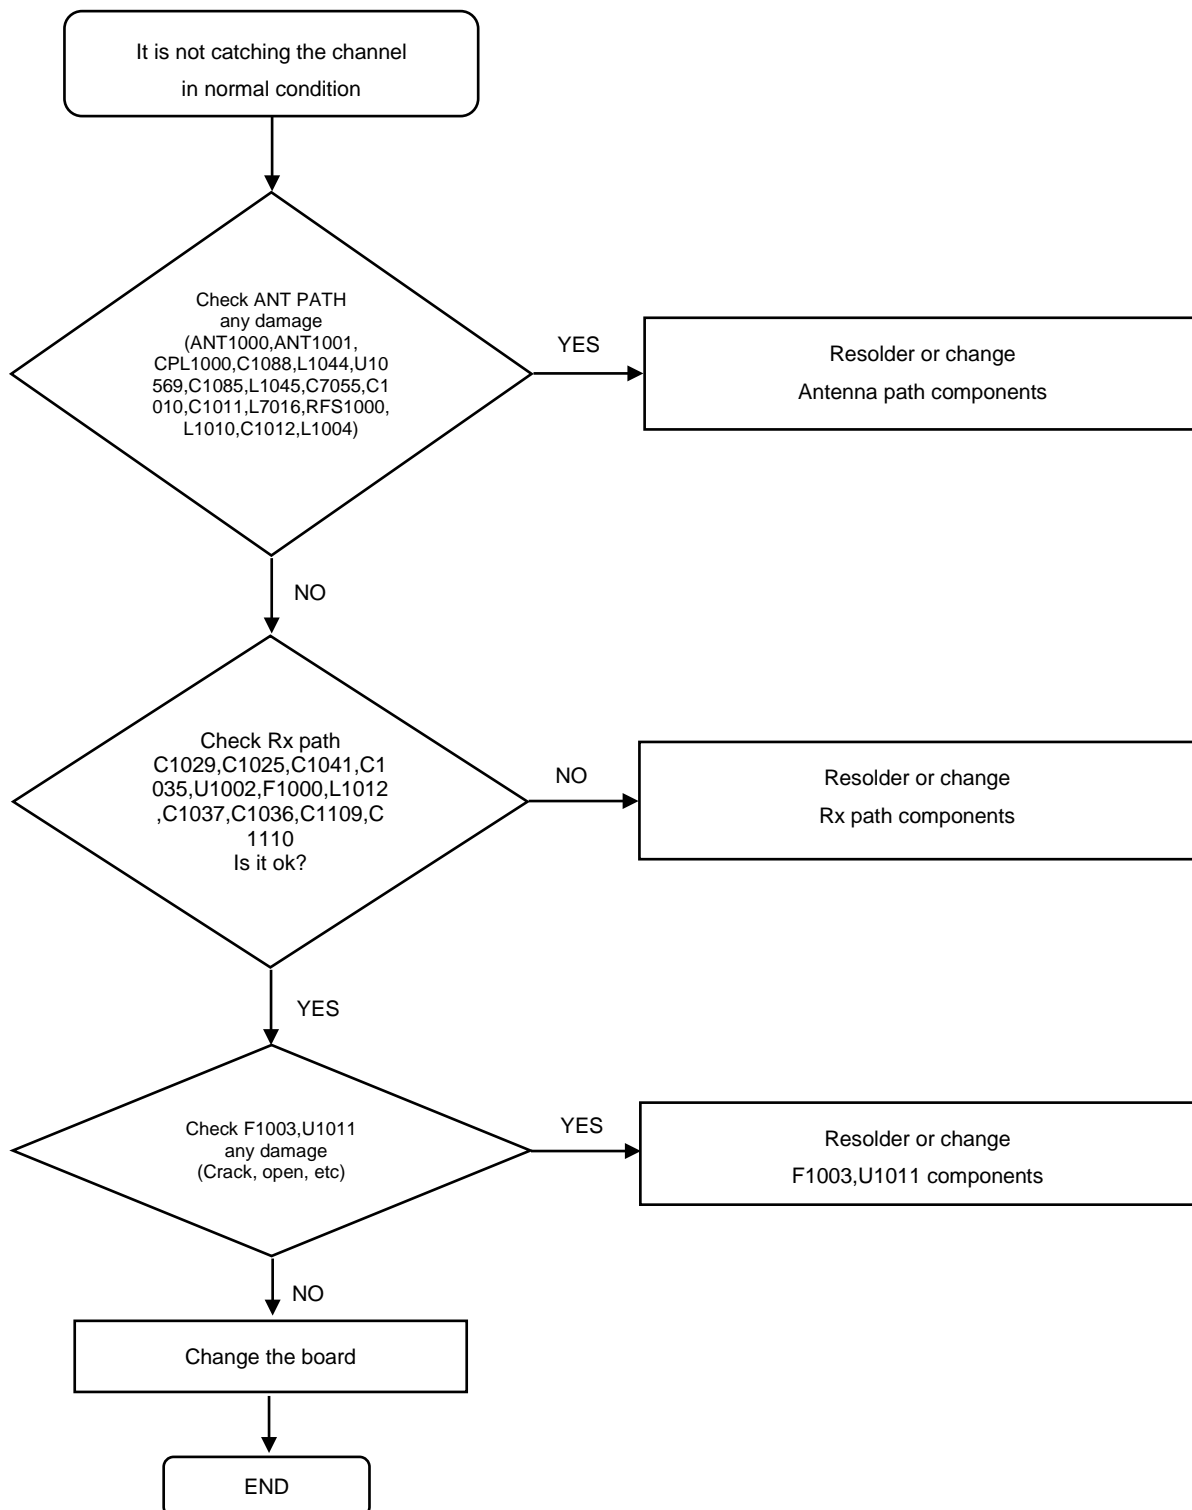


8. Level 3 Repair

8-4-18. WCDMA 2100 / LTE B1 RX

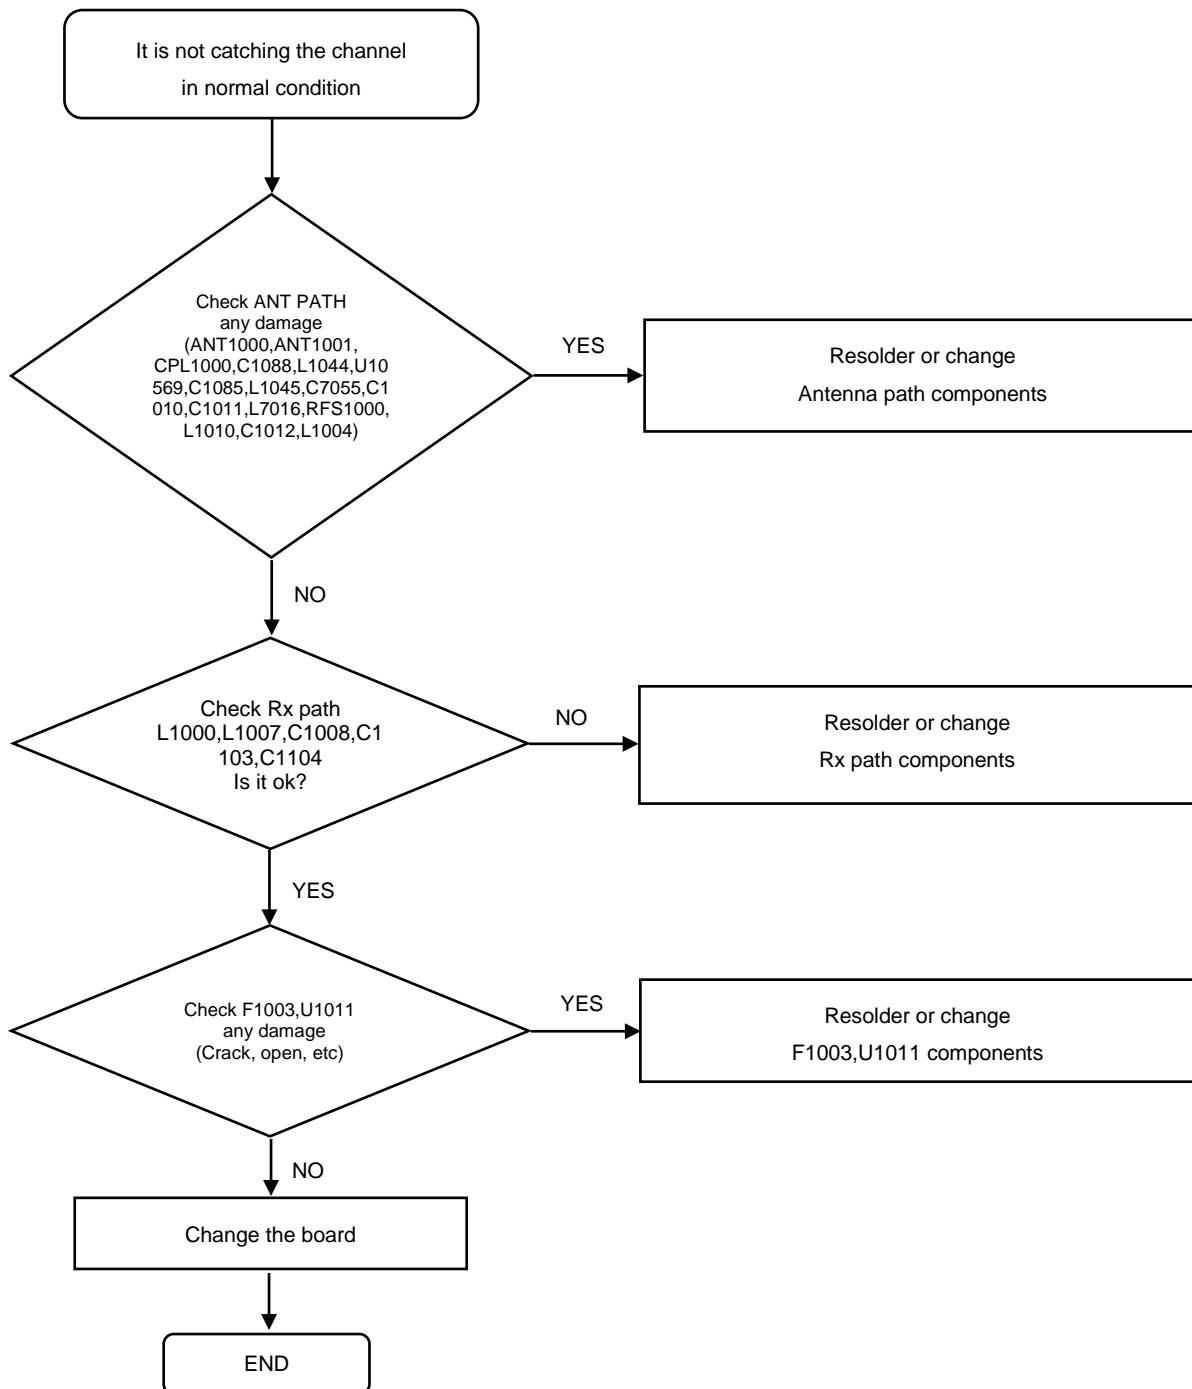


8. Level 3 Repair

8-4-19. LTE B7 RX

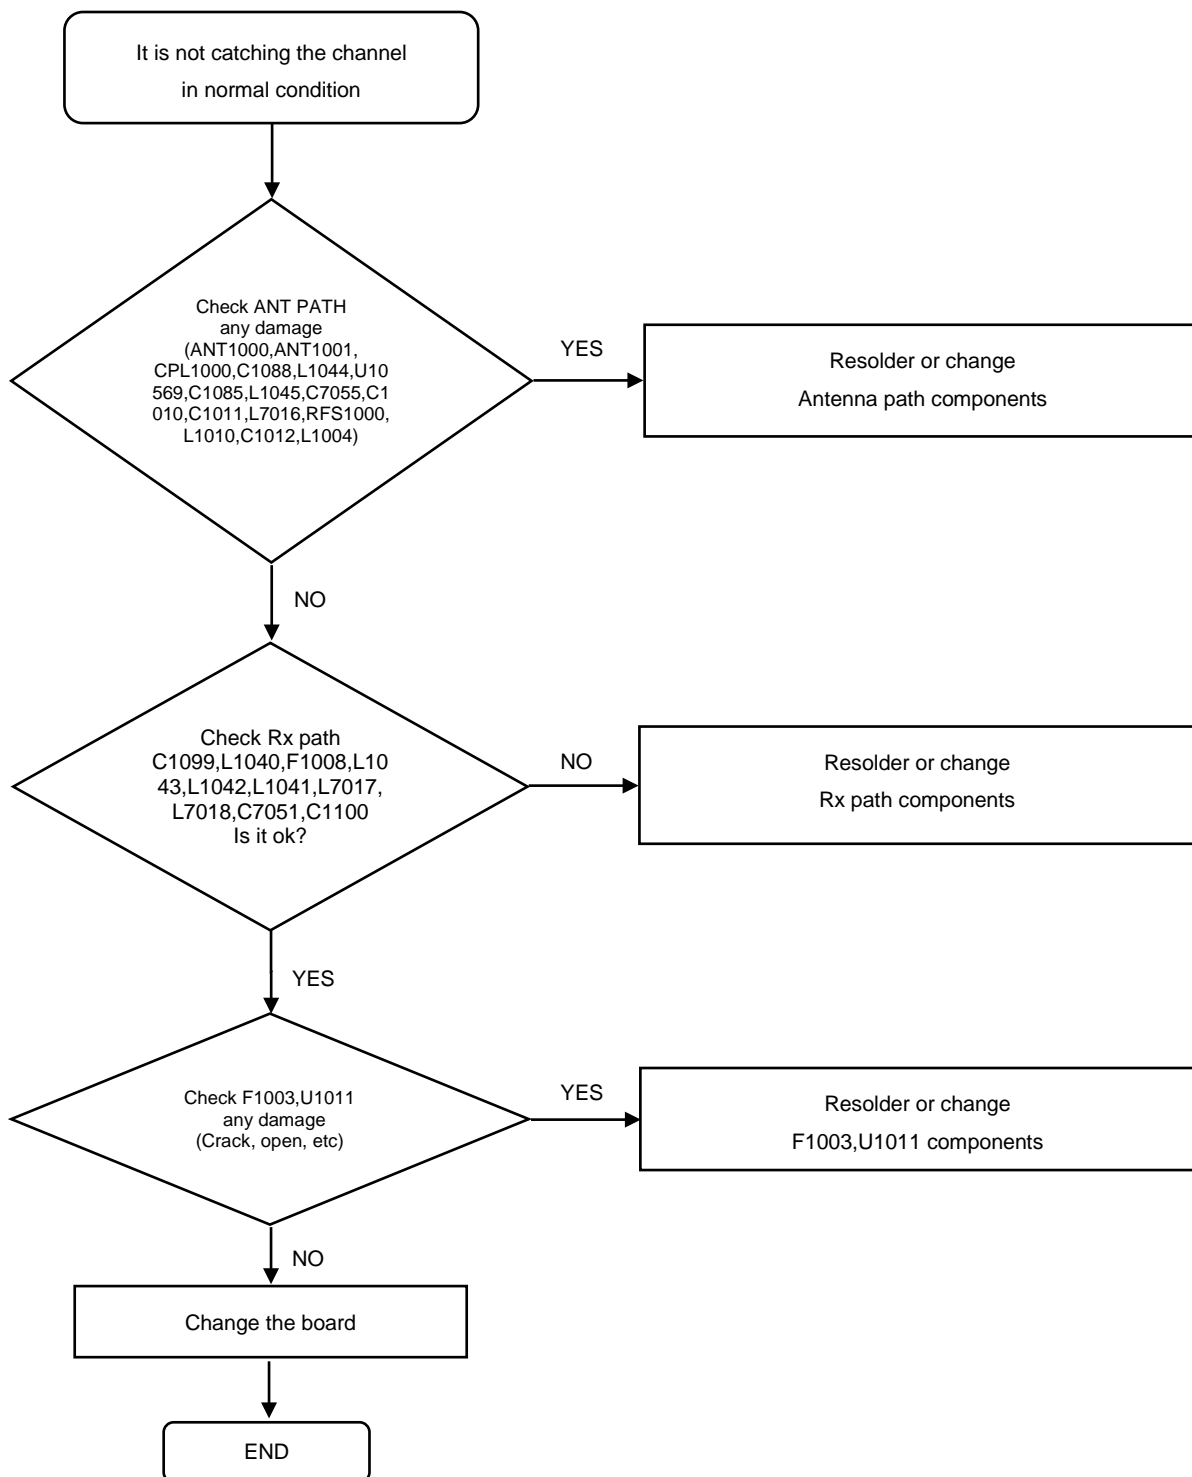


8. Level 3 Repair

8-4-20. LTE B20 RX

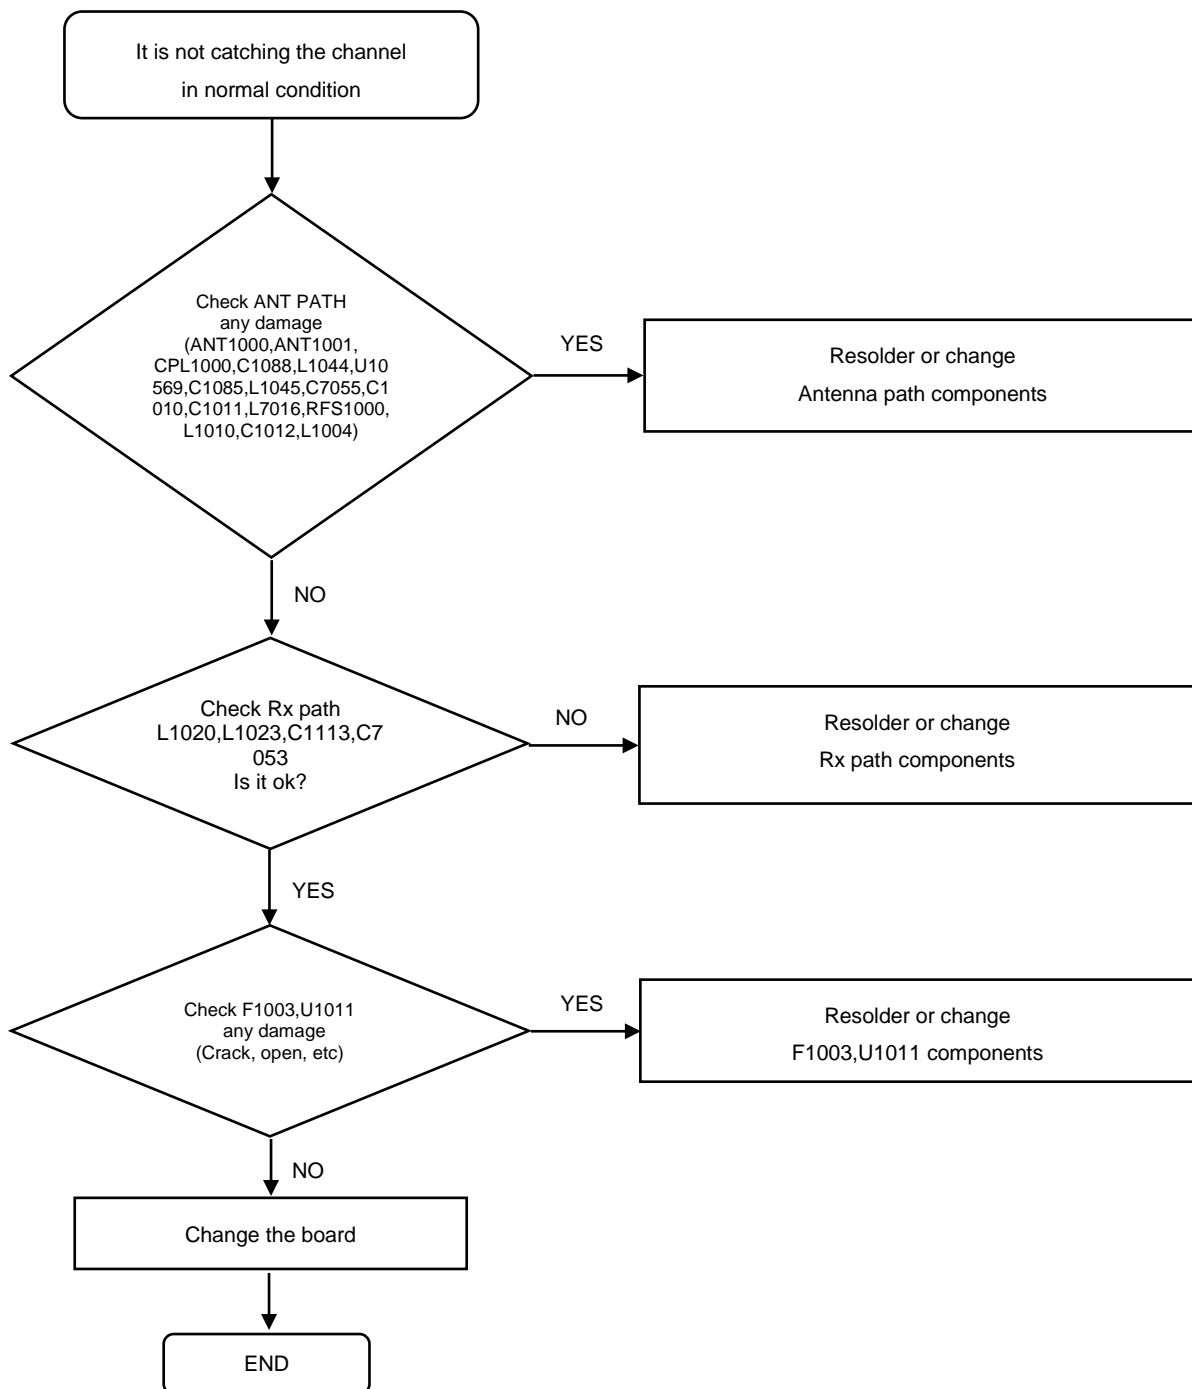


8. Level 3 Repair

8-4-21. LTE B28 RX

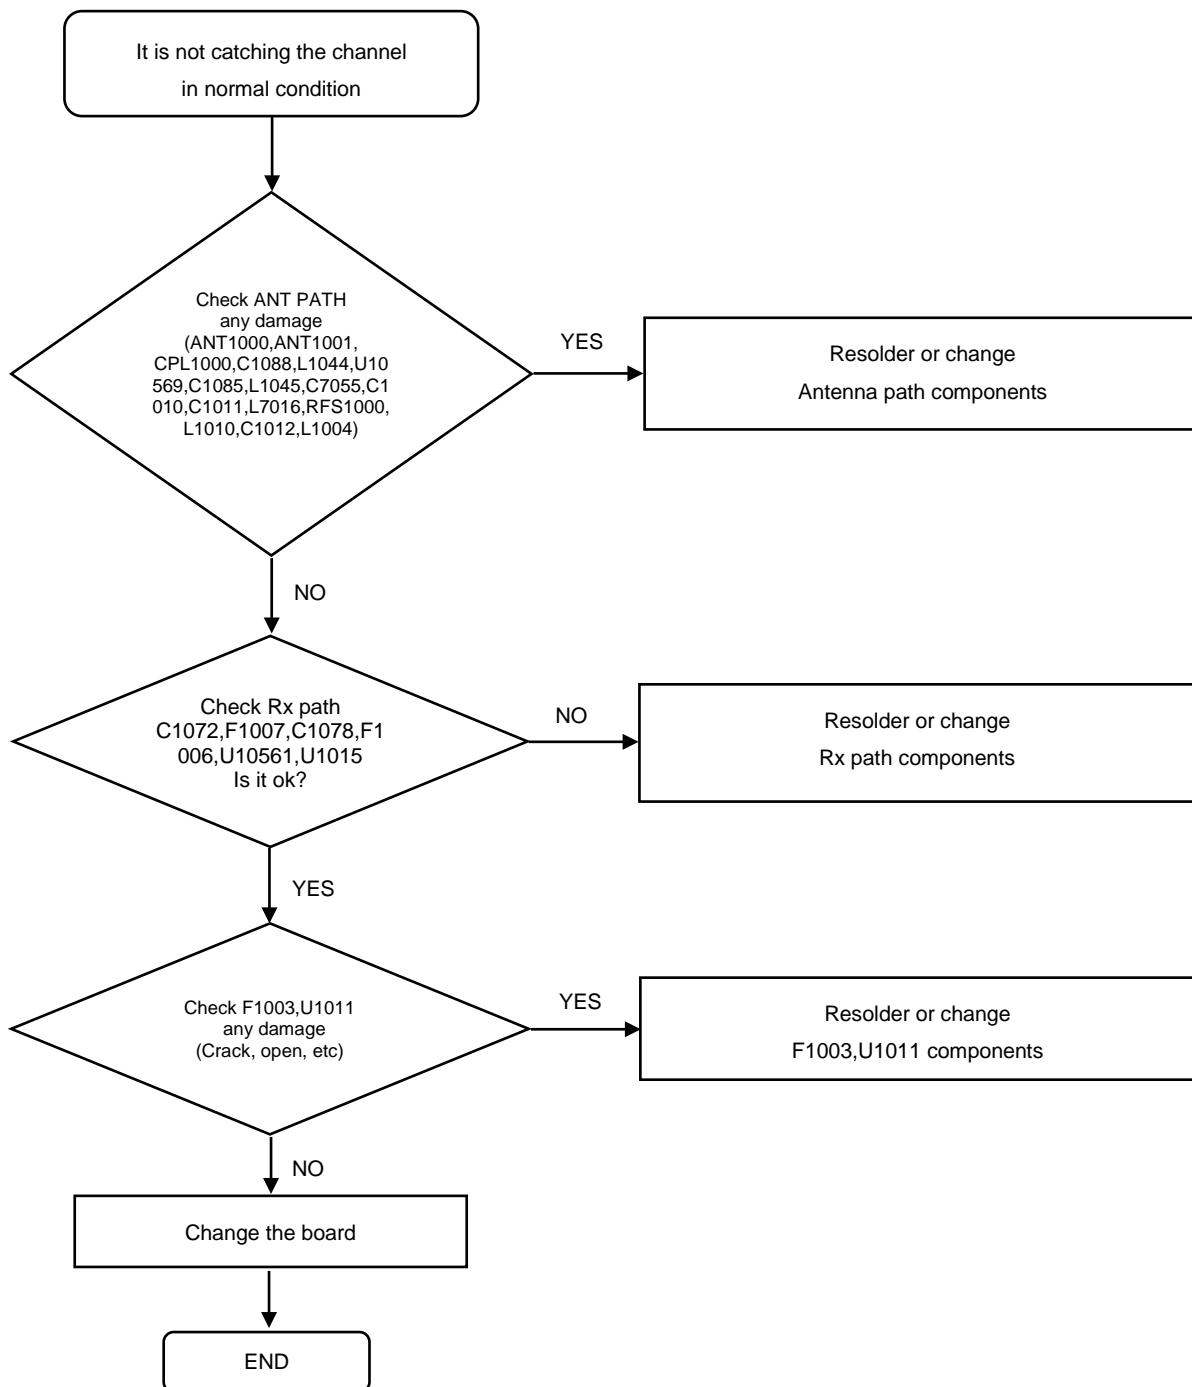


8. Level 3 Repair

8-4-22. LTE B38 RX

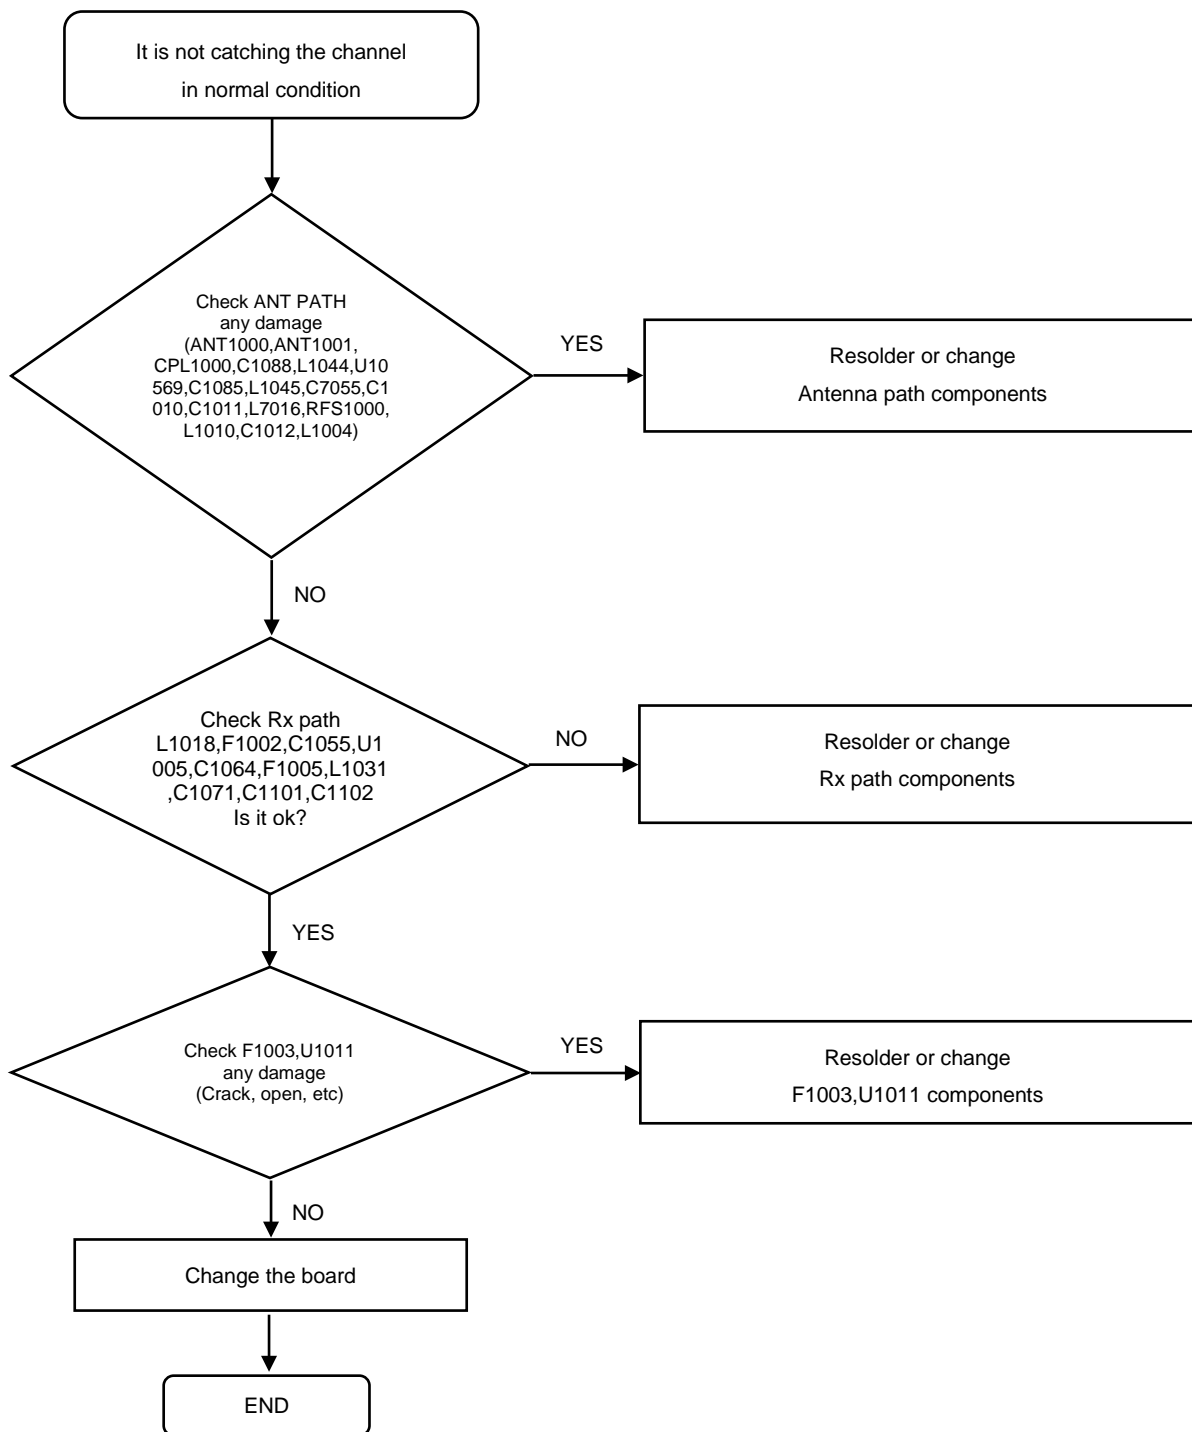


8. Level 3 Repair

8-4-23. LTE B40 RX

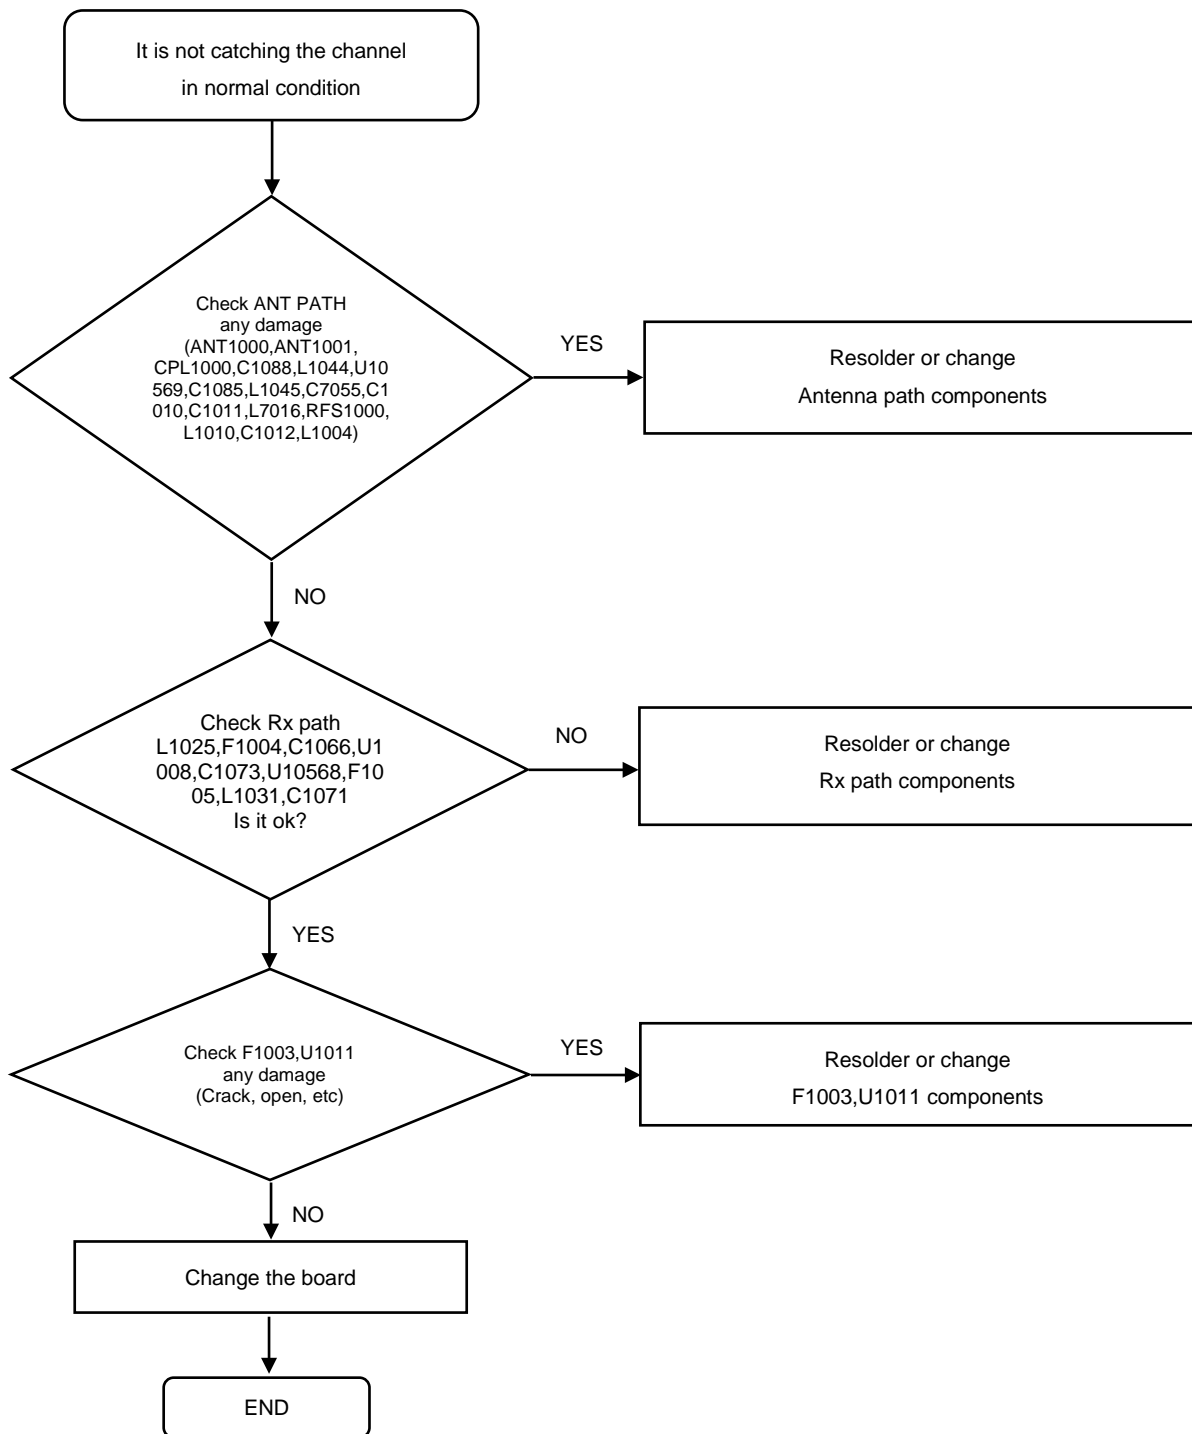


8. Level 3 Repair

8-4-24. GSM850/GSM900 TX

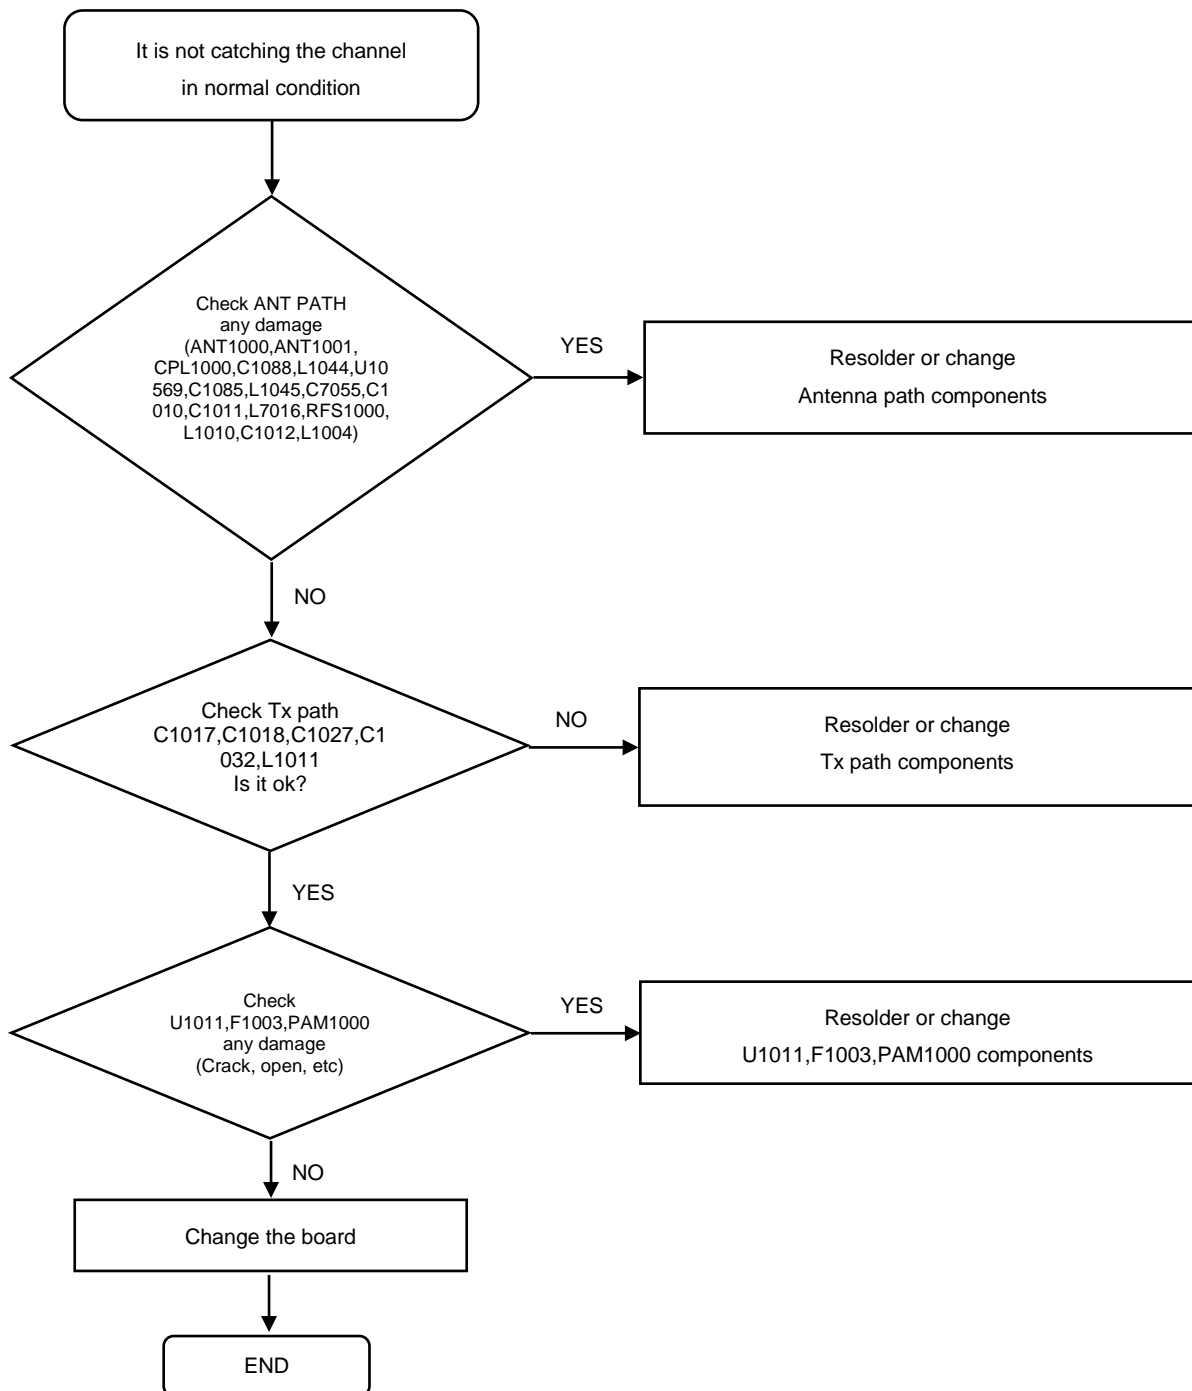


8. Level 3 Repair

8-4-25. GSM1800/GSM1900 TX

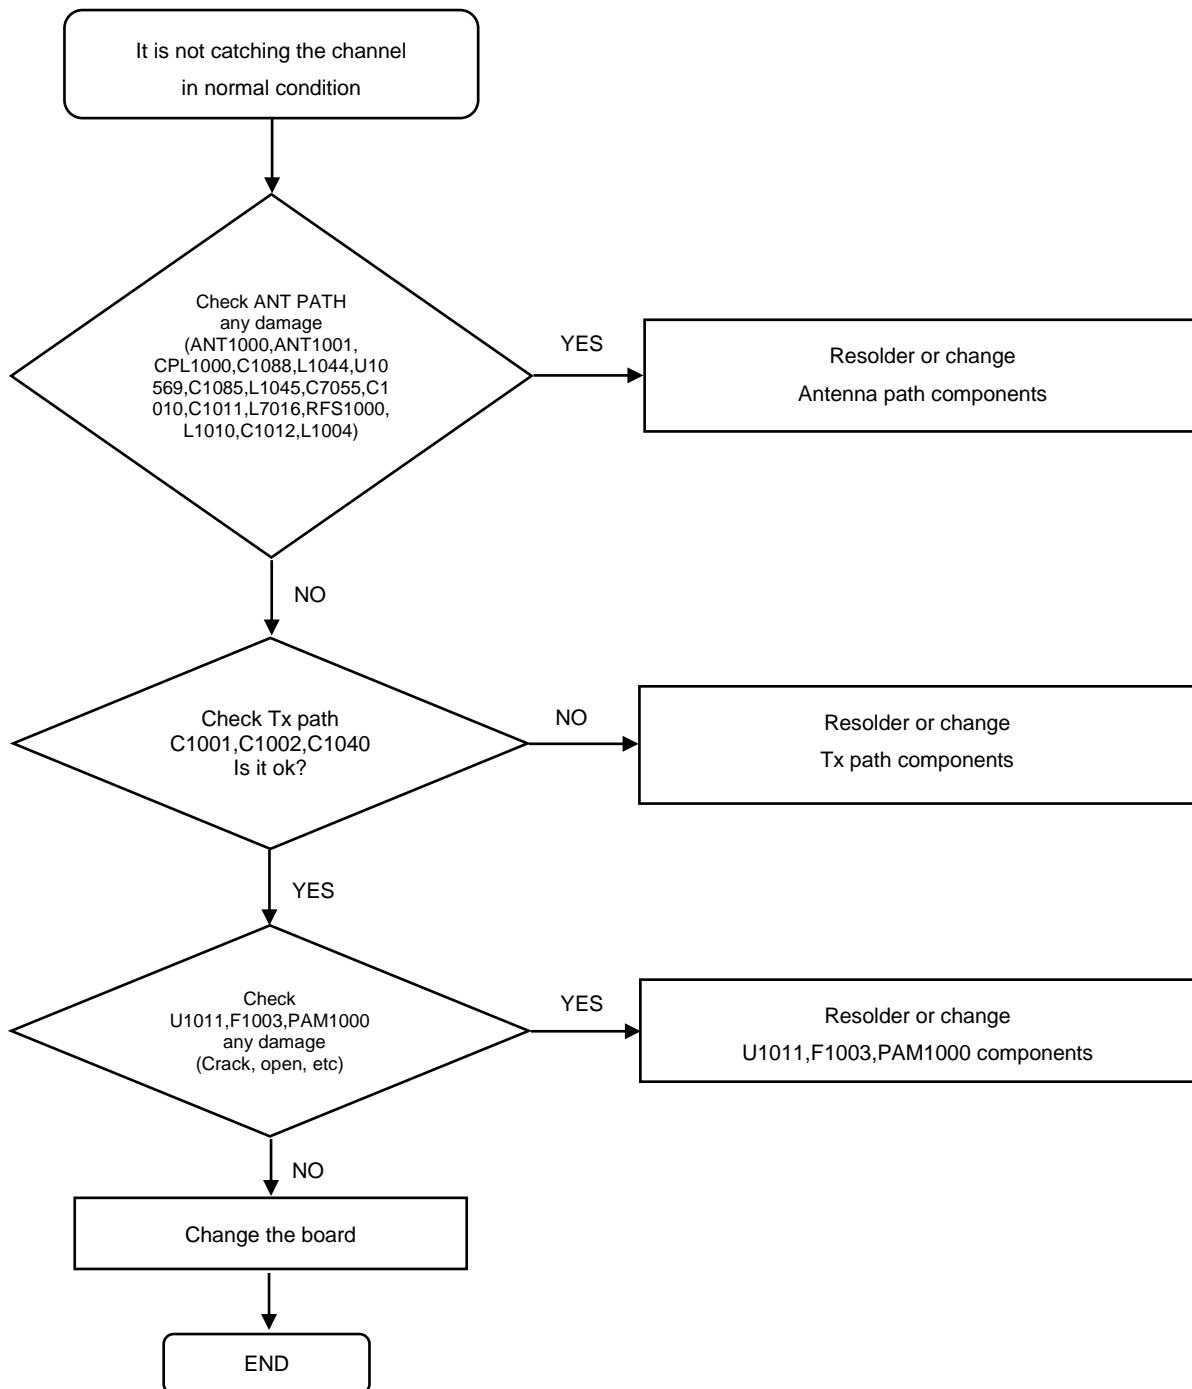


8. Level 3 Repair

8-4-26. WCDMA2100/LTE B1 TX

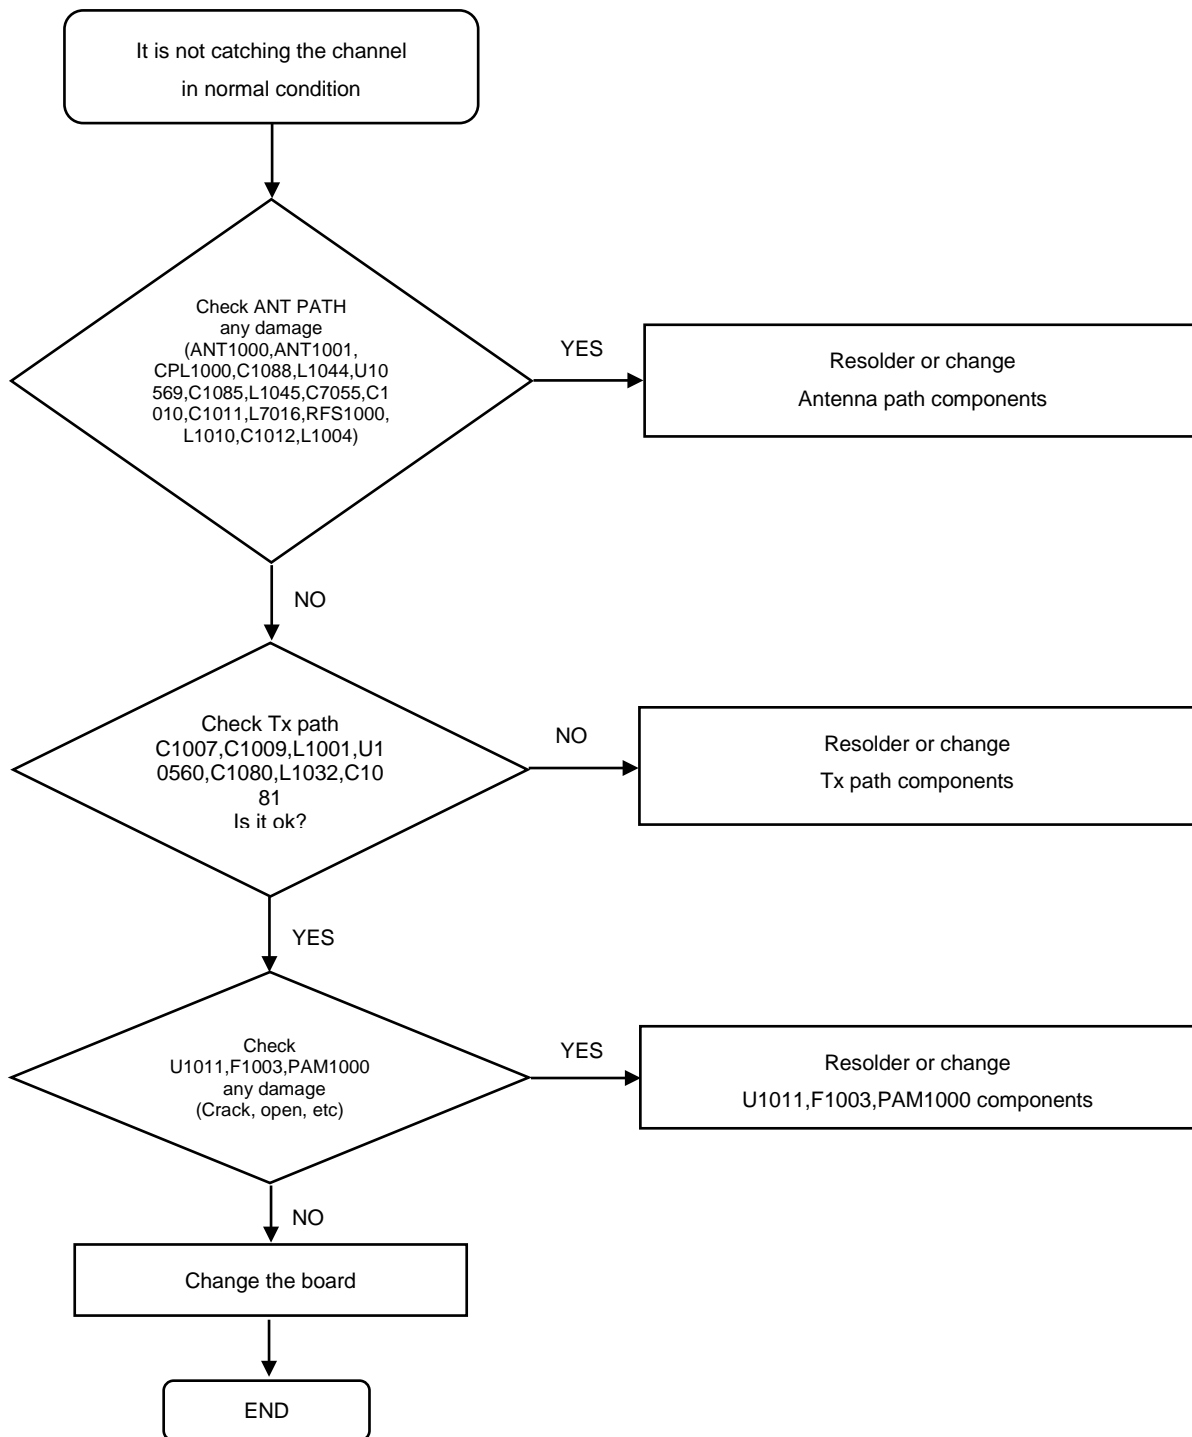


8. Level 3 Repair

8-4-27. WCDMA1900 TX

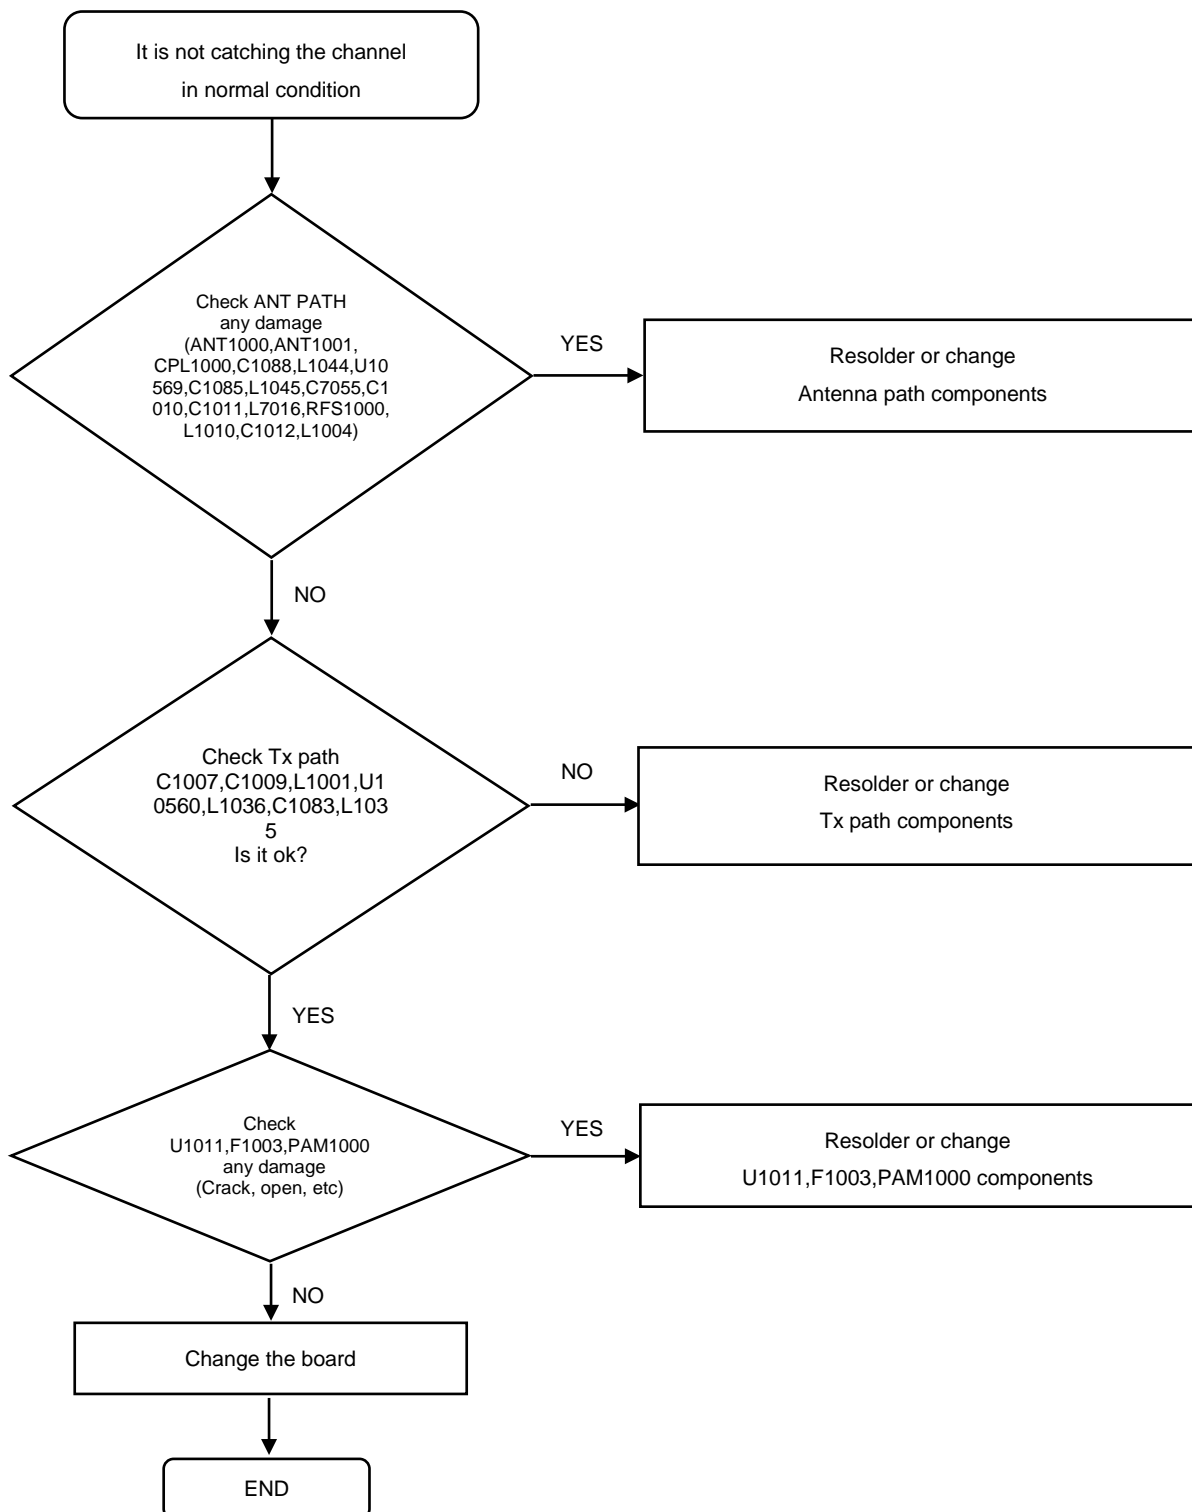


8. Level 3 Repair

8-4-28. LTE B3 TX

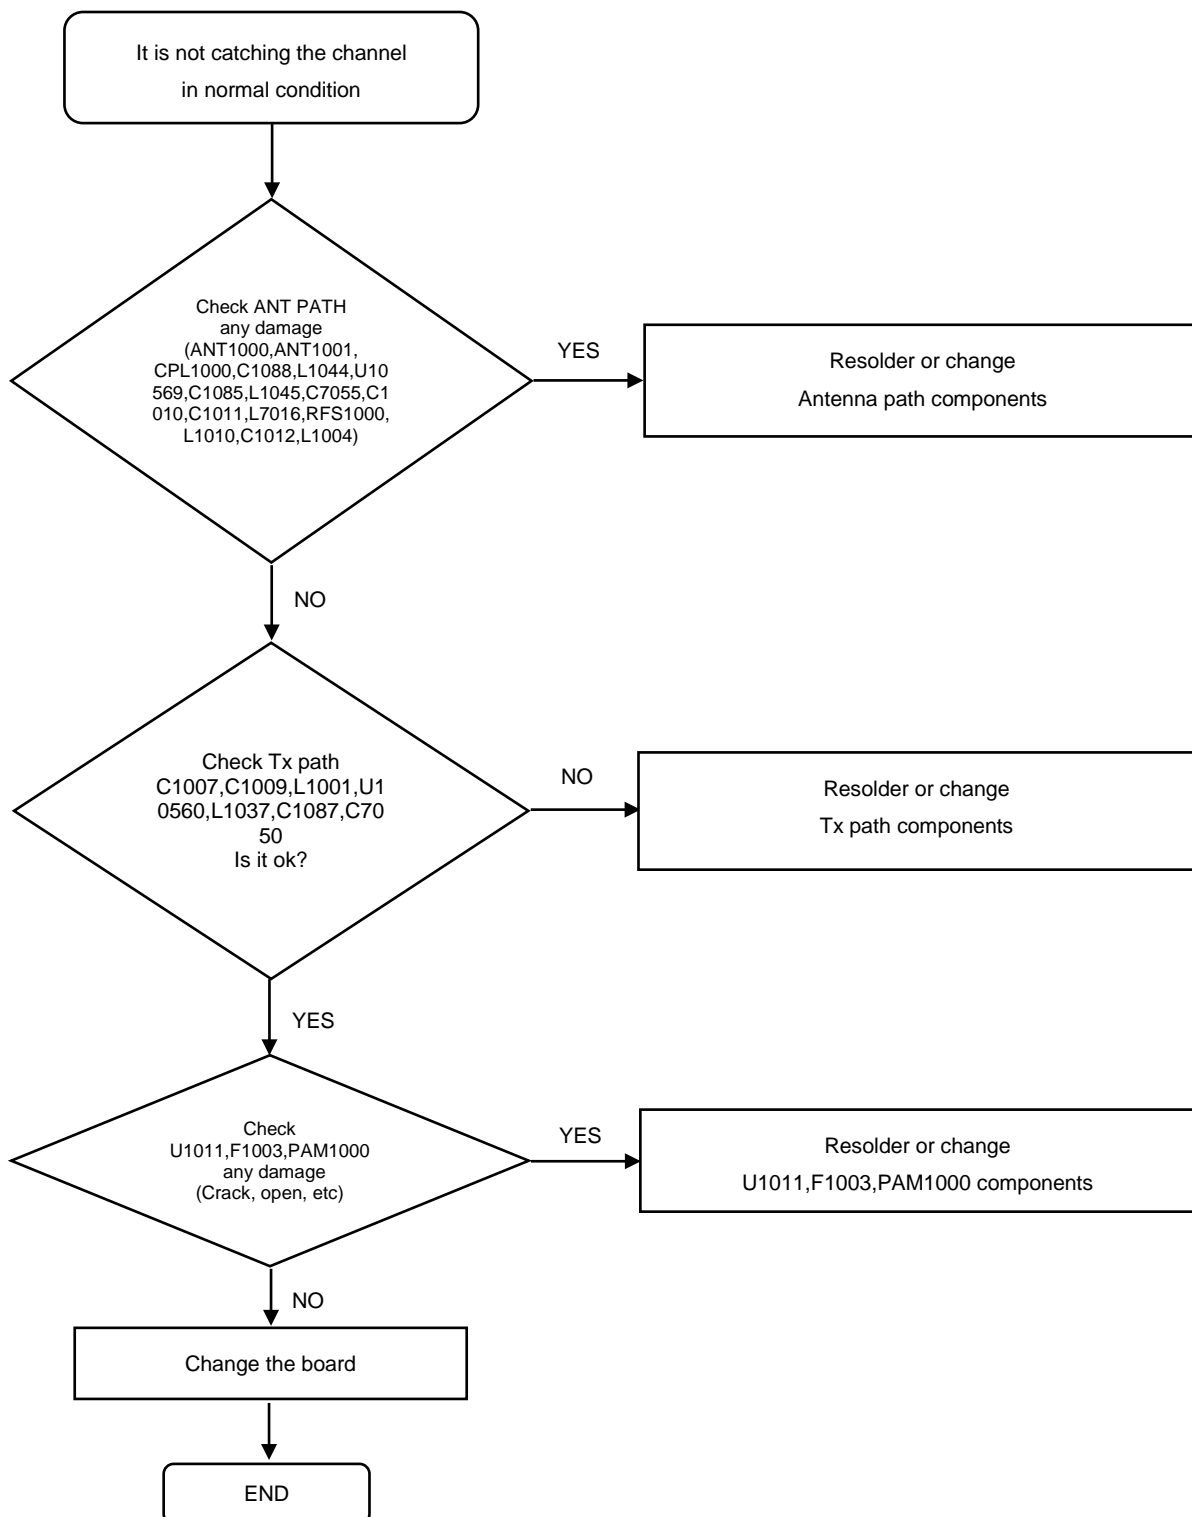


8. Level 3 Repair

8-4-29. WCDMA850/LTE B5 TX

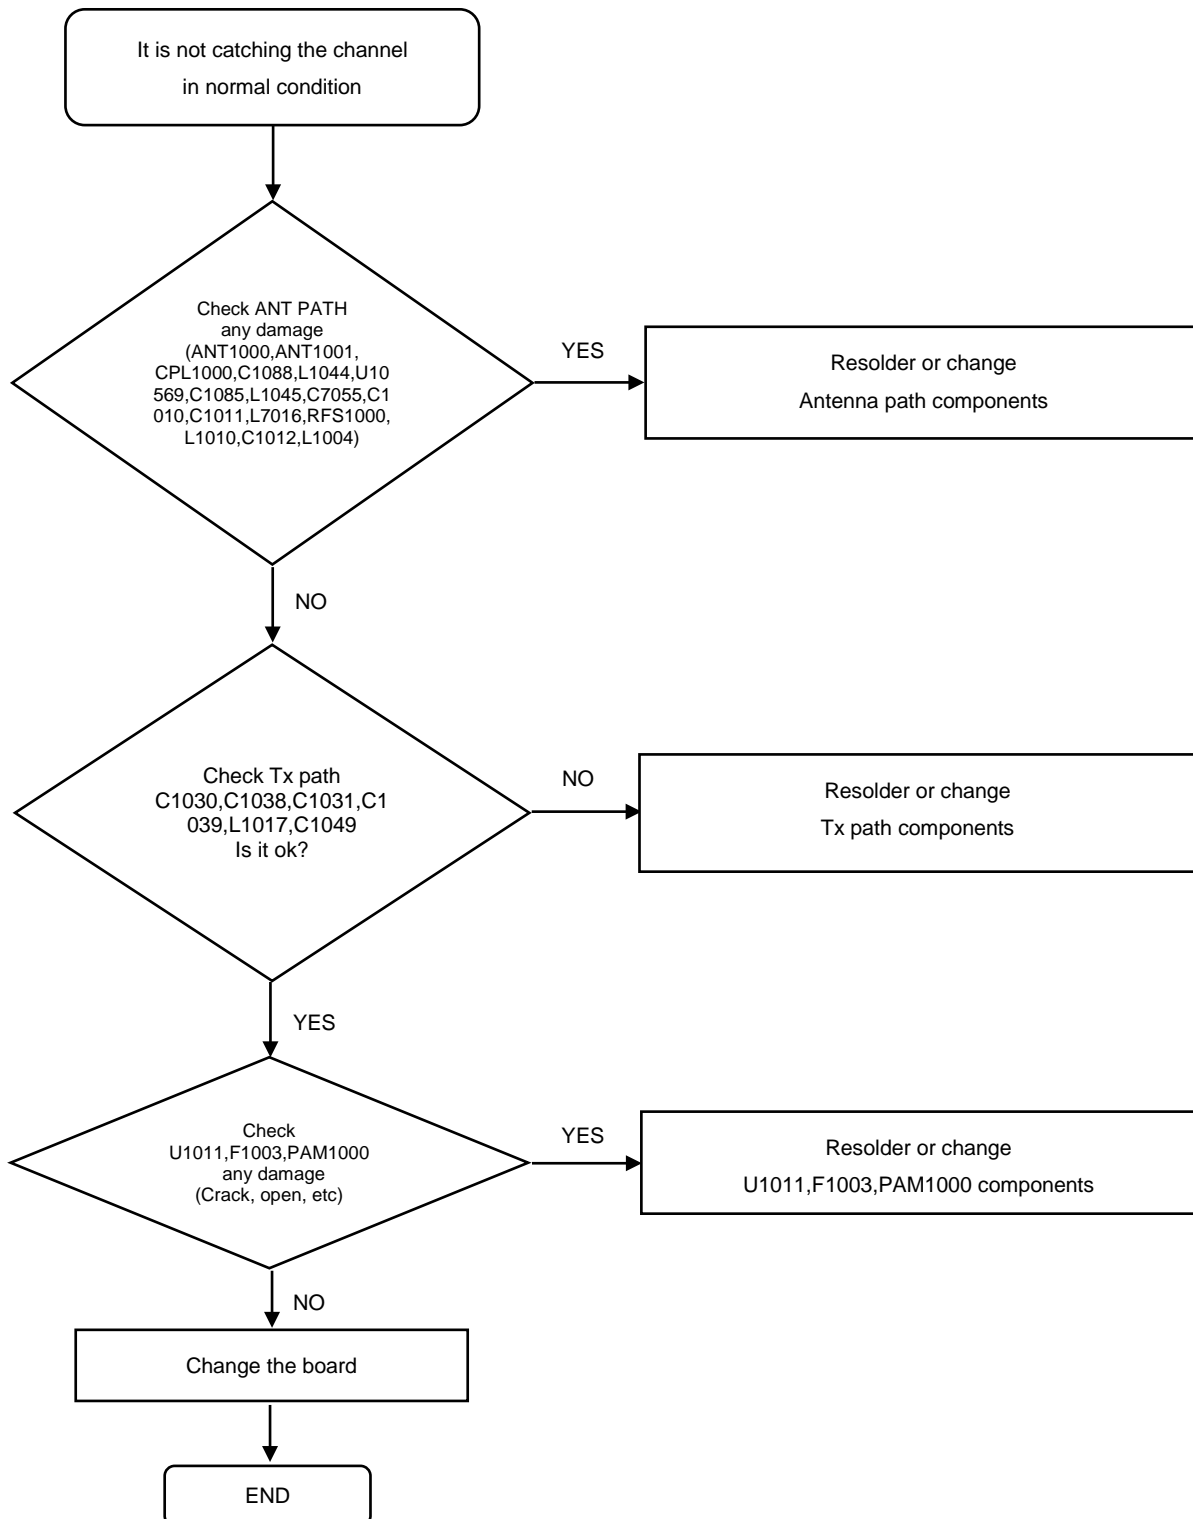


8. Level 3 Repair

8-4-30. WCDMA900/LTE B8 TX

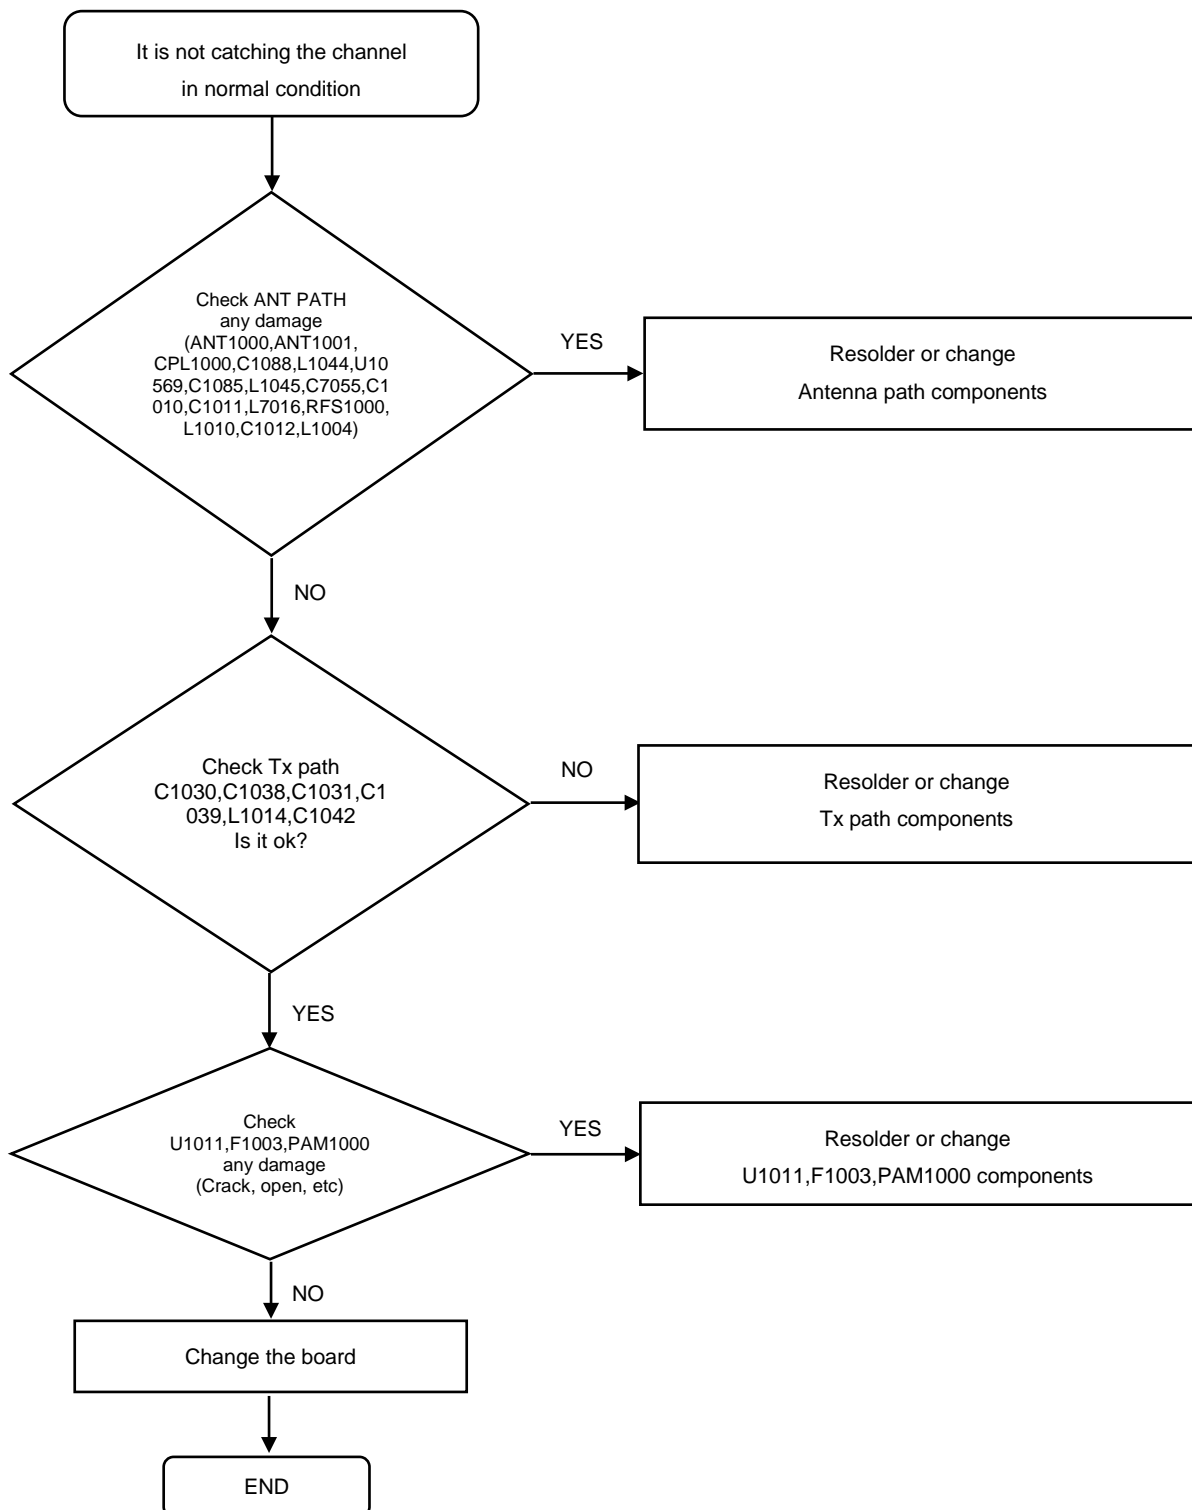


8. Level 3 Repair

8-4-31. LTE B7 TX

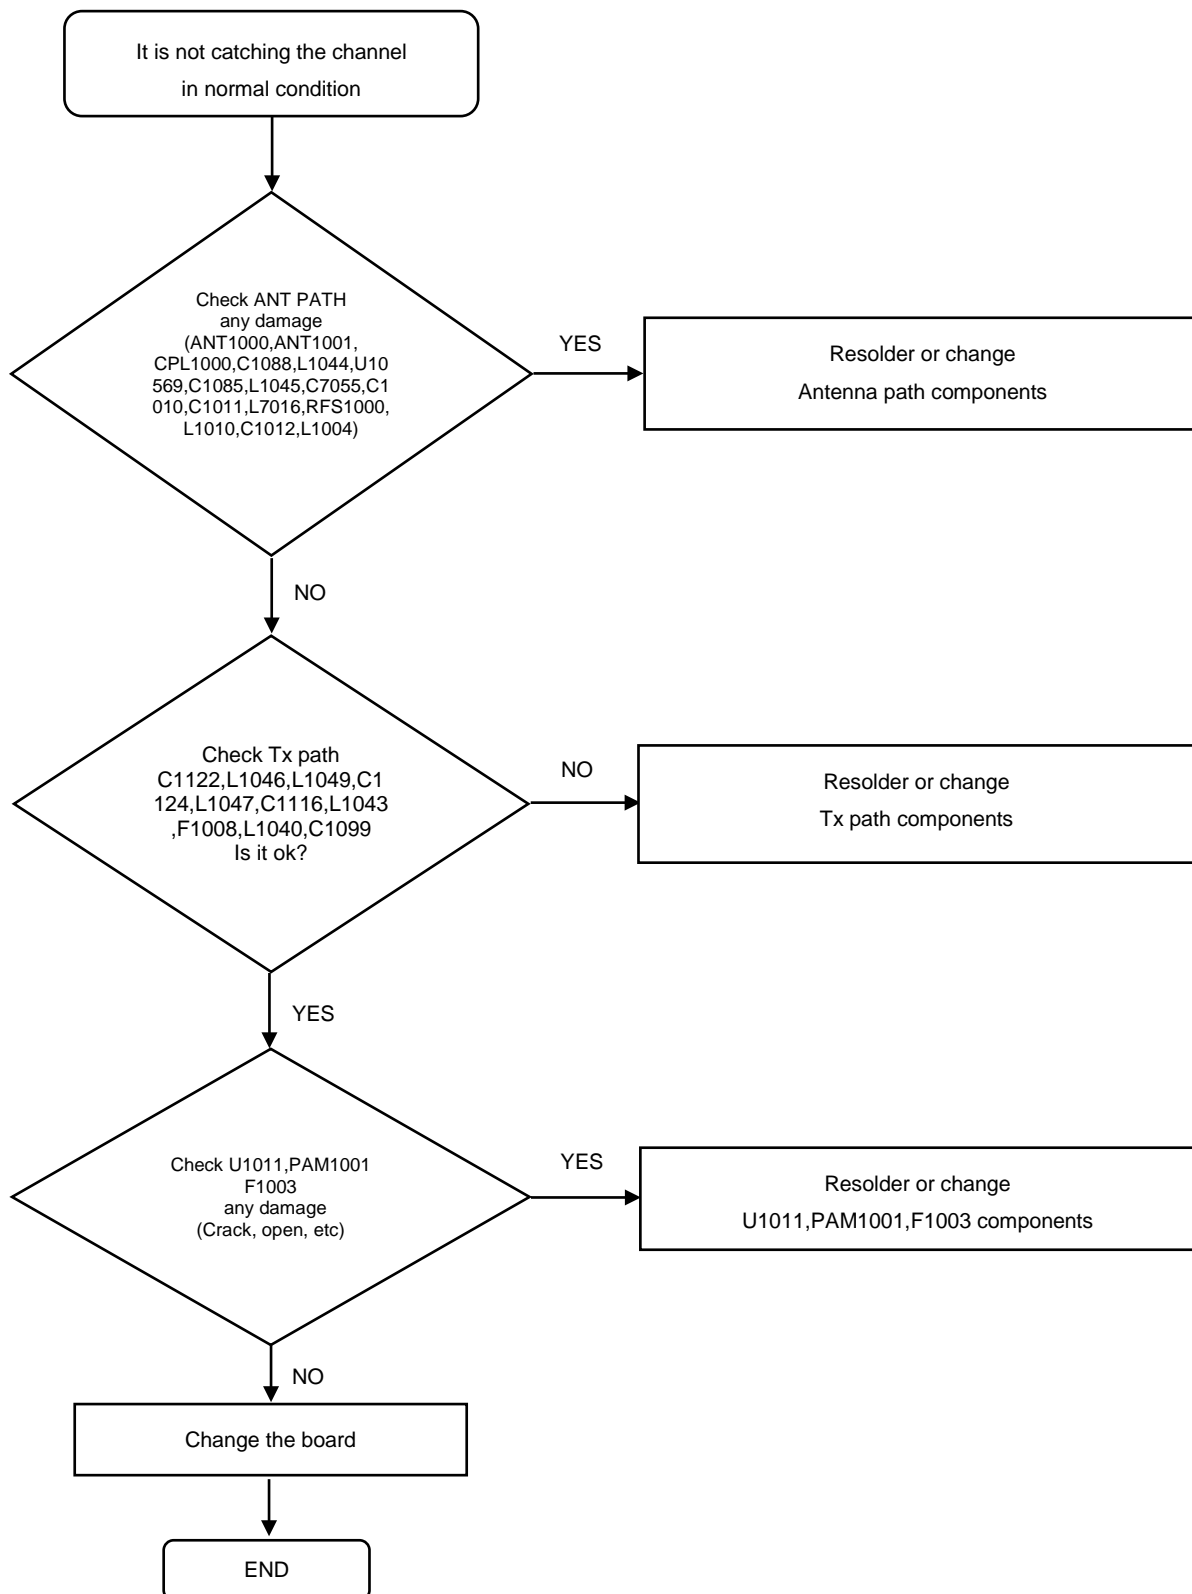


8. Level 3 Repair

8-4-32. LTE B38 TX

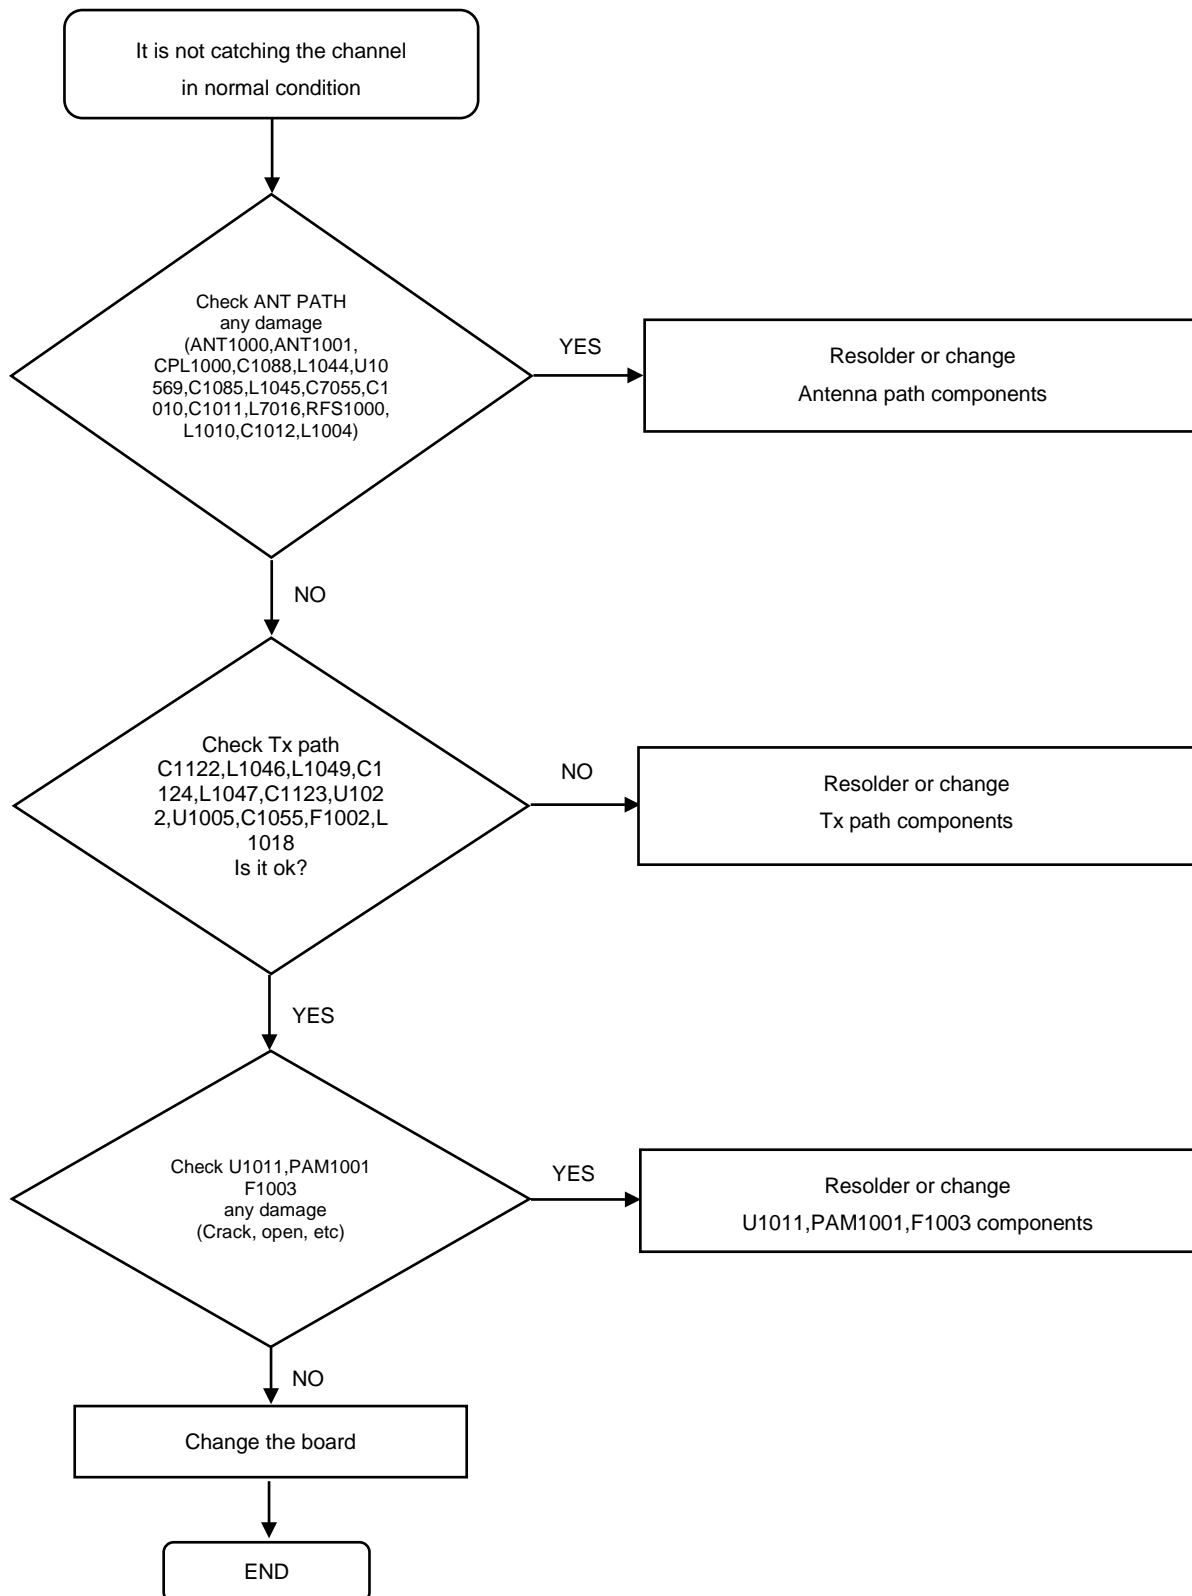


8. Level 3 Repair

8-4-33. LTE B40 TX

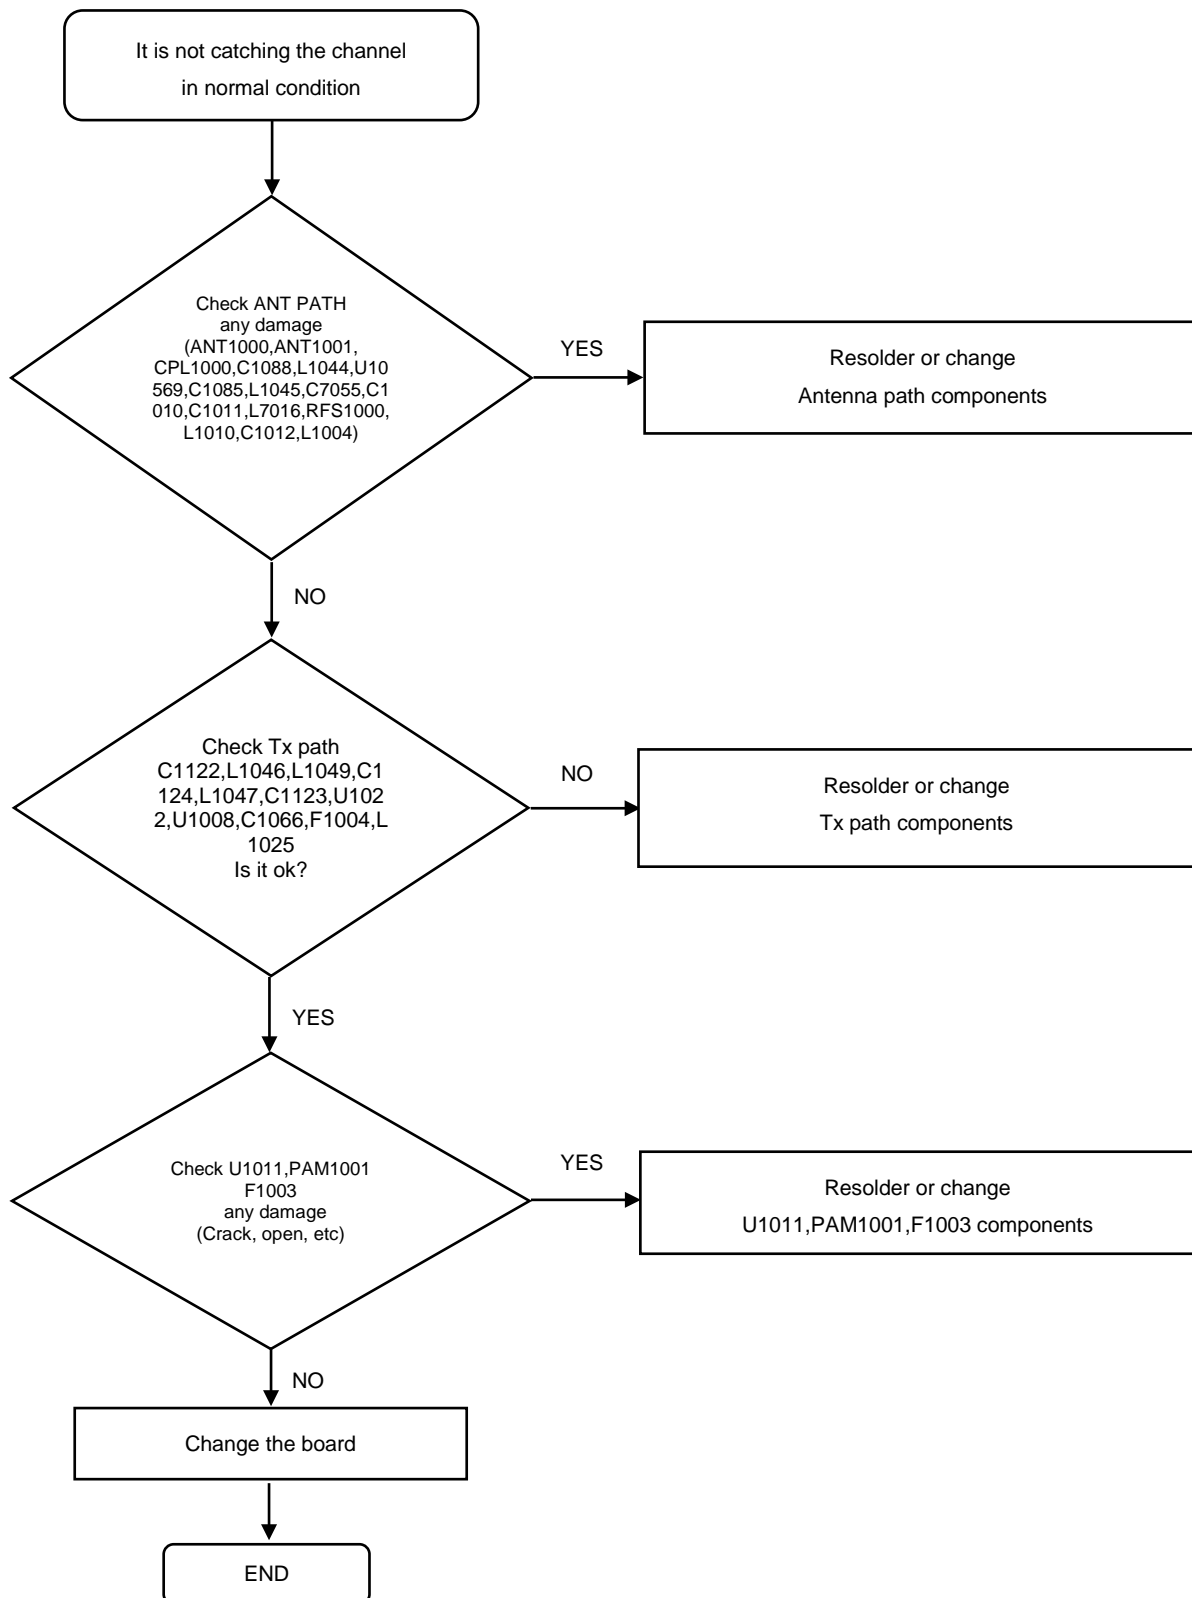


8. Level 3 Repair

8-4-34. LTE B20 TX

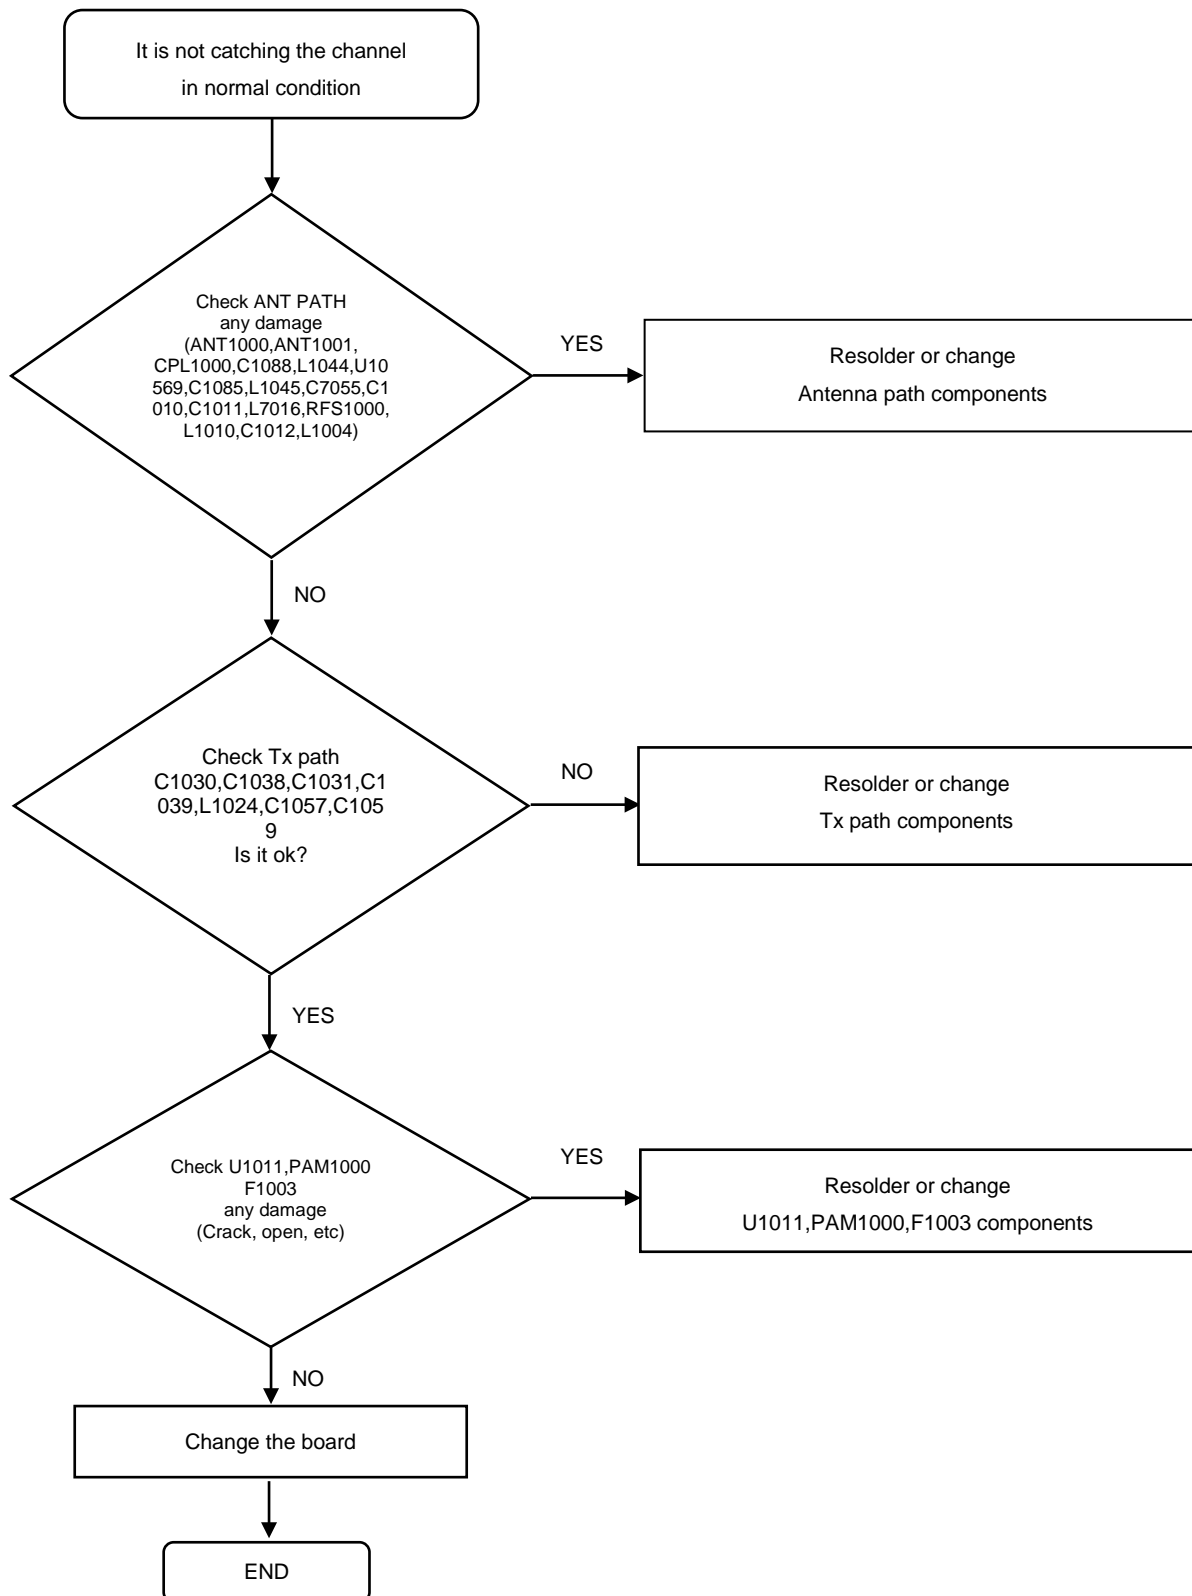


8. Level 3 Repair

8-4-35. LTE B28 TX

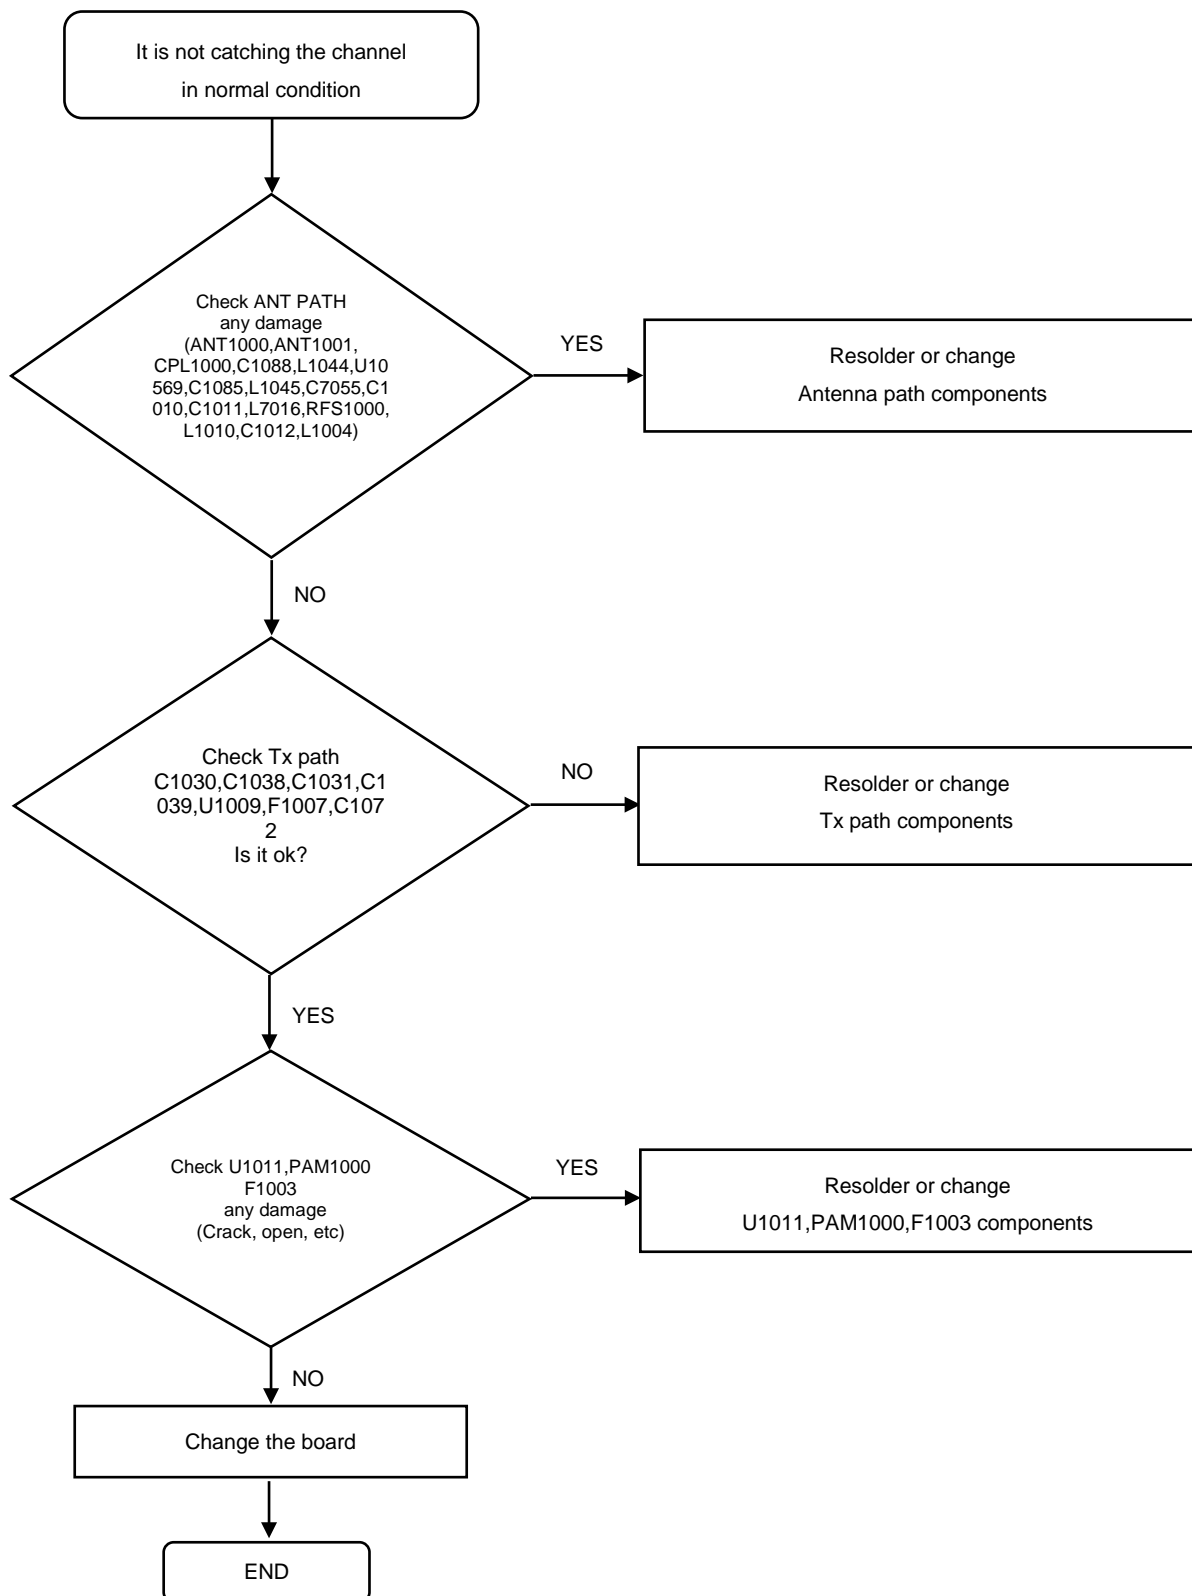


8. Level 3 Repair

8-4-36. BT/WLAN

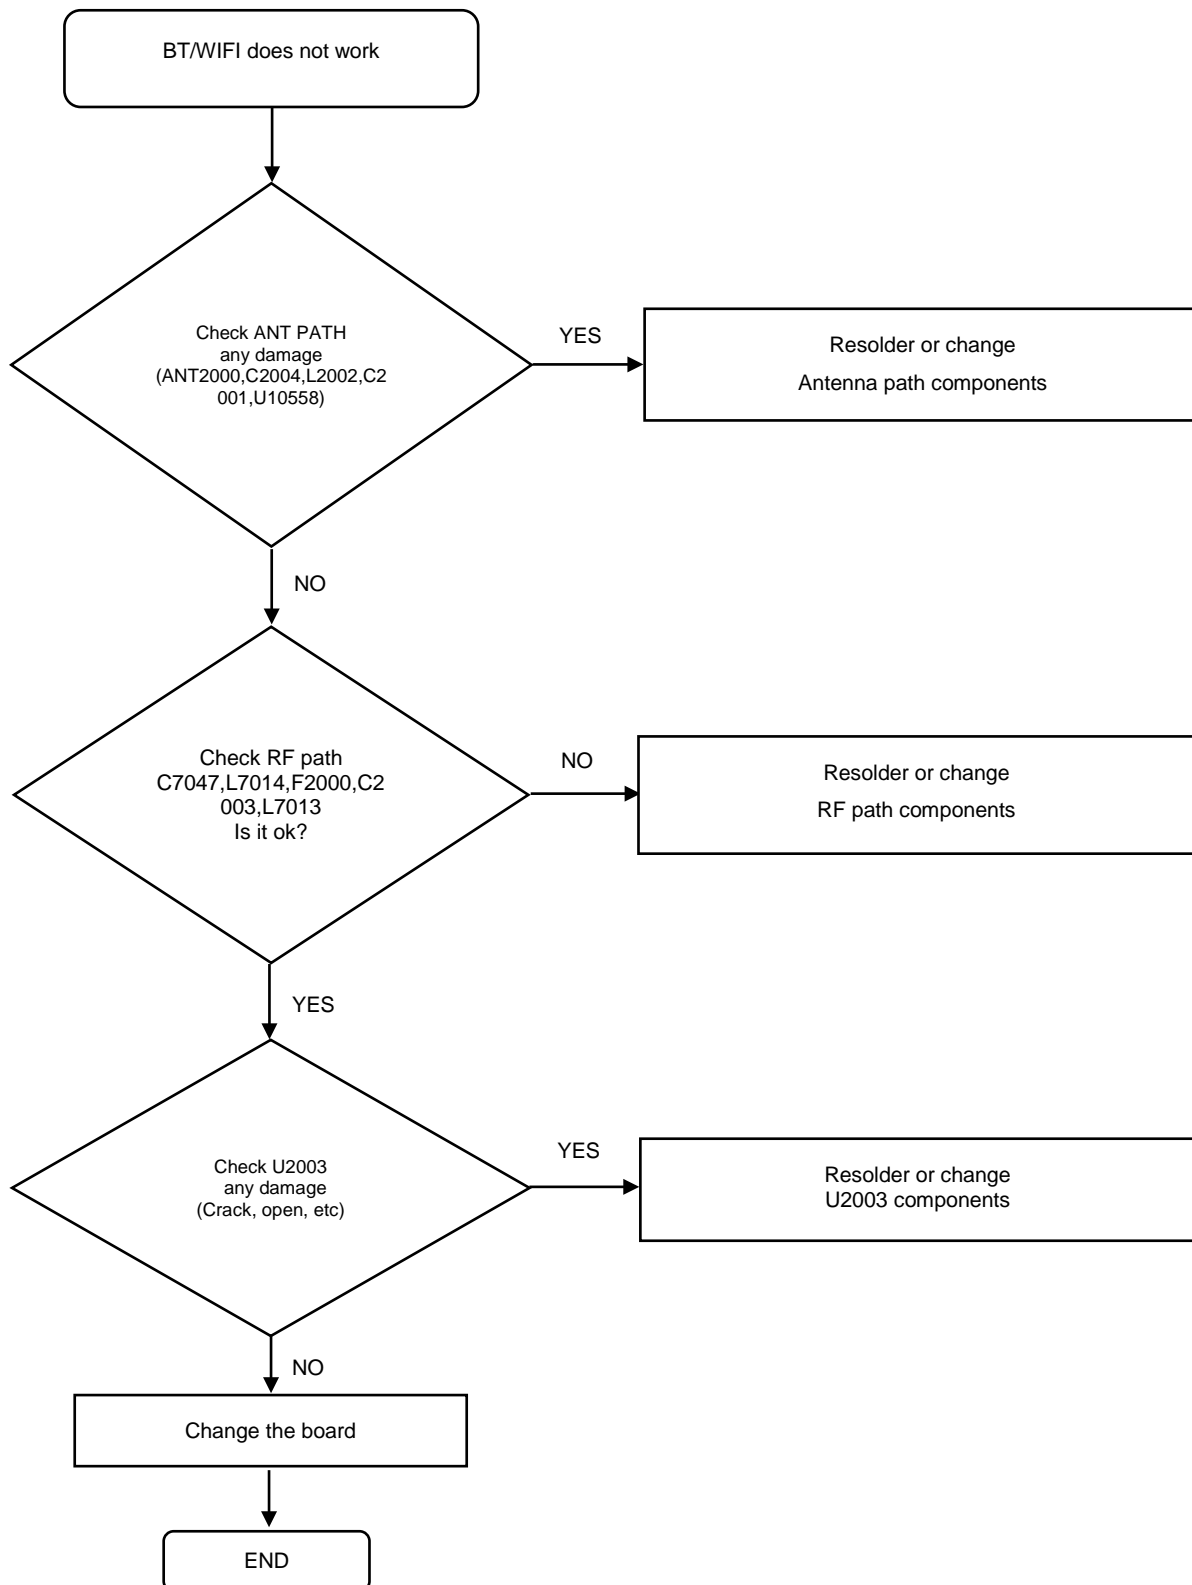

8. Level 3 Repair

8-4-37. GPS

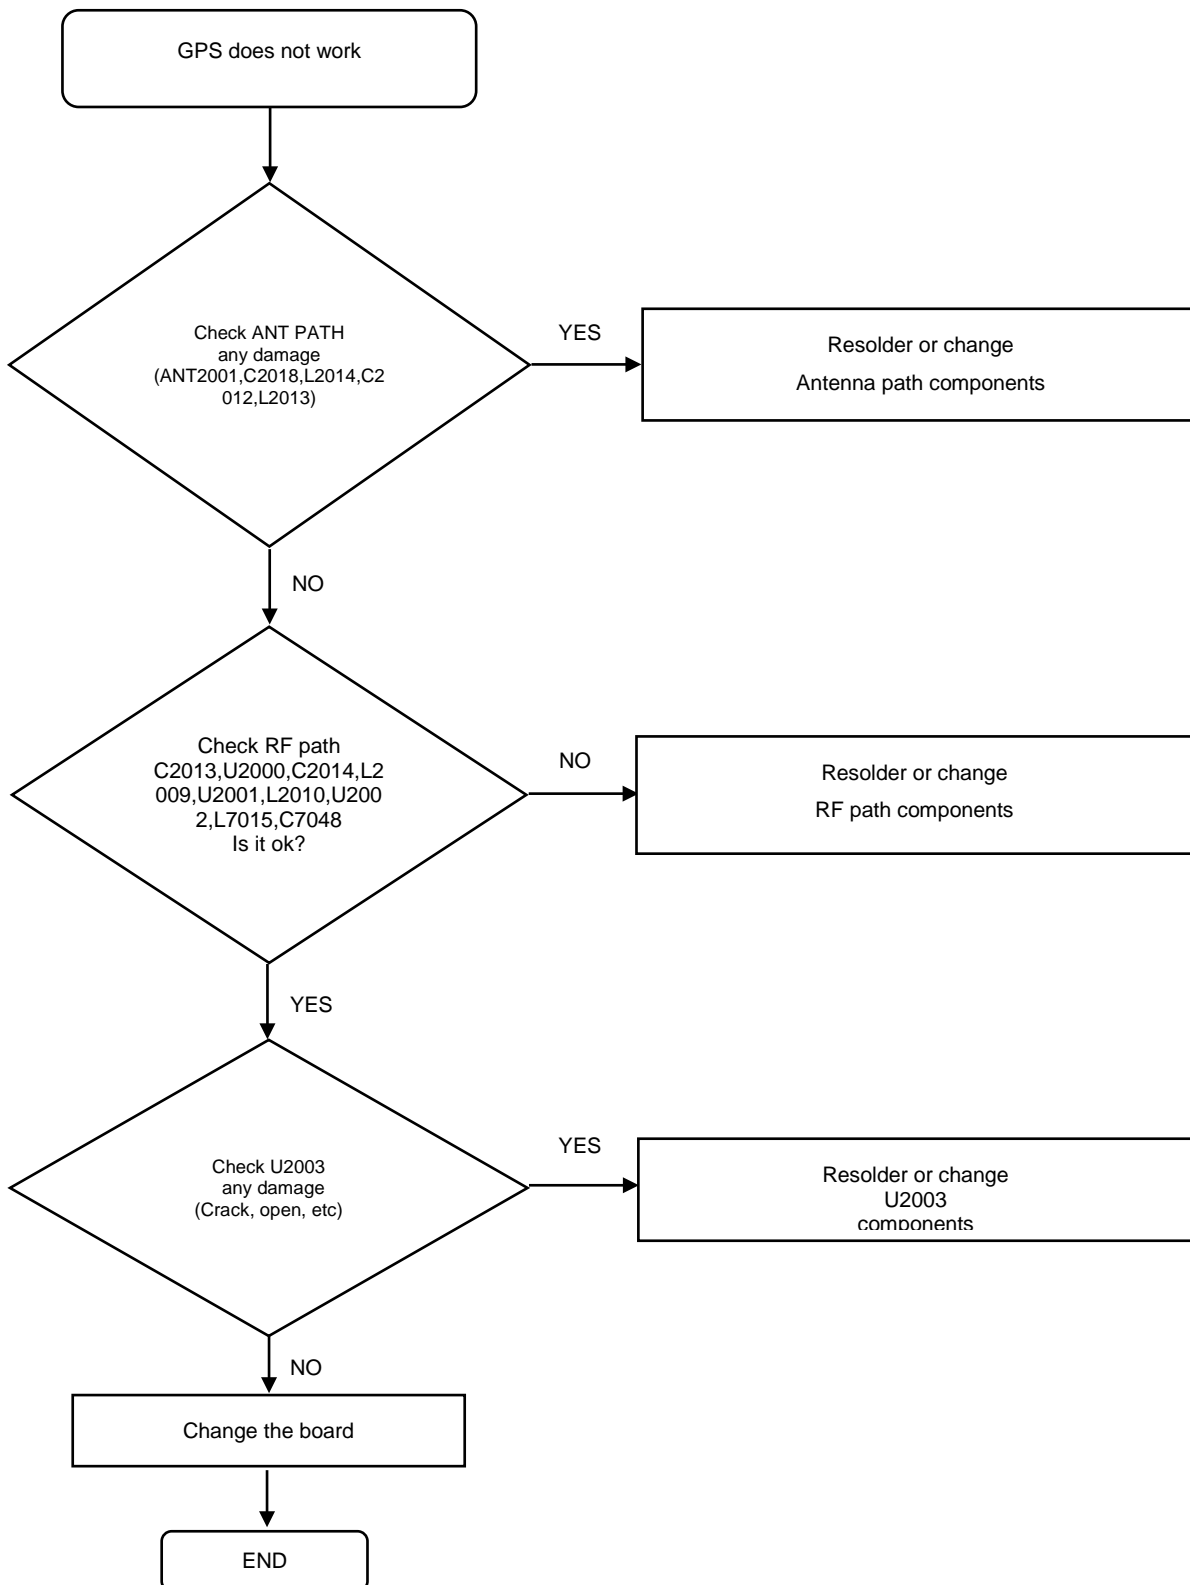

8. Level 3 Repair

8-4-38. FM RADIO

